

Coaxlink

Coaxlink Driver Version 10.1.2



PCI 
EXPRESSTM

Terms of Use

EURESYS s.a. shall retain all property rights, title and interest of the documentation of the hardware and the software, and of the trademarks of EURESYS s.a.

All the names of companies and products mentioned in the documentation may be the trademarks of their respective owners.

The licensing, use, leasing, loaning, translation, reproduction, copying or modification of the hardware or the software, brands or documentation of EURESYS s.a. contained in this book, is not allowed without prior notice.

EURESYS s.a. may modify the product specification or change the information given in this documentation at any time, at its discretion, and without prior notice.

EURESYS s.a. shall not be liable for any loss of or damage to revenues, profits, goodwill, data, information systems or other special, incidental, indirect, consequential or punitive damages of any kind arising in connection with the use of the hardware or the software of EURESYS s.a. or resulting of omissions or errors in this documentation.

This documentation is provided with Coaxlink 10.1.2 (doc build 2039).
© 2018 EURESYS s.a.

Contents

1. About This Document	8
1.1. Document Scope	8
1.2. Document Revision History	9
1.3. Document Changes	10
2. Coaxlink Driver 10.1 Specification	11
2.1. Products & Accessories	12
2.2. Firmware Variants per Product	13
2.3. CoaXPress Standard Compliance	16
2.4. Supported Operating Systems	17
2.5. Development Tools	19
2.6. Memento	19
2.7. Software Tools	19
3. Before Use	20
3.1. Product Selection Guide	21
3.2. Firmware Version Requirements	23
3.3. Firmware Management	24
Firmware Manager Tool	25
Firmware Upgrade	26
Firmware Variant Installation	27
Special Firmware Procedures	28
Firmware Recovery Switch	30
4. Coaxlink Architecture	32
4.1. Main Elements	33
4.2. Block Diagrams	35
5. CoaXPress Host Interface	39
5.1. Host Interface Specification	40
5.2. Camera to Host Connections Maps	43
5.3. Sub-link Acquisition	47
5.4. Multi-Stream Acquisition	48

5.5. Link Configuration	49
5.6. CoaXPress 1.1.1 Discovery	50
5.7. Power Over CoaXPress	51
5.8. CoaXPress I/O Channel	54
5.9. CoaXPress Host To Device Trigger	55
5.10. CoaXPress Lamps	61
5.11. Connection Test	62
5.12. CoaXPress Link Validation Tool	63
6. CoaXPress Data Forwarding	69
6.1. Data Forwarding Principles	70
6.2. Data Forwarding Connection Schemes	72
6.3. Line-scan Triggers Synchronization	74
6.4. Configuration Script Example	75
7. Image Data Flow	76
7.1. FIFO Buffer	77
7.2. Acquisition Gate	78
7.3. Pixel Data Processing	79
7.4. Pixel Data Processing Configurations	81
8. Lookup Table Processing	84
8.1. Monochrome Lookup Table Processing	85
8.2. LUT Availability	86
8.3. LUT Content Definition	88
8.4. LUT Setup Procedure	95
9. Bayer CFA Decoding	98
9.1. Bayer CFA to RGB Conversion	99
9.2. Using Bayer CFA Decoder	103

10. Pixel Component Unpacking	106
11. Pixel Component Re-Ordering	108
12. Endianness Conversion	109
13. Pixel Ordering	110
14. Image Data Transfer	111
15. Line Scan Acquisition	115
15.1. Line Scan Acquisition Principles	116
15.2. Line Scan Acquisition Use cases	121
16. C2C-Link	125
16.1. C2C-Link Description	126
16.2. C2C-Link Specification	128
16.3. Trigger Propagation Delays	130
16.4. C2C-Link Use Cases	132
16.5. C2C-Link Availability	133
16.6. C2C-Link Setup	134
16.7. 3303 C2C-Link Ribbon Cable	135
16.8. Custom C2C-Link Ribbon Cable Assembly	136
16.9. 1636 InterPC C2C-Link Adapter	137
Product Pictures	138
Hardware Description	139
16.10. Using 1636 as HD26F I/O Adapter	141
16.11. Using 1636 as C2C-Link Extender	142
Adapter Powering	142
InterPC Interconnect	142
Lamps	143
17. I/O Toolbox	146
17.1. I/O Toolbox Context	147
17.2. I/O Toolbox Structure	148
17.3. I/O Toolbox Composition	150
17.4. Line Input Tool	152
17.5. Quadrature Decoder Tool	153
17.6. Event Input Tool	156

17.7. Divider Tool	157
17.8. Multiplier/Divider Tool	158
17.9. Delay Tool	161
17.10. User Actions Tool & User Output Register	163
18. General Purpose I/O Lines	167
18.1. I/O Lines Types	168
18.2. Available I/O Lines	169
18.3. I/O Lines Usage	171
18.4. I/O Control Blocks	172
18.5. Line Mode Control	174
18.6. I/O Lines Specifics	175
18.7. Line Polarity Control	176
18.8. Filter Control	177
18.9. Line Source Selection	178
18.10. Logical I/O Line State	179
18.11. Physical I/O Line State	180
18.12. Line Driver Physical Output States	181
18.13. Initial States	182
19. Event Signaling And Counting	183
19.1. Introduction	183
19.2. Custom Events Sources	186
19.3. Event Specific Context Data	189
19.4. About GenTL Signaling	191
20. OEM Safety Key	192
20.1. Using OEMSafetyKey	193
21. Laser Line Extraction	194
21.1. Introduction	195
Laser Line Extraction Algorithms	196
21.2. LLE Processing Core Implementation	197
LLE Processing Core Characteristics	198
Linear Filter	200
Coring Threshold	201
Maximum Detection	202
Peak Detection	203
Center of Gravity	204

21.3. Use Case Example	205
Objective	205
Defining the ROI	206
Setting Filtering and Thresholding	208
Defining the LLE Algorithm	209
Defining Scan Length and Buffer Size	211
21.4. Appendix	212

1. About This Document

1.1. Document Scope	8
1.2. Document Revision History	9
1.3. Document Changes	10

1.1. Document Scope

This document describes and explains how to use the functions of the Coaxlink products when they are operated with Coaxlink Driver version 10.1.2

Unless specified, the functions described in this document are applicable to all the Coaxlink products and their firmware variants supported by the Coaxlink Driver.

1.2. Document Revision History

Date	Version	Description
2017-05-29	8.0	Functional Guide of Coaxlink Driver 8.0 <ul style="list-style-type: none">• Add support of 1638 Coaxlink Quad CXP-3
2017-06-20	9.0	Functional Guide of Coaxlink Driver 9.0 <ul style="list-style-type: none">• Add support of 1637 Coaxlink Quad 3D-LLE• Extend the I/O Toolbox of the 4-camera firmware variant of 1633 Coaxlink Quad G3
2017-07-03	9.1	Functional Guide of Coaxlink Driver 9.1
2017-08-08	9.2	Functional Guide of Coaxlink Driver 9.2
2017-11-08	9.3	Functional Guide of Coaxlink Driver 9.3
2017-11-22	9.4	Functional Guide of Coaxlink Driver 9.4
2018-03-28	9.5	Functional Guide of Coaxlink Driver 9.5.2
2018-05-29	10.0	Functional Guide of Coaxlink Driver 9.5.2 <ul style="list-style-type: none">• Add support of macOS• Add support of 3602 Coaxlink Octo
2018-06-29	10.1	Functional Guide of Coaxlink Driver 10.1
2018-08-14	10.1.2	Functional Guide of Coaxlink Driver 10.1.2

1.3. Document Changes

Version 10.1.2

The following topics were added:

- "Special Firmware Procedures" on page 28

The following topics were revised:

- "Pixel Data Processing Configurations" on page 81
- "Using Bayer CFA Decoder" on page 103
- "Pixel Component Re-Ordering" on page 108

Version 10.1

The following topics were added:

- "Bayer CFA Decoding" on page 98
- "Bayer CFA to RGB Conversion" on page 99
- "Using Bayer CFA Decoder" on page 103

The following topics were revised:

- "Firmware Variants per Product" on page 13
- "Firmware Version Requirements" on page 23
- "Product Selection Guide" on page 21
- "Host Interface Specification " on page 40
- "Pixel Data Processing" on page 79
- "Pixel Data Processing Configurations" on page 81
- "LUT Availability" on page 86
- "I/O Toolbox Composition" on page 150

2. Coaxlink Driver 10.1 Specification

2.1. Products & Accessories	12
2.2. Firmware Variants per Product	13
2.3. CoaXPress Standard Compliance	16
2.4. Supported Operating Systems	17
2.5. Development Tools	19
2.6. Memento	19
2.7. Software Tools	19

2.1. Products & Accessories

Coaxlink Products

Product	S/N Prefix	Icon
1629 Coaxlink Duo PCIe/104-EMB	KDI	
1630 Coaxlink Mono	KMO	
1631 Coaxlink Duo	KDU	
1632 Coaxlink Quad	KQU	
1633 Coaxlink Quad G3	KQG	
1633-LH Coaxlink Quad G3 LH	KQH	
1634 Coaxlink Duo PCIe/104-MIL	KDR	
1635 Coaxlink Quad G3 DF	KDF	
1637 Coaxlink Quad 3D-LLE	KQE	
1638 Coaxlink Quad CXP-3	KQL	
3602 Coaxlink Octo	KOC	

Related Accessories

Product	S/N Prefix	Icon
1625 DB25F I/O Adapter Cable		
1636 InterPC C2C-Link Adapter	KCC	
3300 HD26F I/O module for Coaxlink Duo PCIe/104		
3301 Thermal drain (Model 1) for Coaxlink Duo PCIe/104		
3302 DIN1.0/2.3 Coaxial cable for Coaxlink Duo PCIe/104		
3303 C2C-Link Ribbon Cable		
3304 HD26F I/O Adapter Cable		

Note: The S/N prefix is a 3-letter string at the beginning of the card serial number.

Note: Icons are used in this document for tagging titles of card-specific content.

2.2. Firmware Variants per Product

1630 Coaxlink Mono

Firmware Variant	Description	Host Connections Map	Stream Buffer Size
1-camera	One 1-connection area-scan camera	1D1	512 MB

1631 Coaxlink Duo

Firmware Variant	Description	Host Connections Map	Stream Buffer Size
1-camera	One 1- or 2-connection area-scan camera	1D2	1 GB
2-camera	One or two 1-connection area-scan cameras	2D11	512 MB
1-camera, line-scan	One 1- or 2-connection line-scan camera	1D2	1 GB
2-camera, line-scan	One or two 1-connection line-scan cameras	2D11	512 MB

1632 Coaxlink Quad

Firmware Variant	Description	Host Connections Map	Stream Buffer Size
1-camera	One 1- or 2- or 4-connection area-scan camera	1D4	1 GB
2-camera	One or two 1- or 2-connection area-scan cameras	2D22	512 MB
1-camera, line-scan	One 1- or 2- or 4-connection line-scan camera	1D4	1 GB

1633 Coaxlink Quad G3

Firmware Variant	Description	Host Connections Map	Stream Buffer Size
1-camera	One 1- or 2- or 4-connection area-scan camera, 1 data-stream	1D4	1 GB
1-camera, 4-data-stream	One 1- or 2- or 4-connection area-scan camera, up to 4 data streams	1D4S4	
2-camera	One or two 1- or 2-connection area-scan cameras	2D22	512 MB
4-camera	One or two or three or four 1-connection area-scan cameras	4D1	256 MB
1-camera, line-scan	One 1- or 2- or 4-connection line-scan camera	1D4	1 GB
2-camera, line-scan	One or two 1- or 2-connection line-scan cameras	2D22	512 MB
4-camera, line-scan	One or two or three or four 1-connection line-scan cameras	4D1111	256 MB
1-slm-camera	Master 4-connection sub-link of an 8-connection area-scan camera	1D8SL4	1 GB
1-sls-camera	Slave 4-connection sub-link of an 8-connection area-scan camera	1D8SL4	1 GB

1629 Coaxlink Duo PCIe/104-EMB, 1634 Coaxlink Duo PCIe/104-MIL

Firmware Variant	Description	Host Connections Map	Stream Buffer Size
1-camera	One 1- or 2-connection area-scan camera	1D2	512 MB
2-camera	One or two 1-connection area-scan cameras	2D11	256 MB
1-camera, line-scan	One 1- or 2-connection line-scan camera	1D2	256 MB

1635 Coaxlink Quad G3 DF

Firmware Variant	Description	Host Connections Map	Stream Buffer Size
1-camera	One 1- or 2- or 4-connection area-scan camera	1D4	1 GB
1-df-camera	One 1- or 2- or 4-connection area-scan data-forwarded-camera	1DF4	1 GB
1-camera, line-scan	One 1- or 2- or 4-connection line-scan camera	1D4	1 GB
1-df-camera, line-scan	One 1- or 2- or 4-connection line-scan data-forwarded-camera	1DF4	1 GB

1637 Coaxlink Quad 3D-LLE

Firmware Variant	Description	Host Connections Map	Stream Buffer Size
1-camera	One 1- or 2- or 4-connection area-scan camera	1D4	1 GB

1638 Coaxlink Quad CXP-3

Firmware Variant	Description	Host Connections Map	Stream Buffer Size
4-camera	One or two or three or four 1-connection area-scan cameras	4D1111	128 MB

3602 Coaxlink Octo

Firmware Variant	Description	Host Connections Map	Stream Buffer Size
1-camera	One 1- or 2- or 4- or 8-connection area-scan camera	1D8	2 GB
2-camera	One or two 1- or 2- or 4-connection area-scan cameras	2D44	1 GB
8-camera	Up to eight 1-connection area-scan cameras	8D11111111	256 MB
1-camera, line-scan	One 1- or 2- or 4- or 8-connection line-scan camera	1D8	2 GB
2-camera, line-scan	One or two 1- or 2- or 4-connection line-scan cameras	2D44	1 GB

2.3. CoaXPress Standard Compliance

Coaxlink products together with Coaxlink Driver version 5.0 or higher complies with the following versions of the CoaXPress standard:

- CoaXPress Standard 1.0
- CoaXPress Standard 1.1
- CoaXPress Standard 1.1.1 (Partially)

The following deviations to the CoaXPress standards apply:

- **For all versions:** Restrictions to the camera connection schemes. Refer to "[Camera to Host Connections Maps](#)" on page 43.
- **For version 1.1.1 only:** Partial implementation of the 1.1.1 discovery. Refer to: "[CoaXPress 1.1.1 Discovery](#)" on page 50

2.4. Supported Operating Systems

Windows

The Coaxlink Driver is designed to support all Windows versions from 7 to 10, including the server versions, on x86 (32-bit) and x86_64 (64-bit) platforms.

This release has been validated with the following Windows versions:

OS Name & Version	Platform	Notes
Microsoft Windows 7	x86 (32-bit)	Service Pack 1 with KB3033929 and KB2921916 updates
Microsoft Windows 8.1	x86 (32-bit)	-
Microsoft Windows 8.1	x86-64 (64-bit)	-
Microsoft Windows 10	x86-64 (64-bit)	Version 1709, a.k.a. Fall Creators Update

Note: *The Coaxlink Driver for Windows 10 is signed by Microsoft.*

Note: *Power saving modes of the operating systems (StandBy, Sleep, Suspend...) are not supported.*

Linux

The Coaxlink Driver is designed to be distribution-independent on x86, x86_64, and aarch64 platforms. It is expected to work with a wide range of distributions.

This release has been validated with the following distribution(s):

OS Name & Version	Platform	Notes
Linux CentOS 7	x86 (32-bit)	Kernel version 3.10
Linux Ubuntu 14.04	x86 (32-bit)	Kernel version 3.13
Linux Ubuntu 14.04	x86-64 (64-bit)	Kernel version 3.13
Linux Ubuntu 16.04 LTS	aarch64 (64-bit)	Kernel version 3.10.96-tegra
Linux Ubuntu 17.04	x86_64 (64-bit)	Kernel version 4.10

Note: *Power saving modes of the operating systems (StandBy, Sleep, Suspend...) are not supported.*

macOS

The Coaxlink Driver is designed to support all macOS versions from version 10.12 on x86_64 (64-bit) platforms.

This release has been validated with the following version(s):

OS Name & Version	Platform	Notes
macOS 10.12.6	x86-64 (64-bit)	A.k.a. Sierra
macOS 10.13.4	x86-64 (64-bit)	A.k.a. High Sierra

Note: *The Coaxlink Driver for macOS is signed by Euresys using a certificate that has been signed by Apple.*

Note: *Power saving modes of the operating systems (StandBy, Sleep, Suspend...) are not supported.*

2.5. Development Tools

The Coaxlink Driver is supplied as GenICam GenTL producer libraries (coaxlink.cti):

- An x86 dynamic library designed to be used with ISO-compliant C/C++ compilers for the development of x86 applications.
- An x86_64 dynamic library designed to be used with ISO-compliant C/C++ compilers for the development of x86_64 applications.
- An aarch64 dynamic library designed to be used with ISO-compliant C/C++ compilers for the development of aarch64 applications.
- A .NET assembly designed to be used with development environments compatible with .NET frameworks version 2.0 or higher.

The Coaxlink cards should be usable with any development tool that supports at least one of these interfaces.

2.6. Memento

Memento version 4.0 or later is required when using Coaxlink Driver version 4.0 or later.

Memento version 9.5 is required to use the Memento Analyzer.

2.7. Software Tools

Tool Name	Tool Description
Coaxlink Firmware Manager	Tool for installing or upgrading the firmware embedded on the Coaxlink cards.
GenICam Browser (64-bit)	64-bit version of the GUI tool giving access to all the GenICam features exposed by the GenTL Producer(s) in your system
GenICam Browser	32-bit version of the GenICam browser
GenTL Console (64-bit)	64-bit version of the command-line tool giving access to all the functions and commands exposed by the Euresys GenTL Producer
GenTL Console	32-bit version of the GenTL Console

3. Before Use

3.1. Product Selection Guide

This topic provides help for the selection of the appropriate Coaxlink product to purchase and the firmware variant to install on the selected product.

Procedure

1. Identify the camera type and the corresponding table
2. In the table identify the combination(s) matching the number of camera connectors

The tables have 4 columns:

- **Connectors:** number of connectors per camera
- **Devices:** number of cameras that can be connected to one product.
- **Firmware variant:** name of the firmware variant to install on the product
- **Applicable products:** products candidates

Camera Types

Area-scan cameras

Any camera based on an area-scan sensor that delivers rectangular frames on a single data stream.

Connectors	Devices	Firmware variant	Applicable products
8	1	1-camera	
	1	1-slm-camera + 1-sls-camera	Refer to "Sub-link Acquisition" on page 47
4	2	2-camera	
	1	1-camera	
	1	1-df-camera	Refer to "CoaXPress Data Forwarding" on page 69
2	2	2-camera	
	1	1-camera	
1	8	8-camera	
	4	4-camera	
	2	2-camera	
	1	1-camera	

Multi-stream area-scan cameras

Any camera based on an area-scan sensor that delivers rectangular frames concurrently on multiple data streams.

Connectors	Devices	Firmware variant	Applicable products
4	1	1-camera, 4-data-stream	

Line-scan cameras

Any camera based on a line-scan sensor that delivers individual lines on a single data stream

Connectors	Devices	Firmware variant	Applicable products
8	1	1-camera, line-scan	
4	2	2-camera, line-scan	
	1	1-camera, line-scan	
	1	1-df-camera, line-scan	Refer to "CoaXPress Data Forwarding" on page 69
2	2	2-camera, line-scan	
	1	1-camera, line-scan	
1	4	4-camera, line-scan	
	2	2-camera, line-scan	

3.2. Firmware Version Requirements

Coaxlink Driver 10.1.2


The following table specifies the required minimum firmware version for all combinations of product and firmware variant:

Product/Firmware Variant Combinations	Min. Firmware Version Number
1633 Coaxlink Quad G3 (1-camera)	248
1635 Coaxlink Quad G3 DF (1-camera)	
1635 Coaxlink Quad G3 DF (1-df-camera)	
3602 Coaxlink Octo (1-camera)	
3602 Coaxlink Octo (2-camera)	
1637 Coaxlink Quad 3D-LLE (1-camera)	246
Other product/firmware variant combinations	245

IMPORTANT NOTE

It is **mandatory** to apply the Firmware Upgrade procedure prior to using this version of the driver.

The Coaxlink Driver checks the compatibility of the firmware installed on every Coaxlink card. For Coaxlink cards having an incompatible firmware, the GenTL driver exposes 0 (zero) Device and the GenICam browser displays a "Firmware too old" error message:

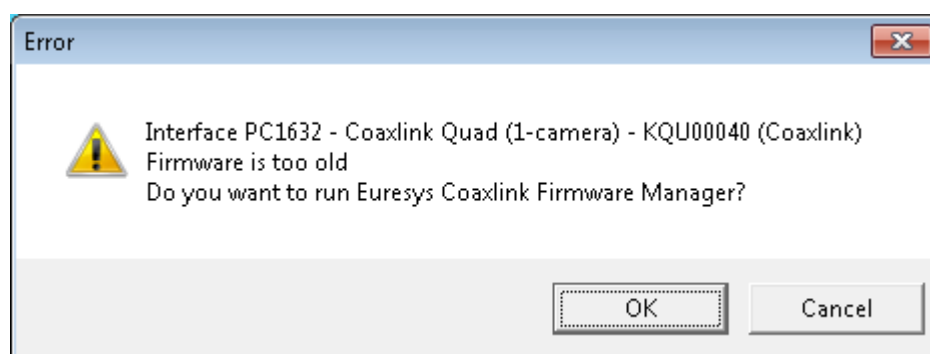

"Firmware too old" error message

3.3. Firmware Management

Firmware

In this context, "firmware" designates the content of the FPGA (Field Programmable Gate Array) device of a Coaxlink card.

It defines the functionality of the card including the PCI Express end-point.

Firmware EEPROM

The FPGA used on Coaxlink card is a RAM-based FPGA (Field Programmable Gate Array) that needs to be loaded every power up.

Considering that a PCI Express end point must be ready within 150 milliseconds of the power-up time, the FPGA content, must be loaded quickly after having applied power to the card. Therefore, the firmware is stored into a non-volatile flash EEPROM allowing a fast start-up of the FPGA.

Note: *This situation differs from other Euresys products, such as Grablink cards, where the FPGA content is loaded by the MultiCam Driver when it starts or at any time if a FPGA configuration change is requested during operation.*

Note: *The Coaxlink Driver will never modify the content the FPGA during operation.*

Firmware Modifications

Any modification of the FPGA content requires a two-step operation:

1. The new firmware is written into the Flash EEPROM of the card using a firmware management tool. Refer to: "[Firmware Manager Tool](#)" on the next page".
2. The new firmware is activated by cycling the system power.

Firmware Manager Tool

The Coaxlink Driver is delivered with a command-line tool named `coaxlink-firmware`.

The Coaxlink Firmware Manager Tool embeds a library of *firmware images* composed with all the *firmware variants* of all the products supported by the specific version the Coaxlink Driver. Unless specified with a `--firmware=FILE` option, the tool uses the embedded library.

The *Coaxlink Firmware Manager Tool* allows to:

- List the properties of the firmware installed on each Coaxlink cards present in the system including *version number*, *variant number* and *name*.
- Upgrade a firmware without changing the variant number. For instructions, refer to ["Firmware Upgrade" on the next page](#).
- Install another firmware variant. For instructions, refer to: ["Firmware Variant Installation" on page 27](#).

Note: Executing `coaxlink-firmware --help` displays a help message describing all the command options.

Note: Executing `coaxlink-firmware --gui`, starts the *.Coaxlink Firmware Manager* user interface.

Firmware Upgrade

To upgrade the firmware with the latest version:

1. Execute the command: `coaxlink-firmware upgrade [OPTIONS]`
2. Shutdown (power Off) the PC

IMPORTANT NOTE

The Coaxlink Firmware Manager Tool must be executed when using any Coaxlink card for the first time with a specific Coaxlink Driver version.

In particular, the firmware upgrade must be executed:

- when using a new Coaxlink card for the first time
- after installing a different version of the Coaxlink Driver

This will ensure that the Coaxlink card's firmware is suitable for the Coaxlink Driver version.

Firmware Variant Installation

To install another firmware variant:

1. Execute the command: `coaxlink-firmware install [OPTIONS] VARIANT`
2. Shutdown (power Off) the PC

IMPORTANT NOTE

The Coaxlink Firmware Manager Tool must be executed when another firmware variant must be installed.

For instance:

- when another camera connection topology is required (e.g. 1-camera vs. 2-camera on Coaxlink Duo)
- when another camera type is required (e.g. 1-camera vs. 1-camera, line-scan on Coaxlink Quad)

Special Firmware Procedures

Directives

- Execute either the ["GUI Mode Downgrade Procedure" below](#) or the ["Command-line Mode Downgrade Procedure " below](#) only when the application absolutely requires an older firmware version!
- Execute either the ["Command-line Mode Recovery Procedure" on the next page](#) or the ["Recovery Procedure with Recovery Switch" on the next page](#) only in case in case of card malfunction after installation of a new firmware!

GUI Mode Downgrade Procedure

Important: For cards having a Serial Number above or equal to 10,000: this procedure must be executed on a PC with a Coaxlink Driver version 10.0.0 or higher installed!

1. Open the Coaxlink Firmware Manager application
2. Click on the top left menu button and select "Firmware images"
3. Open a Windows file explorer
 - a. Select the `coaxlink-firmware.exe` file delivered with the old Coaxlink driver required by the application
 - b. Drag the selected file and drop it into the "Embedded firmwares images" area of the Coaxlink Firmware Manager window
4. Click on the top left menu button and select "Coaxlink cards" to go back the main window
5. Using Coaxlink Firmware Manager
 - a. Select the card to downgrade
 - b. Select the firmware variant to install
 - c. Proceed with the installation

Command-line Mode Downgrade Procedure

Important: For cards having a Serial Number above or equal to 10,000: this procedure must be executed on a PC with a Coaxlink Driver version 10.0.0 or higher installed!

Using the Coaxlink Firmware Manager in command-line-mode executes one of the following commands:

- Keeping the same firmware variant:

```
coaxlink-firmware update --firmware=PATH-TO_FILE
```

- Changing also the firmware variant:

```
coaxlink-firmware install "1-camera" --firmware=PATH-TO_FILE
```

PATH-TO_FILE is the path to the coaxlink-firmware.exe file delivered with the old Coaxlink driver required by the application.

Command-line Mode Recovery Procedure

Important: For cards having a Serial Number above or equal to 10,000: this procedure has to be executed on a PC with a Coaxlink Driver version 10.1.2 or higher installed!

1. Using the Coaxlink Firmware Manager tool in command-line mode, execute the bank selection command:

```
coaxlink-firmware bank-select --next=ALTERNATE
```

The command displays a status indicating that the next firmware after boot is the other bank:

```
[BANK0: current firmware][BANK1: alternate/next firmware]
```

or

```
[BANK0: alternate/next firmware][BANK1: current firmware]
```

2. Power off the PC
3. Power on the PC

Recovery Procedure with Recovery Switch

Important: (*) For cards having a Serial Number above or equal to 10,000: this procedure has to be executed on a PC with a Coaxlink Driver version 10.1.2 or higher installed!

1. Power off the PC:
 - a. Remove the card from the PC
 - b. Set the "Firmware Recovery Switch" on the next page of the card to the "Recovery" position
2. Power off a PC*
 - a. Insert the card into the PC
 - b. Power on the PC
 - c. Execute a "Firmware Upgrade" on page 26 procedure
 - d. Power off the PC
 - e. Remove the card
 - f. Set back the "Firmware Recovery Switch" on the next page to the "Normal" position

Firmware Recovery Switch

The firmware recovery switch is implemented with a 3-pin 1-row header and a jumper. The jumper has two positions: **normal** and **recovery**.

Normal position

At the next power ON, the latest firmware successfully written into the Flash EEPROM is used to program the FPGA.

After FPGA startup completion, the card exhibits the standard PCI ID and the Coaxlink driver allows normal operation.

This is the factory default jumper position.

Recovery position

At the next power ON, the last but one firmware successfully written into the Flash EEPROM is used to program the FPGA.

After FPGA startup completion, the card exhibits the recovery PCI ID and the Coaxlink driver inhibits image acquisition.

Location on PCI Express cards


Firmware Recovery Switch location of 1632 Coaxlink Quad

Firmware Recovery Switch location of 1633 Coaxlink Quad G3, 1633-LH Coaxlink Quad G3 LH and 1637 Coaxlink Quad 3D-LLE

Firmware Recovery Switch location of 1635 Coaxlink Quad G3 DF and 3601 Coaxlink CoaXPress Simulator

Note: *The normal position of the jumper (i.e. bracket side) is common to all Coaxlink PCI Express cards.*

Location on PCIe/104 cards

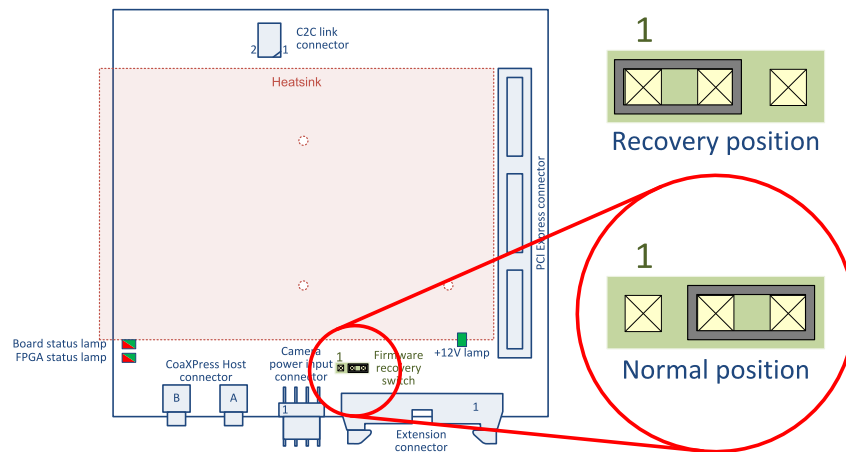

Firmware Recovery Switch location of 1629 Coaxlink Duo PCIe/104-EMB and 1634 Coaxlink Duo PCIe/104-MIL

4. Coaxlink Architecture

4.1. Main Elements

Quick overview of the main functional elements of a Coaxlink-based image acquisition system.

GenTL Hierarchy

Each functional element of Coaxlink is configured and controlled by GenICam features belonging to a GenTL module.

At the top of the hierarchy, there is one **GenTL System Module** per Host PC. It binds all the **GenTL Interface Modules** of a Host PC.

There is one **GenTL Interface Module** for each Coaxlink card. It binds all the **GenTL Device Modules** of a Coaxlink card.

There is one **GenTL Device Module** for each camera (or imaging device) attached to a Coaxlink card. The elements belonging to the imaging device (camera) itself are referred as *Remote Device*. By opposition, the elements belonging to the frame grabber are also referred as *Local Device*.

Note: *The maximum number of cameras that can be attached to a Coaxlink card is determined by the installed firmware variant.*

There is one **GenTL Data Stream Module** for each data stream delivered by a camera attached to a Coaxlink card. It gathers the elements involved into the image build-up and transport from the imaging device to a pool of GenTL buffers.

Note: *The maximum number of data-stream for a camera attached to a Coaxlink card is determined by the installed firmware variant.*

There is one **GenTL Buffer Module** for each image buffer.

Interface Module Main Elements (Orange)

I/O Lines

This block gathers all the I/O ports of the card.

I/O Toolbox

This block gathers a collection of tools used to build event streams from trigger and encoder devices attached to the I/O port inputs.

Note: *These elements are common to- (or can be shared by-) all the GenTL Device Modules managed by the Coaxlink card*

Device Module Main Element (Green)

Camera and Illumination Controller

This block is used to control the camera cycle and the illumination strobe. It can be configured to receive real-time (Camera) Cycle trigger events from any I/O Toolbox output stream. It produces two real-time signals: the Camera Trigger signal, sent to the camera trigger input, and the Strobe signal, sent to the illumination device associated with the camera.

Note: *This element is common to- (or can be shared by-) all the GenTL Data Stream Modules related to that imaging device.*

Data Stream Module Main Elements

Image Acquisition Controller

This block is used for the control of the acquisition gate. It can be configured to receive real-time start-of-scan and end-of-scan trigger events from any I/O Toolbox output stream.

Acquisition Gate

This block filters the data input stream, selecting frames (area-scan imaging) or lines (line-scan imaging) to be acquired

FIFO Buffer

This block provides a temporary storage for the acquired image data.

Pixel Processing

This block performs pixel data processing and formatting.


4.2. Block Diagrams

This section show the block diagram of three image acquisition systems using one Coaxlink card

Note: In the diagrams hereafter, the main elements are represented by rectangles and their relations are represented by line segments with arrows indicating the direction of the signal or the data flow. The filling color of the rectangle indicates the level in the GenTL hierarchy as described in the legend.

1-camera, 1-data-stream

Applies to:

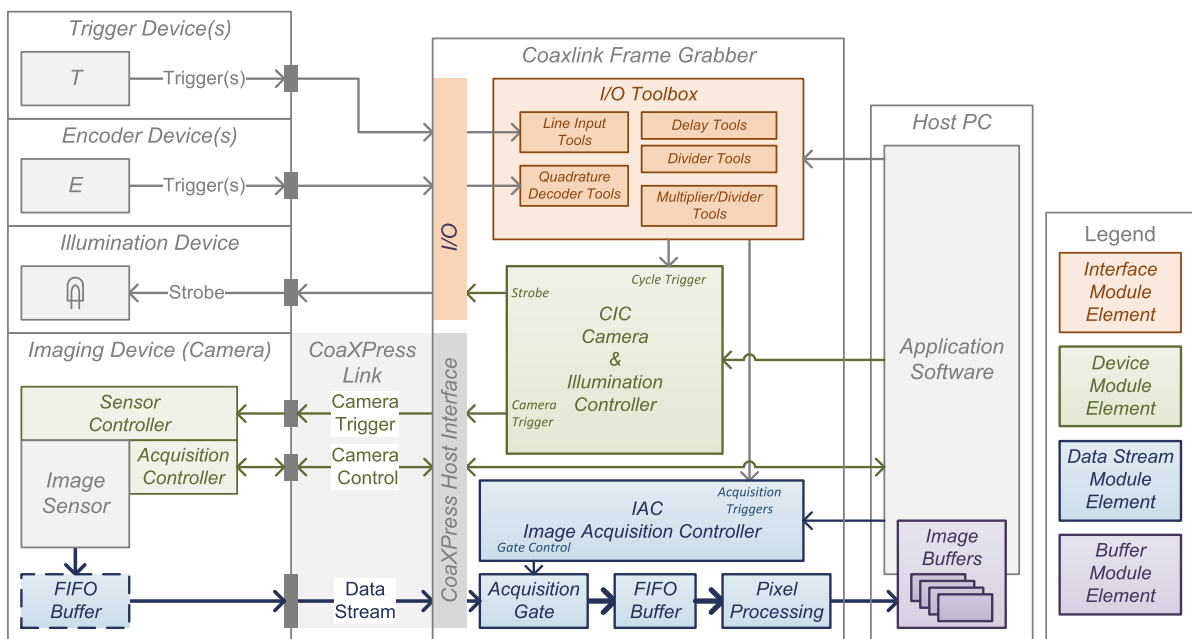


1-camera, 1-data-stream Coaxlink image acquisition system

Note: this configuration applies only when a **1-camera** or a **1-camera, line-scan** firmware variant is installed.

2-camera, 1-data-stream

Applies to:

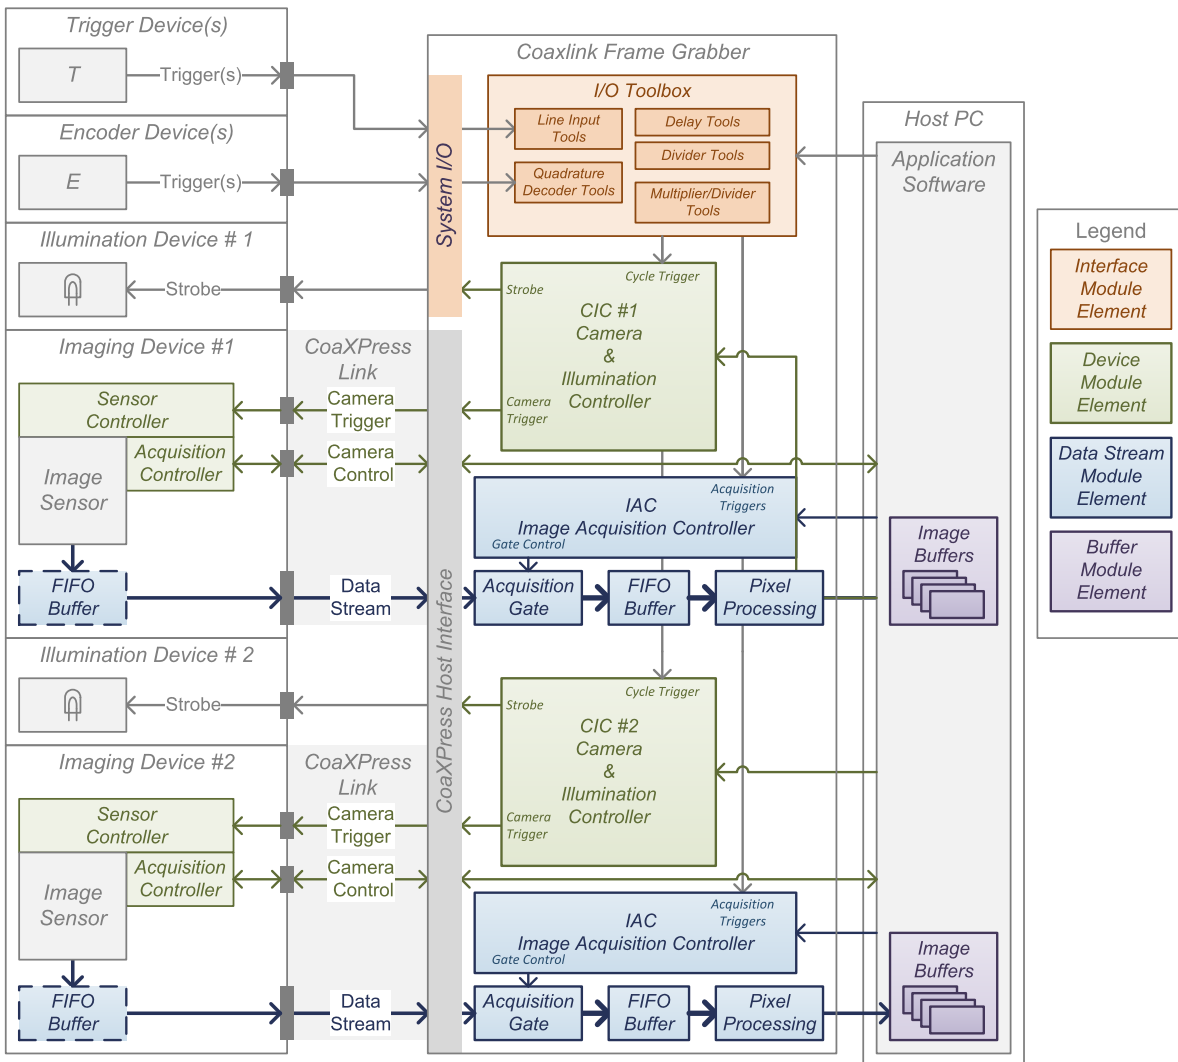


2-camera, 1-data-stream Coaxlink image acquisition system

Note: this configuration applies only when a **2-camera** or a **2-camera, line-scan** firmware variant is installed.

4-camera, 1-data-stream

Applies to:

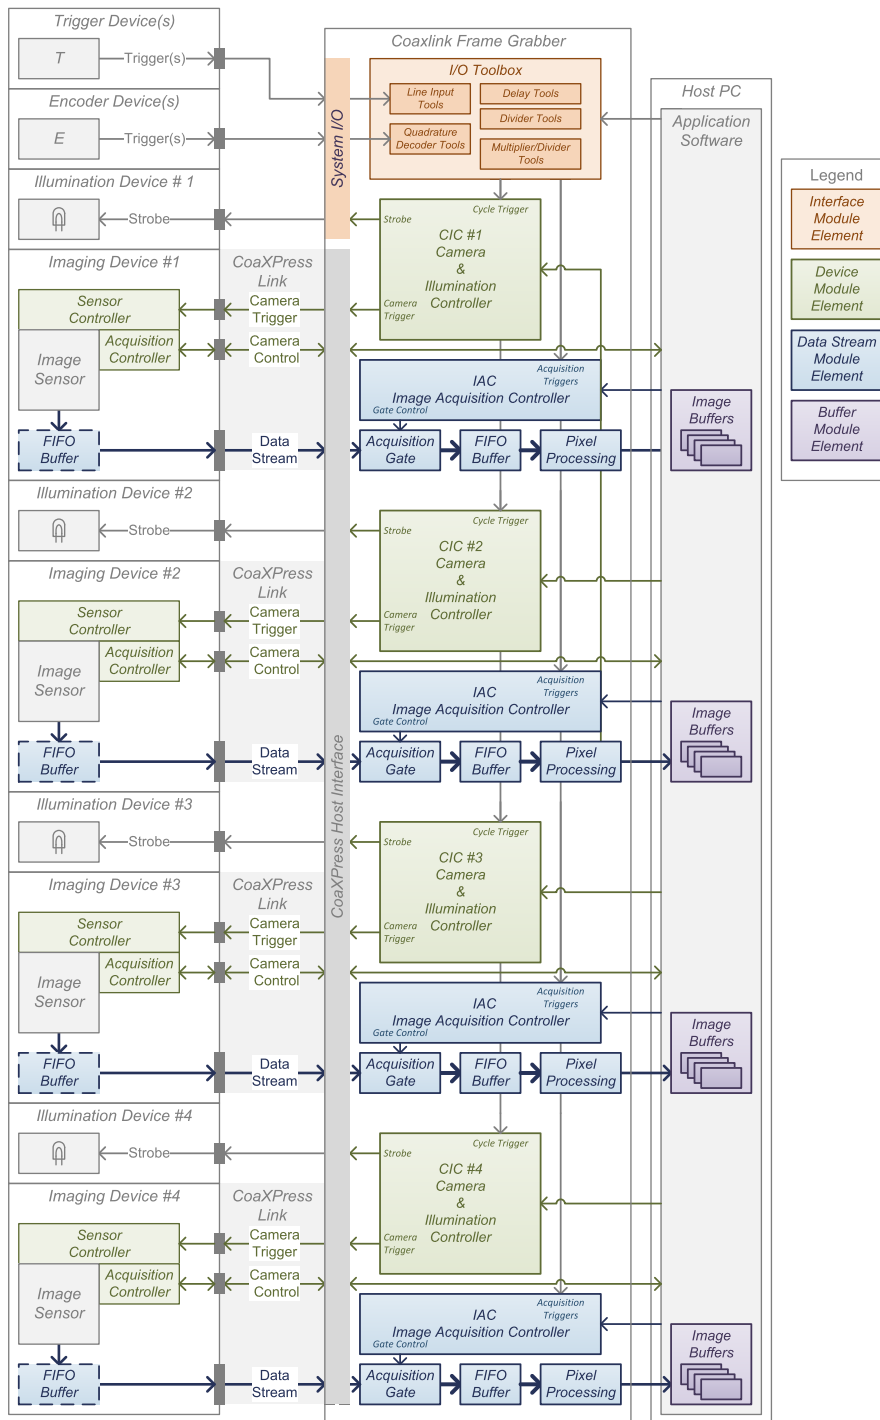

4-camera, 1-data-stream Coaxlink image acquisition system

Note: this configuration applies only when a **4-camera** or a **4-camera, line-scan** firmware variant is installed.

1-camera, 4-data-stream

Applies to:

1-camera, 4-data-stream Coaxlink image acquisition system

Note: *this configuration applies only when a **1-camera,4-data-stream** firmware variant is installed.*

5. CoaXPress Host Interface

- 5.1. Host Interface Specification 40
- 5.2. Camera to Host Connections Maps 43
- 5.3. Sub-link Acquisition 47
- 5.4. Multi-Stream Acquisition 48
- 5.5. Link Configuration 49
- 5.6. CoaXPress 1.1.1 Discovery 50
- 5.7. Power Over CoaXPress 51
- 5.8. CoaXPress I/O Channel 54
- 5.9. CoaXPress Host To Device Trigger 55
- 5.10. CoaXPress Lamps 61
- 5.11. Connection Test 62
- 5.12. CoaXPress Link Validation Tool 63

5.1. Host Interface Specification




Interface (Card) Specifications

Specifications having the scope of one GenTL Interface module (Namely: a Coaxlink card)

CoaXPress feature bar	Applicable products
CXP-3 DIN 4	
CXP-6 DIN 1	
CXP-6 DIN 2	
CXP-6 DIN 4	
CXP-6 DIN 8	
Down-connection speed	Applicable products
1.250, 2.500, and 3.125 GT/s	
1.250, 2.500, 3.125, 5.000, and 6.250 GT/s	All products but
Maximum aggregated input data rate	Applicable products
625,000 Bytes/s	
1,250,000 Bytes/s	
2,500,000 Bytes/s	
5,000,000 Bytes/s	
Maximum deliverable PoCXP power	Applicable products
17 W per connector	All products
Devices count	Applicable firmware variants
1	
1 or 2	
1 up to 4	
1 up to 8	

Device (Camera) Specifications

Specifications having of one GenTL Device module (Namely, a camera attached to a Coaxlink card)



Device Type	Applicable firmware variants
Area-scan camera, 1 data stream	
Area-scan camera, up to 4 data streams	
Line-scan camera, 1 data stream	

The above table excludes the special camera types used in [data forwarding](#) and [sub-link](#) configurations.

Connections count (per camera)	Applicable products/ firmware variants
1	Refer to: "Firmware Variants per Product" on page 13
1 or 2	
1, 2 or 4	
1, 2, 4 or 8	
8	Refer to sub-link configurations

Data Stream Specifications

Specifications having the scope of oneGenTL Data Stream module

Maximum stream packet size	Applicable products
8,192 Bytes	
16,384 Bytes	All products but
Image stream format	Applicable firmware variants
Rectangular Image (YSize > 0)	
Rectangular Image (YSize = 0)	
Arbitrary Image	<i>Not supported</i>
Image scanning method	Applicable firmware variants
Progressive	All firmware variants
Interlace	<i>Not supported</i>
Tap geometry	Applicable firmware variants
1X-1Y	All firmware variants
1X-1Y2	<i>Not supported</i>
1X-2YE	<i>Not supported</i>

Note: 1X-1Y2 is used in dual-tap cameras having a single zone in the vertical direction and delivering simultaneously 2 consecutive lines

Note: 1X-2YE is used in dual-tap cameras having two zones in the vertical direction and delivering simultaneously 2 lines starting from the top and the bottom lines of the image.

Pixel format	Applicable firmware variants
Raw	All firmware variants
Mono8, Mono10, Mono12, Mono14, Mono16	All firmware variants
BayerGR8, BayerRG8, BayerGB8, BayerBG8 BayerGR10, BayerRG10, BayerGB10, BayerBG10 BayerGR12, BayerRG12, BayerGB12, BayerBG12 BayerGR14, BayerRG14, BayerGB14, BayerBG14 BayerGR16, BayerRG16, BayerGB16, BayerBG16	All firmware variants
RGB8, RGB10, RGB12, RGB14, RGB16	All firmware variants
RGBA8, RGBA10, RGBA12, RGBA14, RGBA16	All firmware variants

5.2. Camera to Host Connections Maps

The Host Interface of Coaxlink requires a specific assignment of the Device connections to the Host connectors. Such assignment is named **Host Connection Map**.

The Host Connection Map is hard-coded in the product/firmware variant. The Coaxlink product and firmware variant must be selected according to the required mapping!

Host Connection Map Naming Convention

The **Host Connection Map** or **HCMAP** designates how the connections of the Host Interface of a Coaxlink card are allocated to the Devices (cameras).

A Host Connection Map - HCMAP - is designated by an acronym using the following Euresys proprietary naming convention:

```
<dev#><dev-type> [<str#>S] {<con#>...<con#>} [<SL-con#>]
```

where:

- <dev#> declares the maximum number of Devices (cameras) that can be attached to the Host Interface.
 - 1 for a single-device Host interface
 - 2 for a 2-device Host interface
 - ...
- <dev-type> declares the device type.
 - D for standard CoaXPress devices
 - DF for virtual devices used in the Data Forwarding schemes
- <con#> declares the number of connections available for each device. *This field is repeated once for each device.*
 - 1 for a single-connection device
 - 2 for 2-connection device
 - ...
- <str#>S declares the maximum number of data streams allowed by a device.
 - This field is omitted when there is only 1 stream
 - 4S for a up to 4 data-streams per device
- SL<con#> declares the number connections per sub-link.
 - *This field is omitted when there are no sub-links.*
 - SL4 for a 4-connection sub-links

Examples

HCMAP 2D22 designates a Host Interface with 2 standard 1-data-stream CoaXPress Devices and 2 connections for each device.

HCMAP 1D4S4 designates a Host Interface with 1 standard CoaXPress Devices, up to 4 data streams, and 4 connections per device.

Host Connection Maps - Standard CoaXPress Devices




1D1 host connection map




1D2 host connection map




1D4 host connection map

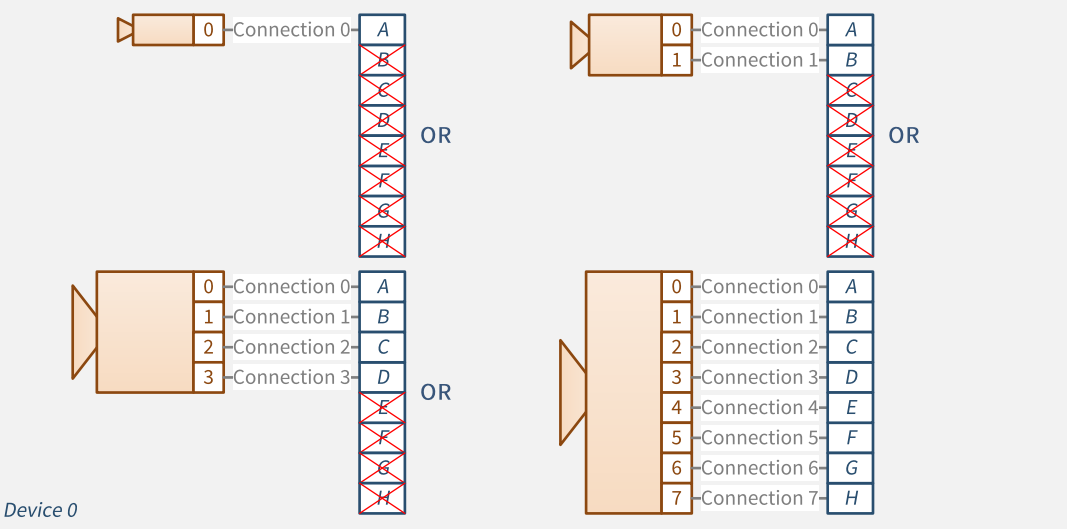


1D8 host connection map

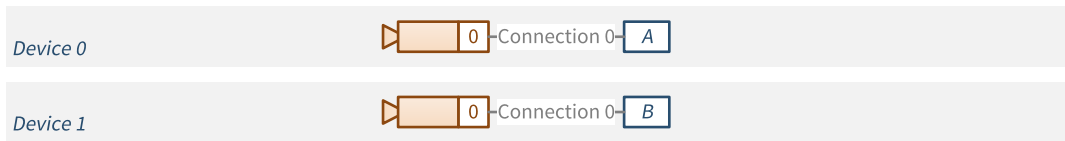


2D11 host connection map

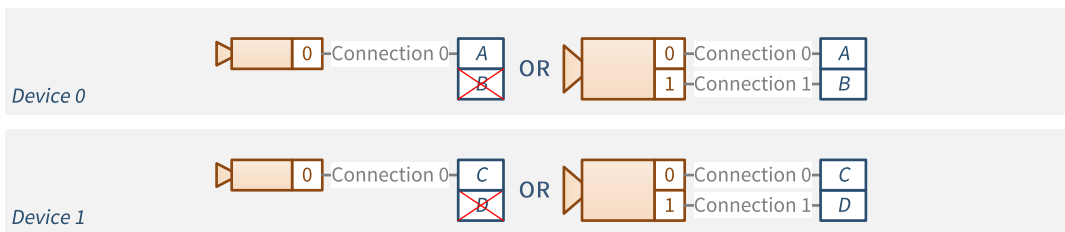


2D22 host connection map

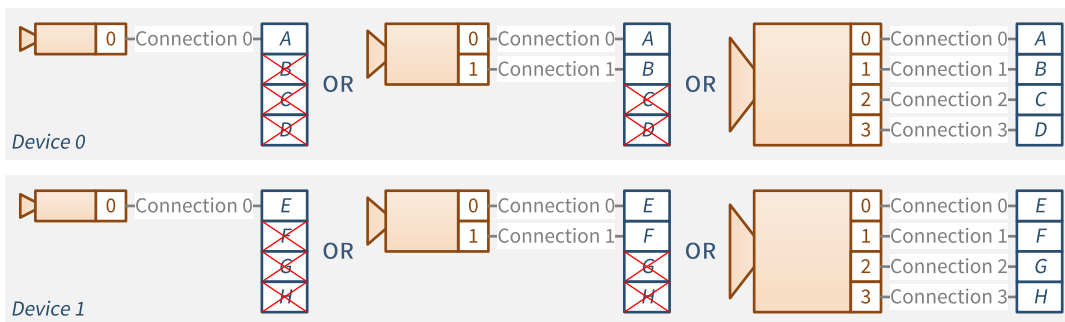

2D44 host connection map

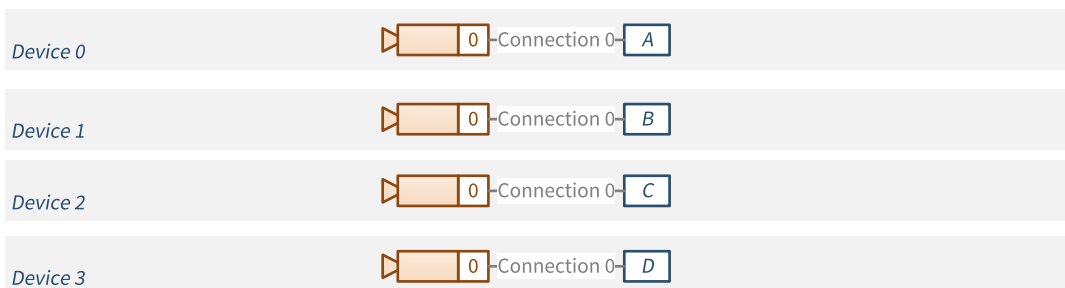

4D1111 host connection map

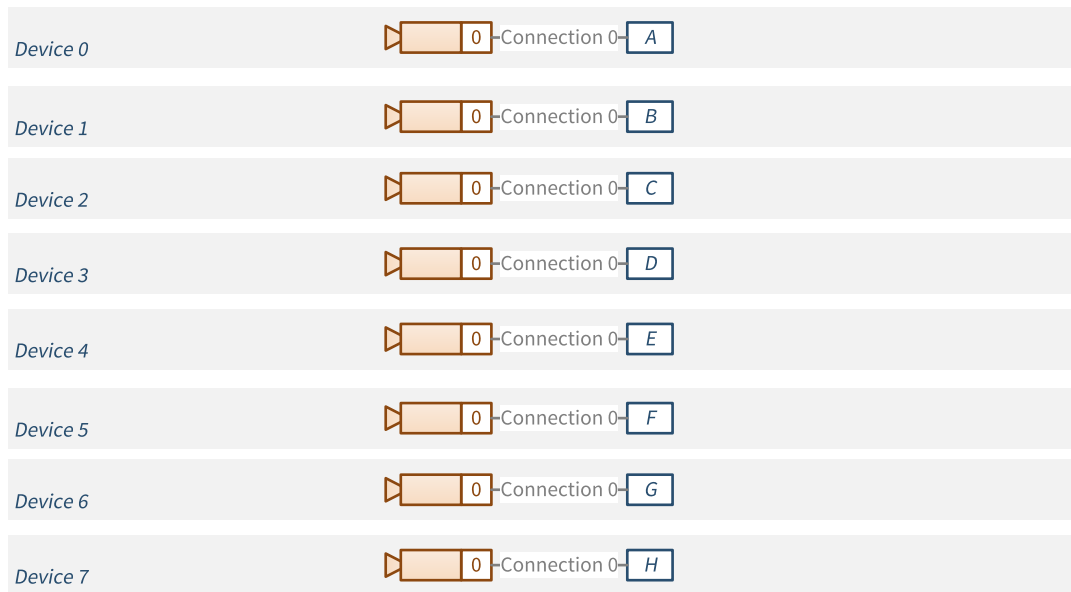

8D11111111 host connection map

Host Connection Maps - Non-standard devices

Refer to ["CoaXPress Data Forwarding"](#) on page 69 for the connection schemes of slave Data Forwarding devices.

Refer to ["Sub-link Acquisition"](#) on the next page for the connection scheme of an 8-connection camera to two 1633 Coaxlink Quad G3.

5.3. Sub-link Acquisition

Applies to:

The **Sub-link Acquisition** feature of 1633 Coaxlink Quad G3 allows to acquire images from specific **8-connection CoaXPress cameras**.


Camera requirements

This feature applies only to 8-connection area-scan cameras having the following characteristics:

- The image header and the image data of the first line are packed together into a single CoaXPress data packet and delivered to CoaXPress Connection 0.
- For the remaining lines of the frame (or ROI), the image data of a single image line are packed into a single packet and delivered to the next CoaXPress Connection. Connections are rotated using the CoaXPress standard packet distribution ordering rule: (0 to 7, then back 0).
- The image frame (or ROI) height must be a multiple of 8 lines to ensure that the last image line is delivered on the last connection (Connection 7).

Principles

The 8-connection CoaXPress link is divided into 2 sub-links. Each sub-link connects to a 1633 Coaxlink Quad G3 using the 1D8SL4 connection scheme:

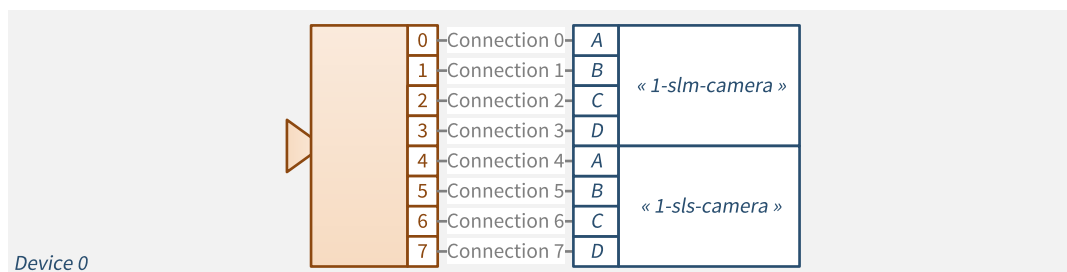

8-connection camera using 2 sub-links and 2 1633 Coaxlink Quad G3

The first 4-connection sub-link connects to the "sub-link-master grabber": a 1633 Coaxlink Quad G3 fitted with the `1-slm-camera` firmware variant.

The next 4-connection sub-link connects to the "sub-link-slave grabber": a 1633 Coaxlink Quad G3 fitted with the `1-sls-camera` firmware variant.

Each grabber delivers one-half of the image frame into a GenTL buffer. The application has to reconstruct the whole image frame by merging the contents of the two corresponding buffers. This is shown in the `320-sublink` EGrabber sample program.

The master grabber controls the camera and manages the system triggers.

Both grabbers are configured to capture all the image data of their respective sub-link.

5.4. Multi-Stream Acquisition

Applies to:

4-data-stream Concurrent Acquisition

The **1-camera, 4-data-stream** firmware variant of 1633 Coaxlink Quad G3 allows to connect one area-scan CoaXPress camera that delivers up to 4 independent data streams.

The frame grabber sorts the incoming CoaXPress data blocks according to the value of the 2 least significant bits of the CoaXPress `StreamID` and feeds four independent data paths.

Each data path is capable of handling the full CoaXPress link bandwidth, namely 2.5 Gigabytes/s.

It includes:

1. A 250 MB FIFO buffer memory
2. A pixel processor that allows to align 10/12/14-bit data to the LSB or to the MSB of a 16-bit container.
3. A DMA engine that transfers image data directly to the user memory space of the Host PC.

The `multistream` sample program shows how to create 4 instances of EGrabber and start acquisition on 4 concurrent data streams.

5.5. Link Configuration

Automatic Link Configuration

The Coaxlink Driver provides an automatic link discovery and configuration for CoaXPress 1.0 and CoaXPress 1.1 devices.

For each connection of the CoaXPress Host interface, the discovery procedure determines:

- The presence of a CoaXPress Device
- The speed of the down-connection (Device to Host)
- The connection ID

The discovery results are reported through the `CxpConnectionState`, `CxpDownConnectionSpeed` and `CxpDeviceConnectionID` features of the Interface module.

The user is invited to check if the resulting link configuration is appropriate:

- For the application needs in terms of link bandwidth (link speed and number of connections)
- For Coaxlink in terms of camera connection schemes supported by the target Coaxlink product/firmware combination

Manual Link Configuration

If necessary, the user can manually configure the CoaXPress link of the Remote Device.

This can be achieved, regardless of the camera brand, by assigning the appropriate value to the `CxpLinkConfiguration GenApi` feature of the Coaxlink device module.

Assigning the value `Preferred` enforces the preferred link configuration of the camera:

- The link speed is set to the specified value
- The link width is set to the specified value but, possibly limited to the number of available connections on the Coaxlink side

5.6. CoaXPress 1.1.1 Discovery

The **10.1.3 Discover Devices and Connection Topology** paragraph of the CoaXPress 1.1.1 standard claims:

"The Host shall read the `ConnectionConfigDefault` register to find the number of expected connections. It shall then write to the `ConnectionConfig` register to enable the number of connections read from `ConnectionConfigDefault`. However it shall not change from the discovery rate at this stage."

The **10.3.33 ConnectionConfig** paragraph of the CoaXPress 1.1.1 standard claims:

"This register shall hold a valid combination of the Device connection speed and number of active downconnections. Writing to this register shall set the connection speeds on the specified connections, and the high speed upconnection, if supported. If the new `ConnectionConfig` value results in a change of connection speed, the Device shall acknowledge the `ConnectionConfig` access at the original connection speed. Therefore it shall acknowledge the access before changing connection speed."

Note: *Not all theoretical combinations of connection speed and number of connections may be usable. One register is used to ensure that the two variables are set simultaneously. The XML file and product documentation give valid combinations for the Device. A connection reset sets the value corresponding to the selected discovery rate and one connection.*

Considering that:


1. the above paragraphs disagree on the value that should be written to the `ConnectionConfig` register,
2. changing the behavior to respect CoaXPress 1.1.1 statements causes issues with some cameras,

the CoaXPress discovery procedure of the Coaxlink Driver is not modified to comply with CoaXPress 1.1.1.

At the end of the discovery procedure, the Coaxlink Driver sets the speed and the number of the connections of the CoaXPress Link according to the settings of `ConnectionConfigDefault` register of the camera.

5.7. Power Over CoaXPress

Each connection of the CoaXPress Host connector is capable of delivering power to the camera through the CoaXPress cable.

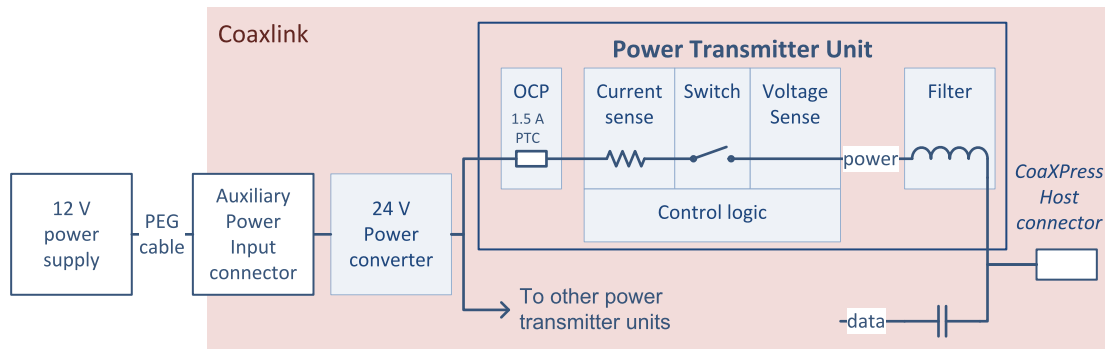

PoCXP Functional Block Diagram for cards with 12V-to-24V power converter

Power Transmitter Unit

The Power Transmitting Unit – PTU – is responsible for a safe delivery of power.

It fulfills all the requirements of the CoaXPress standard for a CoaXPress Host, namely:

- It is capable of delivering up to 17 W of 24 V DC power to the connector
- It implements an over-current protection device – OCP
- It supports the CoaXPress PoCXP detection method

In addition, it provides the application with the capability of:

- Controlling the PoCXP automatic detection
- Disabling or interrupting the power delivery
- Resetting the OCP when tripped

12V Power Input with built-in 12V-to-24 V Power Converter

Applies to:

All the PTU's of a PCI Express Coaxlink card are powered by an external 12 V power supply through an on-board 12 V to 24 V power converter on the Coaxlink card.

The external 12 V supply is attached to the **auxiliary power input connector** through a 6-pin PEG cable.

Note: *The 12 V supply is typically delivered by the power supply of the Host PC.*

The `AuxiliaryPowerInput` feature reports the status of the connection made by the PEG cable between the external power supply and the Coaxlink auxiliary power input connector.

The `CxpPoCxpPowerInputStatus` feature reports the status of the 24 V power converter.

24V Power Input

Applies to:

All the PTU's of a PCIe/104 Coaxlink card are powered by an external 24 V power supply.

The external 24 V supply is attached to the **auxiliary power input connector** through a 4-pin cable.

The `AuxiliaryPowerInput` feature reports the status of the connection made by the power cable between the external power supply and the Coaxlink auxiliary power input connector.

The `CxpPoCxpPowerInputStatus` feature reports the status of the 24 V input.

PTU Control Logic

On execution of the `CxpPoCxpAuto` command the PTU controller initiates a **PoCXP device detection procedure**.

If the **PoCXP device detection procedure terminates successfully**, the PTU applies power by closing the switch.

If the **PoCXP device detection procedure fails**, the controller doesn't apply power and retries a new PoCXP detection procedure. Possible causes of failure are:

- The external power is not connected (`AuxiliaryPowerInput = Unconnected`)
- The external power source is off (`CxpPoCxpPowerInputStatus = NotOK`)
- There are no camera attached
- The attached camera is not PoCXP compliant

Once the power is applied, the controller remains in that state until any of the following situations occurs:

- The application disables the power delivery by executing the `PoCxpTurnOff` command.
- The external power source is disconnected (`CxpPoCxpPowerInputStatus = NotOK`)
- The external power source is turned off (`CxpPoCxpPowerInputStatus = NotOK`)
- The CoaXPress cable is disconnected (The average output current measured over a time interval of 0.3 seconds is less than 8 mA)
- The OCP trips (The output voltage drops for a time interval greater than 20 milliseconds)

On execution of the `CxpPoCxpTurnOff` command the PTU turns off the switch and disables PoCXP powering. In that state, the PTU is not performing PoCXP detection procedures.

The `CxpPoCxpConfigurationStatus` feature reports the configuration status of the PTU: `Off` or `AUTO`

The `CxpPoCxpStatus` feature reports the status of the PTU: `Off`, `On` or `Tripped`.

IMPORTANT NOTE

For users of early versions of the Coaxlink Driver

Since version 3.1 of the Coaxlink Driver, PoCXP powering is enabled at system power-up.

Consequently, when using PoCXP powered camera(s), the application is not anymore required to enable PoCXP powering by issuing a `CxpPoCxpAuto` command.

Over-current Protection

The OCP circuit is built with a PTC device providing two kind of protections:

- The overload protection addresses the cases when the load is excessive.
- The short-circuit protection addresses the cases of accidental short-circuits.

In case of overload, the PTC trips (= opens progressively the circuit) after several seconds or minutes depending on the current level and the ambient temperature. The higher the current, the lower the time to trip. The same applies to the ambient temperature.

In case of short-circuit, the PTC trips immediately. Consequently, the PTU controller enters the tripped state and opens the switch. The tripped PTC device returns to the conducting state after having cooled down. This may take a few seconds. However, the PTU controller remains in the tripped state until the application issues a `CxpPoCxpTripReset` command. Having left the tripped state, the PTU can initiate a new PoCXP device detection and, if successful, re-establish power.

Note: *The PTC is sized to sustain 17 W of power over the whole operating temperature range without tripping.*

Note: *Extracting more than 17 W of power and/or operating the Coaxlink card above the operating temperature range is prohibited since it may induce unexpected PTC trips.*

5.8. CoaXPress I/O Channel

According to the CoaXPress 1.0 and 1.1 standards, the CoaXPress I/O Channel:

- Is one of the three logical channels of the CoaXPress Link (I/O, Stream, Control)
- Is defined only for the master connection (connection 0) of a CoaXPress Link
- Is used for transmitting of high-priority "triggers" between the Host and the Device
- On CoaXPress 1.0 only, is used for exchanging the state of GPIO registers between the Host and the Device

Coaxlink implements only the CoaXPress Host to Device trigger!

Note: *CoaXPress Device to Host trigger and CoaXPress 1.0 GPIO are NOT implemented.*

5.9. CoaXPress Host To Device Trigger

The CoaXPress Host To Device Trigger is a functionality of the CoaXPress I/O Channel that allows the Host (frame grabber) to trigger the Device (camera) through the CoaXPress Link.

The CoaXPress Host Interface of Coaxlink implements one CoaXPress Host to Device trigger transmitter for **each connected Device**.

Host to Device Trigger Source

The CoaXPress Host to Device Trigger transmitter can be sourced from:

- The Camera Trigger output of the associated Camera and Illumination Controller
- Any input-capable General Purpose I/O

The trigger source is indirectly controlled through the `CameraControlMethod` GenICam feature.

- When `CameraControlMethod` is set to `RG` or `RC`, the trigger source is the Camera Trigger output of the associated Camera and Illumination Controller.
- When `CameraControlMethod` is set to `EXTERNAL`:
 - The trigger source is the line source of a dedicated LIN tool of the I/O Toolbox: `LIN1` for Device0, `LIN2` for Device1, `LIN3` for Device2, and `LIN4` for Device3.
 - Any input-capable GPIO line can be used as trigger source by configuring the line source – `LineInputToolSource` – of the dedicated LIN tool.
 - The polarity of the external trigger signal can be controlled with the `LineInverter` setting of the selected I/O Control block.
 - The time constant of the glitch-removal filter can be adjusted through the `LineFilterStrength` setting of the selected I/O Control block.
- When `CameraControlMethod` is set to `NC`, the Host to Device Trigger transmitter is disabled.

Host to Device Trigger Transmitter - Default Settings

The Coaxlink implementation of the CoaXPress Host to Device Trigger transmitter complies with the requirements of the CoaXPress 1.0 and 1.1 standards for a low-speed CoaXPress Host to Device Trigger when it is configured with the default settings:

- `CxpTriggerMessageFormat` = `Pulse`
- `CxpTriggerAckTimeout` = `20.0`
- `CxpTriggerMaxResendCount` = `3`

The transmitter **initiates a trigger transaction** on both edges of the trigger source signal:

- It computes a delay value allowing the receiving device to recreate the event with a fixed latency. For more information, refer to: .

- It inserts a high-priority "trigger packet" on the low-speed host-to-device connection at the next character boundary.

Then, the transmitter waits for the **acknowledgment** from the Device (camera):


- If the acknowledgement is received before the expiration of the timeout, the transaction terminates normally.
- If no acknowledgement is received within the 20 μ s timeout, the transmitter performs a **retry**: it resends the trigger packet and initiates a new waiting period for the acknowledgement.
- If no acknowledgement is received after 3 times, the transaction terminates abnormally.

The transmitter doesn't initiate a new transaction while the previous one is not completed.


Default settings

```
CxpTriggerMessageFormat = Pulse; CxpTriggerAckTimeout = 20.0; CxpTriggerMaxResendCount = 3;
```

 Case 1: CameraControlMethod = RG; camera replies immediately with ACK



Case 2: CameraControlMethod = RC; camera replies immediately with ACK

 

Case 3: no reply from camera: retry after timeout (20 us); transaction aborted after 3 retries



Trigger message transactions using default settings
Case 1 and case 2: the camera acknowledges each message as expected
Case 3: no acknowledgment from camera. Abort after 3 retries

Events Reporting

The transmitter reports the following events:

- CxpTriggerAck: Received acknowledgement for CoaXPress Host to Device trigger packet.
- CxpTriggerResend: Resent CoaXPress Host to Device trigger packet.

Host to Device Trigger Transmitter - Alternate Settings

The transmitter can be customized:

- To send trigger messages only on the rising edge of the source signal using the *Message Format Control*

- To configure the acknowledge timeout and the number of retries using the *Message Acknowledge Control*

Message Format Control

The Host to Device Trigger transmitter unit of Coaxlink provides a "message format" control with the `CxpTriggerMessageFormat` GenICam feature.

Pulse Message Format (Default)

By default, `CxpTriggerMessageFormat` is set to `Pulse`: the transmitter generates a CoaXPress I/O Channel Host to Device Trigger transaction on **both edges** of the input pulse:

- The transaction initiated by the rising edge transmits a **rising edge trigger packet** from the Host to the Device.
- The transaction initiated by the falling edge transmits a **falling edge trigger packet** from the Host to the Device.

Note: *Every trigger pulse requires two distinct CoaXPress I/O Channel transactions!*

Rising Edge Message Format

When `CxpTriggerMessageFormat` is set to `RisingEdge`, the transmitter generates a CoaXPress I/O Channel Host to Device Trigger transaction on **the rising edge only** of the input pulse.

The transaction always transmits a **rising edge trigger packet** from the Host to the Device.

Note: *Every trigger pulse requires a single CoaXPress I/O Channel transaction.*

Note: *This format does not allow the grabber to control the exposure time!*

Toggle Message Format

When `CxpTriggerMessageFormat` is set to `Toggle`, the transmitter generates a CoaXPress I/O Channel Host to Device Trigger transaction on **the rising edge only** of the input pulse.

The transaction alternatively transmits a **rising edge trigger packet** and a **falling edge trigger packet**.

Note: *Every trigger pulse requires a single CoaXPress I/O Channel transaction.*

Note: *This format does not allow the grabber to control the exposure time!*

The `CxpTriggerLevel` feature allows the application to set and/or get the current level of the CoaXPress Host to Device Trigger signal.

Message Acknowledge Control

The Host to Device Trigger transmitter unit provides a user-configurable trigger packet acknowledgement mechanism:

- The time-out value is configurable using the `CxpTriggerAckTimeout` GenICam feature.
- The number of retries is configurable using the `CxpTriggerMaxResendCount` GenICam feature.

Enable Acknowledge Checking (Default)

By default, `CxpTriggerAckTimeout` is set to 20.0 (20 microseconds) and `CxpTriggerMaxResendCount` is set to 3.

Coaxlink expects an I/O Channel Acknowledgement packet in response to every Trigger packet. If the acknowledgement packet is not received within the 20 μs time-out value, the transmitter resends the trigger packet. It performs up to 3 retries.

Setting larger `CxpTriggerAckTimeout` values allows more time for the Device to acknowledge the trigger packet.

Disable Acknowledge Checking

Setting `CxpTriggerAckTimeout` to 0 disables the acknowledgement mechanism. The trigger transaction terminates immediately after having sent the trigger packet.

Alternate settings

Case 1: `CameraControlMethod = RG;CxpTriggerMessageFormat = Pulse; CxpTriggerAckTimeout = 0;`



Case 2: `CameraControlMethod = RC;CxpTriggerMessageFormat = Pulse; CxpTriggerAckTimeout = 0;`



Case 3: `CameraControlMethod = RC;CxpTriggerMessageFormat = Rising; CxpTriggerAckTimeout = 0;`



Case 4: `CameraControlMethod = RC;CxpTriggerMessageFormat = Toggle; CxpTriggerAckTimeout = 0;`



Trigger message transactions using alternate settings to allow higher trigger rates

Alternate settings for fastest trigger rate

The fastest trigger rate of 297.6 kHz can be achieved when:

- CameraControlMethod = RC (asynchronous reset camera, camera-controlled exposure),
- CxpTriggerAckTimeout = 0 (acknowledge checking disabled),
- CxpTriggerMessageFormat = Rising Or CxpTriggerMessageFormat = Toggle


Camera Trigger to Exposure Latency

Trigger Accuracy

The Host to Device trigger packets are transmitted over the low-speed (20.833 Mbps) connection of the CoaXPress Link. The transmission of trigger packets can only start at the boundary of a character. This introduces a jitter of 480 nanoseconds corresponding to one character transmission time.

To minimize trigger jitter, the time between the trigger event and the trigger packet being sent is encoded into the trigger packet as a delay value expressed in units of 2 ns (1/24th of the bit period). The receiver (camera) can then use this value to recreate the trigger event with a **fixed latency**. It compensates the transmission jitter by delaying the decoded message by the remaining fraction of one character time.

CoaXPress Camera Trigger transmission Timing

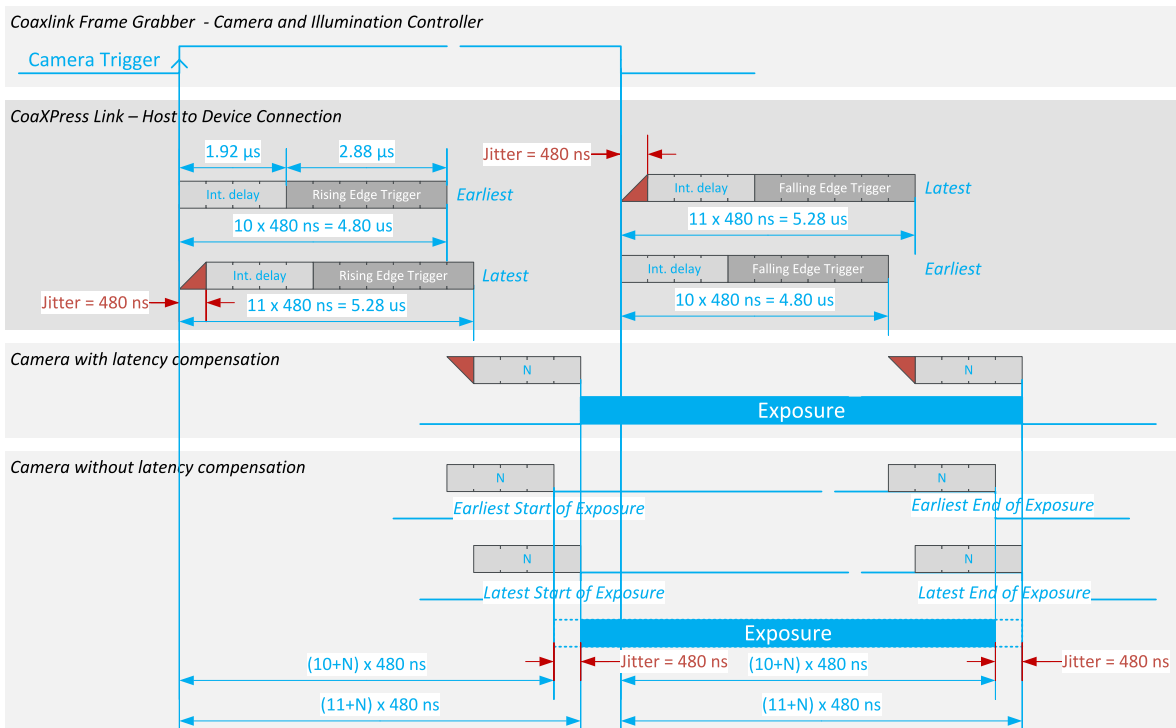

CIC Camera Trigger to Sensor Exposure timing diagrams

The above diagram shows the time delay required to propagate Camera Trigger events from the frame grabber up to the camera through the CoaXPress Link using Host to Device CoaXPress Trigger messages.

The above diagram assumes that:

- CameraControlMethod is set to RG.
- The camera properly acknowledges the trigger messages and effectively initiates a new exposure.

The delay from the rising (or the falling) edge of the Camera Trigger signal (inside the Coaxlink card) up the CoaXPress link is composed of:

- A variable delay of 0-480 ns corresponding to the time delay until the next character boundary on the low-speed CoaXPress connection.
- A fixed delay of 1.92 μ s corresponding to a 4-character pipeline delay in the Trigger Transmitter implementation.
- A fixed delay of 2.88 μ s corresponding to a 6-character message transmission time.

The delay from the CoaXPress Link to the effective start (or end) of exposure is camera-dependent. In the above drawing, this delay is assumed to be N character times (with N=4).

Jitter-compensated cameras

When the camera implements the CoaXPress jitter compensation, the one-character jitter (480 ns) introduced by the transmitter can be entirely compensated.

The overall latency is **fixed** but it remains camera-dependent: the lowest possible latency with Coaxlink products is 11 x 480 ns, i.e. 5.28 μ s.

The residual jitter after compensation can be as low as 4 ns.

Jitter-Uncompensated cameras









When the camera doesn't implement the CoaXPress jitter compensation, the one-character jitter (480 ns) introduced by the transmitter remains.

The overall latency is **variable** and camera-dependent: the lowest possible latency with Coaxlink products is (10 ~ 11) x 480 ns, i.e. (4.80 ~ 5.28) μ s.

5.10. CoaXPress Lamps

Each connector of the CoaXPress Host Interface is associated with a *CoaXPress Host Indicator Lamp* that indicates the state of the CoaXPress Link connection.

CoaXPress Host Connector Indicator Lamps State

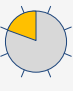Symbol	Lamp State	Meaning
	Off	The Coaxlink card is not powered
	Solid orange	System booting
	Fast flash alternate green / orange	The connection detection is in progress; PoCXP is active. <i>This state is shown for a minimum of 1s even if the connection detection is faster</i>
	Fast flash orange	The connection detection is in progress; PoCXP is off. <i>This state is shown for a minimum of 1s even if the connection detection is faster</i>
	Solid red	The PoCXP over-current protection has tripped.
	Solid green	The Device to Host connection is established, but no data being transferred
	Slow pulse orange	The Device to Host connection is established, but the Host is waiting for a trigger.
	Fast flash green.	The Device to Host connection is established and image data is being transferred

Flashing Lamp States Timing Definitions

Indication	Timing
Fast flash	12.5Hz @25% duty cycle: 20 ms on, 60 ms off
Fast flash alternate (color 1/color 2)	12.5Hz @25% duty cycle: 20 ms on (color 1), 60 ms off, 20 ms on (color 2), 60 ms off
Slow flash	0.5Hz @50% duty cycle: 1 second on, 1 second off
Slow pulse (red orange)	1Hz @ 20% duty cycle: 200ms on, 800ms off

5.11. Connection Test

The CoaXPress Host Interface of Coaxlink provides connection test facilities to test the quality up- and down-connections of the CoaXPress link according to the procedures defined in section 8.7 of the CoaXPress 1.1 standard.

For each individual CoaXPress connector, it implements

- A test generator
- A test receiver

The test generator transmits a Test Data Packet containing a known test pattern produced by a sequence generator. It increments the packet counter for each test packet transmitted.

The test receiver compares the received test data packet content against its local sequence generator. It increments the error counter for each word that is different in the data packet, and increments the packet counter for each test packet received.

Note: *The test packet counters show how many test packets have been sent and received, so allowing a judgment to be made on the statistical meaning of the value in the error counter.*

Note: *Both Device to Host and Host to Device connection tests can be run at the same time.*

5.12. CoaXPress Link Validation Tool

Introduction

Short Description

The *CoaXPress Link Validation Tool* (CXLVT) can be used to validate the operational parameters of a CoaXPress Link.

For a *quick test*, run the CXLVT until reaching a confidence level of 100% that the probability of single bit error (PER) is 10^{-10} or better 10^{-11} . This should just take a *few minutes*.

For an *extensive test*, run the CXLVT until reaching a confidence level of 100% that the PER is 10^{-12} or better 10^{-13} . This will take a *few hours*.

Note: For more information about the theory of bit error rate testing, please refer to http://en.wikipedia.org/wiki/Bit_error_rate.

Host PC requirements

- The Host PC must be equipped with at least one EURESYS Coaxlink board.
- The Coaxlink Driver version 9.3.2 must be installed on the Host PC.

Camera requirements

- The camera must be capable to generate a static image pattern.

Installation

The CXLVT is included in `gentl.exe`, a command-line tool that is delivered with the Coaxlink Driver since version 9.3.2. No further installation is required.

gentl ber Command

The CXLVT is invoked with the command `ber` of `gentl.exe`.

```

$ gentl ber --help
GenTL Explorer

gentl ber [OPTIONS]
  Measure bit error rate confidence level (a.k.a. link validation tool)

Flags:
  --if=ID           Interface ID
  --dev=ID          Device ID
  --ds=ID           DataStream ID
  --buffers=INT     Buffer count (default: 4)
  --set=SETTINGS    GenApi settings, such as Module.Feature=INT
  --setup=FILE      Path to script to execute before starting stream
  --run=FILE        Path to script to execute concurrently with stream
  --remotexml=FILE  Use FILE as register description (default:
                    register description is read from remote device)
  -c --create-only  Create a reference pattern and quit (requires
                    --output)
  -i --input=FILE   Input reference pattern file (default:
                    automatically create a reference image before
                    measuring the bit error rate confidence level)
  -o --output=FILE  Output reference pattern file (default: no output
                    file)
  --enable-dump=FILE Enable dump of defective surfaces to files with
                    the given file path prefix

Common flags:
  --cti=LIBPATH     Path to GenTL producer library. Default: use
                    EURESYS_COAXLINK_GENTL64_CTI and
                    GENICAM_GENTL64_PATH environment variables to locate
                    the library.
  -j=N             Limit the number of CPU cores to use to N
                    (default: 2)
  -h --help        Display help message
  -V --version     Print version information
  --numeric-version Print just the version number
  -v --verbose     Loud verbosity
  -q --quiet       Quiet verbosity

```

gentl ber --help


```

> help
Ber commands:
  levels                show confidence levels
  levels -N            show confidence levels every N seconds
  results              show intermediate bit error rate results
  results -N          show intermediate bit error rate results every N
                    seconds
  report FILE         write current report to a file
  enable-dump FILE    enable dump of defective surfaces to files with the
                    given file path prefix
  disable-dump        disable dump of defective surfaces
General commands:
  quiet              set verbosity level to quiet
  normal            set verbosity level to normal
  loud              set verbosity level to loud
  help              display this help message
  exit              exit the CLI
>

```

gentl ber commands

Test procedure

To setup the *CoaxPress Link Validation Tool* proceed as follows:

1. With GenICam Browser:
 - Configure the camera as for normal operation and select a fixed test-pattern as video source
 - Configure the frame grabber as for normal operation
2. Open a command shell and execute `gentl ber` to start a Read-Eval-Print-Loop
3. Get intermediate results using the `results` command
 - Check if the number of acquired images counter increases regularly
 - Check the confidence levels
4. Run the test until the required confidence levels are reached. This may require several hours.

Operation

The CoaXPress Link Validation Tool (CXLVT) validates the operational parameters of a CoaXPress Link installation (bit rate, cable type, cable length) resulting in reliable, long-term performance.

CXLVT does this by estimating, with a known confidence level, the probability of single bit errors in a CoaXPress Link setup.

We define:

- **PER:** Probability of single bit error in a digital connection like a CoaXPress Link; this is an unknown quantity that we want to estimate
- **BER:** Bit Error Rate, actually measured by the CXLVT

It is generally accepted that a CoaXPress Link will operate reliably, if $PER < 10^{-12}$. This criterion is similar to the one used in other digital serial image transmission schemes. Of course, a better (lower) PER will provide even more assurance that the operation is reliable.

The CXLVT computes the confidence level (CL), or likelihood, that the PER is less than a set of values (10^{-10} , 10^{-11} , 10^{-12} , 10^{-13} , 10^{-14}), based on the measurement of the BER, during a time sufficiently long to accumulate the necessary evidence.

When started, the CXLVT displays these confidence levels, as evidence accumulates with the passing of time, as illustrated in the screenshots hereafter.

Entering the `levels` command, during the operation of the CXLVT, displays the confidence levels for the 5 PER values.

```
> levels
-----
Confidence level (rounded) that the probability of error is less than:
      1.0e-10      1.0e-11      1.0e-12      1.0e-13      1.0e-14      H:MM:SS
-----
      99.99%      64.97%      9.95%      1.04%      0.10%      0:08:56
>
```

Confidence levels reported 8 seconds after start

After 8 seconds, we have reached 99.99 % confidence level that the PER is less than 10^{-10} . The PER might very well be much better than that, but at this stage we have insufficient evidence to conclude that this is the case. The CXLVT must be continued.

By entering the `results` command, during the operation of the CXLVT, additional information can be displayed, after which the CXLVT continues its normal operation, for as long as necessary, to achieve the required confidence level for a predetermined PER.

```
> results
Intermediate results:
-----
Duration (hours:minutes:seconds):          0:16:37
Duration (seconds):                        997
Acquired images:                          11975
Bad images:                                0
Acquired bits:                             1.986509e11
Bit errors:                                0.000000e0
Average bit errors per bad image:          0
Bit rate (bits per second):                1.992486e8
Bit error rate:                            0.000000e0
Confidence level (rounded) that the probability of error
is less than 1.0e-10:                      99.99%
          1.0e-11:                          86.28%
          1.0e-12:                          18.01%
          1.0e-13:                           1.96%
          1.0e-14:                           0.19%
> █
```

Intermediate results reported after 16 minutes

From this screenshot, we can already conclude that the confidence level that the PER is less than 10^{-11} has risen from 64.97 % to 86.28 %, after 16 minutes.

The CXLVT should be continued until the confidence level that the PER is less than 10^{-12} (at most – a stronger test would be a PER less than 10^{-13}) has reached a satisfactory level (at least 95 %, and 99 % for a stronger result). This may require quite some time, because these outcomes require a significant amount of evidence.

```
Intermediate results:
-----
Duration (hours:minutes:seconds):          3:30:12
Duration (seconds):                        12612
Acquired images:                           149753
Bad images:                                0
Acquired bits:                             2.484223e12
Bit errors:                                0.000000e0
Average bit errors per bad image:          0
Bit rate (bits per second):                1.969729e8
Bit error rate:                            0.000000e0
Confidence level (rounded) that the probability of error
is less than 1.0e-10:                      100.00%
      1.0e-11:                             99.99%
      1.0e-12:                             91.66%
      1.0e-13:                             21.99%
      1.0e-14:                             2.45%
```

Intermediate results reported after 3.5 hours

From this screenshot, we can conclude that the confidence level that the PER is less than 10^{-12} has risen from 18.01 % to 91.66 %, after 3.5 hours.

To generate a report, execute the `report` command.

```
> report ber-report
Report ber-report-20171107-093451.log successfully created
> █
```

Generate a report command line

6. CoaXPress Data Forwarding

Applies to:

6.1. Data Forwarding Principles	70
6.2. Data Forwarding Connection Schemes	72
6.3. Line-scan Triggers Synchronization	74
6.4. Configuration Script Example	75

The data forwarding capabilities of 1635 Coaxlink Quad G3 DF allows to forward the image data from a camera to multiple frame grabbers in different Host PC's.

6.1. Data Forwarding Principles

Data forwarding

A **DF-capable** card, such as the 1635 Coaxlink Quad G3 DF, forwards the data received on the CoaXPress Host connector to the CoaXPress Data Forwarding connector.

The image data packets embedded in the serial bit stream on connections A, B, C, D of the CoaXPress Host connector are forwarded to the connections FA, FB, FC, FD of the CoaXPress Data Forwarding connector.

The serial bit streams are re-timed to operate always at CXP-6 speed regardless the link speed of the camera. Therefore, idle characters are, when necessary, removed or added in the bit stream. Addition or removal of idle characters doesn't affect the payload. Image data are preserved, including CRC's. For proper operation of data forwarding, it is mandatory that the camera inserts one IDLE word at least once every 100 words as required by the Coaxlink 1.1 standard §8.2.5.1.

The image data are retransmitted with a negligible latency: typically, a few periods of the 32-bit character transmission time.

Note: *The Data Forwarding output port doesn't comply with the specification of a CoaXPress Device! It can only feed another 1635 Coaxlink Quad G3 DF.*

Data Forwarding Chain

A **DF-chain** is composed of 2 or more data-forwarding capable cards where the CoaXPress Data Forwarding connector of one card is connected to the CoaXPress Host connector of the next card using a set of 1, 2 or 4 coaxial cables named **DF-bridge**.

Note: *There are no specified upper limit to the number of cards in a DF-chain.*

The camera is attached to the CoaXPress Host connector of the first card of the DF-chain, this card is named **DF-master**. The other cards, of the DF-chain are named **DF-slaves**. The CoaXPress Data Forwarding connector of the last DF-slave card is left unconnected.

CoaXPress Link discovery and configuration

The DF-master card is responsible for the discovery and the configuration of the CoaXPress Link of the camera.

The CoaXPress Host Interface of the DF-slaves are automatically configured with the same number of connections as discovered by the DF-Master.

For instance if the camera uses two connections, only two connections are required for every DF-bridge.

Firmware variants

The firmware variant to install on the DF-master must be selected according to the camera

type:

- For an area-scan camera, install the `1-camera` firmware variant.
- For a line-scan camera, install the `1-camera, line-scan` firmware variant.

The firmware variant to install on the DF-slaves must match the firmware variant installed on the DF-master:

- When the `1-camera` firmware variant is installed on the DF-master, install the `1-df-camera` firmware variant on all DF-slaves.
- When `1-camera, line-scan` firmware variant is installed on the DF-master, install the `1-df-camera, line-scan` firmware variant on all DF-slaves.

Data Acquisition Control

For correct operation of data forwarding, the application must respect the following rules:

- The data acquisition must be activated on all the DF-slaves before being activated on the DF-master.
- The data acquisition must be de-activated on the DF-master before being de-activated on the DF-slaves.

For line-scan applications only, a start-of-scan and end-of-scan synchronization mechanism is implemented to ensure that all the cards of the DF-chain can capture the same lines of image data.

Refer to "[Line-scan Triggers Synchronization](#)" on [page 74](#) for more info.

Camera Cycle Control

If required by the application, the DF-master card is responsible for the elaboration of the CoaXPress Host-to-Device trigger. This is achieved in the same way as for non-data-forwarding Coaxlink cards.


Refer to "[CoaXPress Host To Device Trigger](#)" on [page 55](#) for more details.

6.2. Data Forwarding Connection Schemes

Area-scan Camera Data Forwarding

The following drawing illustrates 3 connection schemes where the image data of an area-scan camera is forwarded to 3 Host PCs: one for a 4-connection camera, one for a 2-connection camera, one for a single-connection camera.


The first 1635 Coaxlink Quad G3 DF card must be configured with a 1-camera firmware variant; the other must be configured with the 1-df-camera firmware variant.

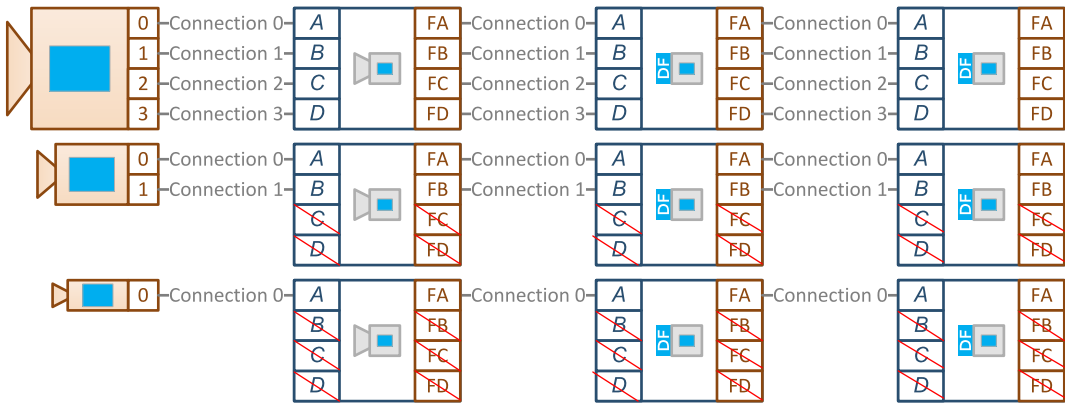

Line-scan Camera Data Forwarding

The following drawing illustrates 3 connection schemes where the image data of a line-scan is forwarded to 3 Host PCs: one for a 4-connection camera, one for a 2-connection camera, one for a single-connection camera.

The first 1635 Coaxlink Quad G3 DF card must be configured with a 1-camera, line-scan firmware variant; the other must be configured with the 1-df-camera, line-scan firmware variant.

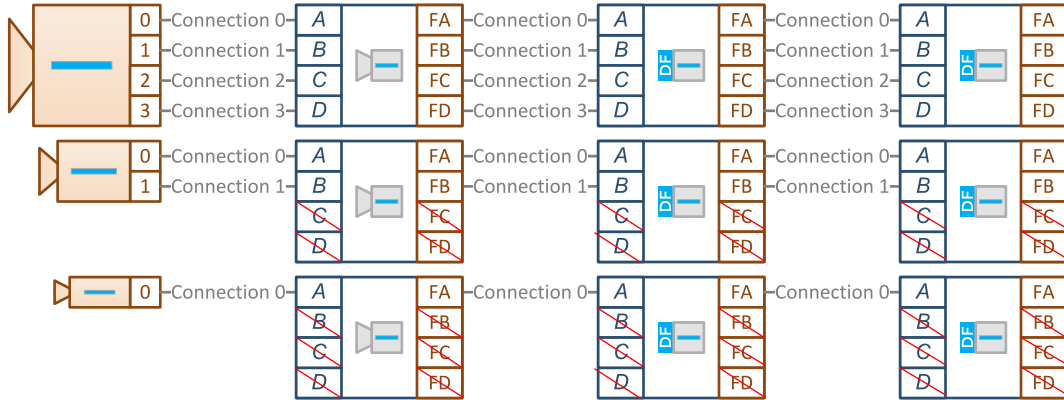

6.3. Line-scan Triggers Synchronization

The start-of-scan and end-of-scan trigger synchronization mechanism ensures that all the cards of the DF-chain capture the same lines of image data.

DF-master Card

In a DF-chain, the DF-master card forwards its start-of-scan and end-of-scan events to the DF-slave cards.

The generation of the start-of-scan and end-of-scan events on the DF-master is achieved in the same way as for non-data-forwarding Coaxlink cards. Refer to "[Line Scan Acquisition](#)" on [page 115](#) for more details.

The DF-master card:

- First, synchronizes the asynchronous scan triggers on the next start-of line image data.
- Then, share the synchronized scan triggers with all the DF-slaves.

The sharing of the scan triggers is achieved by the insertion of high-priority "custom GPIO messages" in the bit stream. These messages are forwarded by all the DF-slaves together with the image data.

DF-slave Card(s)

On reception of such a message, the DF-slave generates a hardware event. Two kind of events are possible:

- Start-of-scan event.
- End-of-scan event

These events are available through the "[Event Input Tool](#)" on [page 156](#) of the I/O Toolbox.

For applications requiring synchronized line-scan acquisition, the I/O toolbox EIN tools of the DF-slaves must be used as local start-of-scan and end-of-scan trigger sources.

6.4. Configuration Script Example

The following script configures Data Forwarding frame grabbers for synchronized line-scan acquisition:

```
for (var grabber of grabbers) {
  if (grabber.InterfacePort.get("InterfaceID").includes('df-camera')) {
    console.log("Configuring slave card");
    // set the Width/Height/PixelFormat of the (virtual) remote device (on
    // the slave card) equal to the Width/Height/PixelFormat of the (real)
    // camera (connected to the master card)
    grabber.RemotePort.set("Width", 8192);
    grabber.RemotePort.set("Height", 1);
    grabber.RemotePort.set("PixelFormat", "Mono8");
    // configure the event input tool EIN1
    grabber.InterfacePort.set("EventInputToolSource[EIN1]", "A");
    grabber.InterfacePort.set("EventInputToolActivation[EIN1]", "StartOfScan");
    // configure the event input tool EIN2
    grabber.InterfacePort.set("EventInputToolSource[EIN2]", "A");
    grabber.InterfacePort.set("EventInputToolActivation[EIN2]", "EndOfScan");
    // configure start/end of scan triggers
    grabber.StreamPort.set("StartOfScanTriggerSource", "EIN1");
    grabber.StreamPort.set("EndOfScanTriggerSource", "ScanLength");
    grabber.StreamPort.set("ScanLength", 1000);
  } else {
    console.log("Configuring master card");
    grabber.RemotePort.set("TestPattern", "GreyDiagonalRampMoving");
    grabber.RemotePort.set("CxpLinkConfiguration", "CXP6_X4");
    grabber.RemotePort.set("CxpLinkConfigurationPreferredSwitch", "CXP6_X4");
    grabber.RemotePort.set("TriggerSource", "CXPin");
    grabber.RemotePort.set("TriggerMode", "On");
    grabber.DevicePort.set("CameraControlMethod", "RG");
    grabber.DevicePort.set("ExposureReadoutOverlap", "True");
    grabber.DevicePort.set("CxpTriggerAckTimeout", "0");
    grabber.DevicePort.set("StrobeDuration", "0");
    grabber.DevicePort.set("ExposureTime", "20");
    grabber.DevicePort.set("ExposureRecoveryTime", "0");
    grabber.DevicePort.set("CycleMinimumPeriod", "50");
    // configure start/end of scan triggers
    grabber.StreamPort.set("StartOfScanTriggerSource", "Immediate");
    grabber.StreamPort.set("EndOfScanTriggerSource", "ScanLength");
    grabber.StreamPort.set("ScanLength", 1000);
  }
}
```

Note: In this example, the start-of-scan trigger is the receipt of the start-of-scan event from the master, but the end-of-scan trigger is generated locally. One alternative would be to use `EIN2` as `EndOfScanTriggerSource`.

7. Image Data Flow

7.1. FIFO Buffer	77
7.2. Acquisition Gate	78
7.3. Pixel Data Processing	79
7.4. Pixel Data Processing Configurations	81

This section describes the flow of the image data through Coaxlink.

The image data extracted by the CoaXPress Host Interface from the CoaXPress data stream flows through the following stages:

1. The on-board **FIFO buffer** that temporarily stores the raw image data together with related metadata such as image size, pixel type, time-stamp...
2. The **Acquisition Gate** that controls the data extraction and filters out the image data that doesn't need to be acquired.
3. The **Pixel Data Processing stages** that performs on-the-fly pixel processing.

Finally, the **image data is transferred** to the Host PC.

7.1. FIFO Buffer

The DRAM memory is entirely dedicated to the storage of image data. Its size is product-dependant.

Product	DRAM Memory Size
1629 Coaxlink Duo PCIe/104-EMB	512 MB
1630 Coaxlink Mono	512 MB
1631 Coaxlink Duo	1 GB
1632 Coaxlink Quad	1 GB
1633 Coaxlink Quad G3	1 GB
1634 Coaxlink Duo PCIe/104-MIL	512 MB
1635 Coaxlink Quad G3 DF	1 GB
1637 Coaxlink Quad 3D-LLE	1 GB
1638 Coaxlink Quad CXP-3	128 MB
3602 Coaxlink Octo	2 GB

The DRAM memory is partitioned into independent FIFO buffers according to the number of devices and the number of streams. Refer to ["Firmware Variants per Product" on page 13](#) for the available buffer size per data stream and per device.

The buffer operates as a FIFO to decouple the CoaXPress data flow from the PCI Express data flow. It absorbs temporary dropouts of the PCI Express data flow ensuring a reliable CoaXPress data acquisition. It enables burst-mode CoaXPress data acquisition at the highest data rates regardless the limits of the PCI Express interface.

7.2. Acquisition Gate

The **Acquisition Gate** controls the image data extraction from the on-board FIFO buffer. It discards the image data that doesn't need to be acquired and fed to the [Image Pixel Data Processor](#).

Area Scan Acquisition

The gate opens and closes at frame boundaries based on the application's calls of the `DSSstartAcquisition` and `DSSstopAcquisition` functions.

Note: *The Camera and Illumination Controller indirectly controls the acquisition gating by issuing Camera Triggers using various schemes.*

Line Scan Acquisition

The gate opens and closes at line boundaries according to the application `DSSstartAcquisition` and `DSSstopAcquisition` function calls and, according to the settings of the Image Acquisition Controller, to the Start-of-scan and the End-of-scan triggers.

For more information and configuration instructions, refer to, refer to "[Line Scan Acquisition](#)" on [page 115](#).

7.3. Pixel Data Processing

The Image Pixel Data Processor performs the following successive operations on the image data stream:

CoaXPress bit stream slicing

This operation extracts individual pixel components data from the CoaXPress image data bit stream according to the bit depth – *input-bit-depth* – specified by the '*PixelF*' property of the CoaXPress Image Header.

All components have the same pixel bit depth. Possible values are 8-/10-/12-/14- and 16-bit.

The slicer delivers, for each image line, all the pixel components necessary to build a number of pixels specified by the '*Xsize*' property of the CoaXPress Image Header.

The slicer discards CoaXPress line-padding data.

Lookup Table processing

This operation performs lookup table processing on individual pixel components.

For more information and configuration instructions, refer to "[Lookup Table Processing](#)" on [page 84](#) .

Bayer CFA decoding

This operation transforms the raw Bayer CFA data stream issued by the camera into an RGB color data stream.

For more information and configuration instructions, refer to "[Bayer CFA Decoding](#)" on [page 98](#) .

Pixel component unpacking

This operation unpacks 10-bit, 12-bit, and 14-bit pixel components to 8-bit or 16-bit.

It can be disabled for monochrome and Bayer CFA pixel formats.

For more information and configuration instructions, refer to "[Pixel Component Unpacking](#)" on [page 106](#).

Pixel component ordering

This operation modifies the component order of multi-components pixel data.

For more information and configuration instructions, refer to "[Pixel Component Re-Ordering](#)" on [page 108](#).

Endianness conversion

This operation modifies the byte order of 16-bit pixel component data.

For more information, refer to ["Endianness Conversion" on page 109](#).

Image line build-up

This operation builds concatenates the components data of all pixels of an image line:

- 8-bit pixel components are aligned to byte boundaries
- 16-bit pixel components (possibly expanded by unpacking or lookup table processing) are aligned to word (2-byte) boundaries, the 2 bytes are stored according to the little-endian convention.

Line padding

This operation appends padding bits or bytes to the image line data to reach the next alignment-boundary required by the hardware implementation.

The alignment boundary requirements are product-specific, for instance:

- 64-bit for 1630 Coaxlink Mono, 1631 Coaxlink Duo, and 1632 Coaxlink Quad
- 128-bit for 1633 Coaxlink Quad G3 and 1635 Coaxlink Quad G3 DF

Processing Performances

The pixel processor sustain the highest camera pixel rate. All the above operations are executed while transferring data to the GenTL with a negligible latency. However, particularly when the bit depth is increased, the amount of pixel data to transfer is increased accordingly. In that case, the PCI Express bandwidth limitation may negatively impact the achievable frame- or line-rate.

7.4. Pixel Data Processing Configurations

This topic lists the applicable pixel data processing configurations for every class of camera pixel formats

Monochrome Pixel Formats - LUT disabled

Camera Pixel Format	Unpacking Mode	Output Pixel Format
Mono8	lsb msb off	Mono8
Mono10pmsb	lsb	Mono10
	msb	Mono16
	off	Mono10pmsb
Mono12pmsb	lsb	Mono12
	msb	Mono16
	off	Mono12pmsb
Mono14pmsb	lsb	Mono14
	msb	Mono16
	off	Mono14pmsb
Mono16	lsb msb	Mono16

Monochrome Pixel Formats - LUT enabled

Camera Pixel Format	Lookup Table Configuration	Unpacking Mode	Output Pixel Format
Mono8	M_8x8	lsb msb	Mono8
Mono10pmsb	M_10x8	lsb msb	Mono8
	M_10x10	lsb	Mono10
		msb	Mono16
	M_10x16	lsb msb	Mono16
Mono12pmsb	M_12x8	lsb msb	Mono8
	M_12x12	lsb	Mono12
		msb	Mono16
	M_12x16	lsb msb	Mono16

Bayer CFA Pixel Formats - CFA decoder disabled

Camera Pixel Format	Unpacking Mode	Output Pixel Format
Bayer**8	lsb msb off	Bayer**8
Bayer**10pmsb	lsb	Bayer**10
	msb	Bayer**16
	off	Bayer**10pmsb
Bayer**12pmsb	lsb	Bayer**12
	msb	Bayer**16
	off	Bayer**12pmsb
Bayer**14pmsb	lsb	Bayer**14
	msb	Bayer**16
	off	Bayer**14pmsb
Bayer**16	lsb msb	Bayer**16

Bayer CFA Pixel Formats - CFA decoder enabled

Input Pixel Format	RedBlueSwap	Output Pixel Format
Bayer**8	off	RGB8
	on	BGR8
Bayer**10pmsb	off	RGB10
	on	BGR10
Bayer**12pmsb	off	RGB12
	on	BGR12
Bayer**14pmsb	off	RGB14
	on	BGR14
Bayer16	off	RGB16
	on	BGR16

RGB Pixel Formats

Input Pixel Format	Unpacking Mode	RedBlueSwap	Output Pixel Format
RGB8	lsb msb	off	RGB8
		on	BGR8

Input Pixel Format	Unpacking Mode	RedBlueSwap	Output Pixel Format
RGB10pmsb	lsb	off	RGB10
		on	BGR10
	msb	off	RGB16
		on	BGR16
RGB12pmsb	lsb	off	RGB12
		on	BGR12
	msb	off	RGB16
		on	BGR16
RGB14pmsb	lsb	off	RGB14
		on	BGR14
	msb	off	RGB16
		on	BGR16
RGB16	lsb msb	off	RGB16
		on	BGR16

RGBa Pixel Formats

Input Pixel Format	UnpackingMode	RedBlueSwap	Output Pixel Format
RGBa8	lsb msb off	off on	RGBa8
RGBa10pmsb	lsb	off on	RGBa10
	msb	off on	RGBa16
RGBa12pmsb	lsb	off on	RGBa12
	msb	off on	RGBa16
RGBa14pmsb	lsb	off on	RGBa14
	msb	off on	RGBa16
RGBa16	lsb msb off	off on	RGBa16

8. Lookup Table Processing

Coaxlink Driver provides lookup table capabilities for monochrome pixels on a selected set of product/firmware combinations. Refer to "[Monochrome Lookup Table Processing](#)" on the next page for more information.

Important: *This release of the Coaxlink Driver doesn't provide lookup table processing for color pixel formats.*

Coaxlink Driver provides four methods to define the content of lookup tables. For more information, refer to "[LUT Content Definition](#)" on page 88.

To setup lookup tables, refer to "[LUT Setup Procedure](#)" on page 95

8.1. Monochrome Lookup Table Processing	85
8.2. LUT Availability	86
8.3. LUT Content Definition	88
8.4. LUT Setup Procedure	95

8.1. Monochrome Lookup Table Processing

Configurations

The following table lists all the available lookup table configurations for monochrome pixels:

Configuration	Input Pixel Format [PFNC]	Input bits	Output bits
M_8x8	Mono8, Raw	8	8
M_10x8	Mono10	10	8
M_10x10			10
M_10x16			16
M_12x8	Mono12	12	8
M_12x12			12
M_12x16			16

Note: Monochrome 8-bit pixels can be transformed into monochrome 8-bit pixels, monochrome 10-bit pixels can be transformed into monochrome 8-bit, 10-bit or 16-bit pixels and, monochrome 12-bit pixels can be transformed into monochrome 8-bit, 12-bit or 16-bit pixels.

Lookup Table Data Sets

A **lookup table data set** is defined as the set of data required to configure one lookup table for each component of a pixel. In the case of monochrome pixels, a lookup table data set includes only one single lookup table content.

The number of lookup table data sets that can be uploaded depends on the lookup table configuration:

Configuration	Data Sets
M_8x8	16
M_10x8, M_10x10, M_10x16	4
M_12x8, M_12x12, M_12x16	1

8.2. LUT Availability

This topic lists the supported LUT configurations for all firmware variants and products.

1630 Coaxlink Mono

Firmware Variant	LUT Configurations
1-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16

1631 Coaxlink Duo

Firmware Variant	LUT Configurations
1-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
2-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16

1632 Coaxlink Quad

Firmware Variant	LUT Configurations
1-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
2-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
1-camera, line-scan	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16

1633 Coaxlink Quad G3

Firmware Variant	LUT Configurations
1-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
2-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
4-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
1-camera, line-scan	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
2-camera, line-scan	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
4-camera, line-scan	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
1-camera, 4-data-stream	<i>No LUT processing</i>
1-slm-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
1-sls-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16

1629 Coaxlink Duo PCIe/104-EMB and 1634 Coaxlink Duo PCIe/104-MIL

Firmware Variant	LUT Configurations
1-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
2-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
1-camera, line-scan	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16

1635 Coaxlink Quad G3 DF

Firmware Variant	LUT Configurations
1-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
1-df-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
1-camera, line-scan	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
1-df-camera, line-scan	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16

1638 Coaxlink Quad CXP-3

Firmware Variant	LUT Configurations
4-camera	<i>No LUT processing</i>

3602 Coaxlink Octo

Firmware Variant	LUT Configurations
1-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
2-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
8-camera	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
1-camera, line-scan	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16
2-camera, line-scan	M_8x8, M_10x8, M_10x10, M_10x16, M_12x8, M_12x12, M_12x16

8.3. LUT Content Definition

The Coaxlink Driver provides four methods to define the content of a lookup table.

Response Control Method

This method defines the transfer function of a lookup table by means of four parameters: Contrast, Brightness, Visibility and Negative.

The Contrast and Brightness parameters provide controls similar to the brightness and contrast controls of a television monitor.

The Visibility parameter provides control to smoothly reshape the transfer function to cover the full input range.

The Negative parameter allows transforming an image into its negative image.

Emphasis Method

This method defines the transfer function of a lookup table by means of two parameters: Emphasis and Negative.

It allows transforming an image using a power-law expression also known as γ – Gamma – function.

The Negative parameter allows transforming an image into its negative image.

Threshold Method

This method defines a double threshold transformation law by means of five parameters: SlicingLevel, SlicingBand, LightResponse, BandResponse, DarkResponse.

Table Method


This method defines the transfer function of a lookup table in a tabular form.

Brightness Parameter

The Brightness parameter exclusively applies to the Response Control lookup table definition method.

It implements a control similar to the brightness control of a television monitor.

Brightness	Note
-1.00	Min. <code>Brightness</code> value: darkest output. The whole input range data gets transformed into the full black. This rule applies for any chosen <code>Contrast</code> value.
0.00	Default <code>Brightness</code> value. The mid-level input level of 0.5 is transformed as the same output level of 0.5. This is true for any value of the other parameters. Any increase in the brightness towards +1.00 results into a lighter output. Any decrease of the brightness towards -1.00 results into a darker output.
+1.00	Max. <code>Brightness</code> value: lightest output. The whole input range data gets transformed into the full white. This rule applies for any chosen <code>Contrast</code> value.

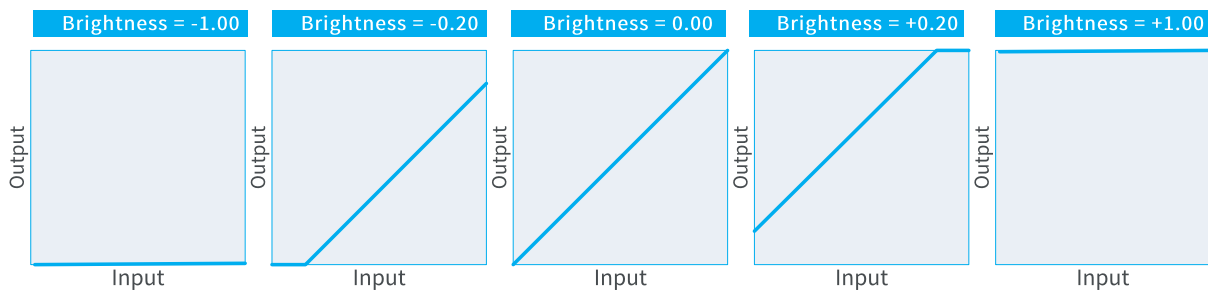

Effect of `Brightness` when all other controls are set to their default value:
`Contrast = 1.00; Visibility = 0.00; Negative = FALSE`

Contrast Parameter

The `Contrast` parameter exclusively applies to the Response Control lookup table definition method.

It implements a control similar to the contrast control of a television monitor.

The slope of the transformation law is the gain, which is non-linearly controlled from the `Contrast` parameter.

Mathematically, the relationship is:

$$\text{Gain} = 10^2 \times (\text{Contrast} - 1)$$


Contrast	Gain	Note
0.00	0.01	Min. <code>Contrast</code> value; smallest gain
1.00	1	Default <code>Contrast</code> value; unity gain
2.00	100	Max. <code>Contrast</code> value; largest gain

To achieve a required given gain, the contrast control should be set to:

$$\text{Contrast} = 1 + (\log_{10} \text{Gain}) / 2$$

If the required gain is expressed in decibels (dB):

$$\text{Contrast} = 1 + \text{Gain}(\text{dB}) / 40$$

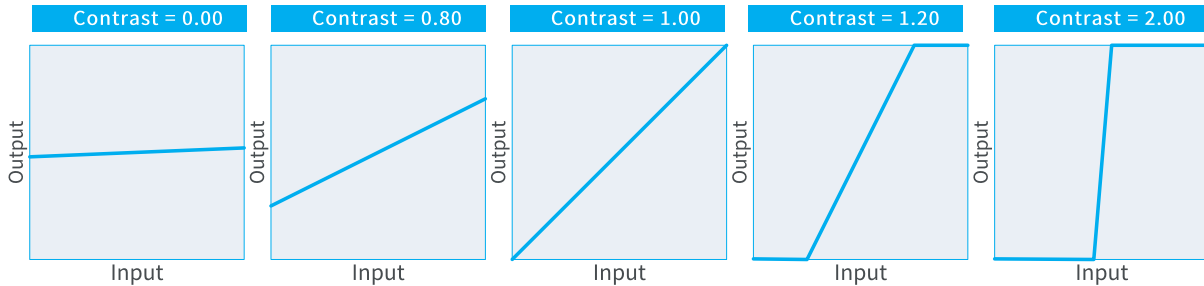

Effect of Contrast when all other controls are set to their default value:
 Brightness = 0.00; Visibility = 0.00; Negative = FALSE


Visibility Parameter

The `Visibility` parameter exclusively applies to the Response Control lookup table definition method.

The operation of `Contrast` and `Brightness` parameters occasionally removes some part of the input dynamics. Very dark regions of the image can be transformed into full black, and become invisible. This holds true for very bright regions, clipping to full white.

The `Visibility` parameter has been created to smoothly reveal these hidden parts in the image.

Visibility	Gain	Note
0.00	0.01	Minimum and default <code>Visibility</code> value. This generates the piecewise linear transformation curves. Choosing values closer to +1 generates smoother curves.
1.00	100	Max. <code>Visibility</code> value.

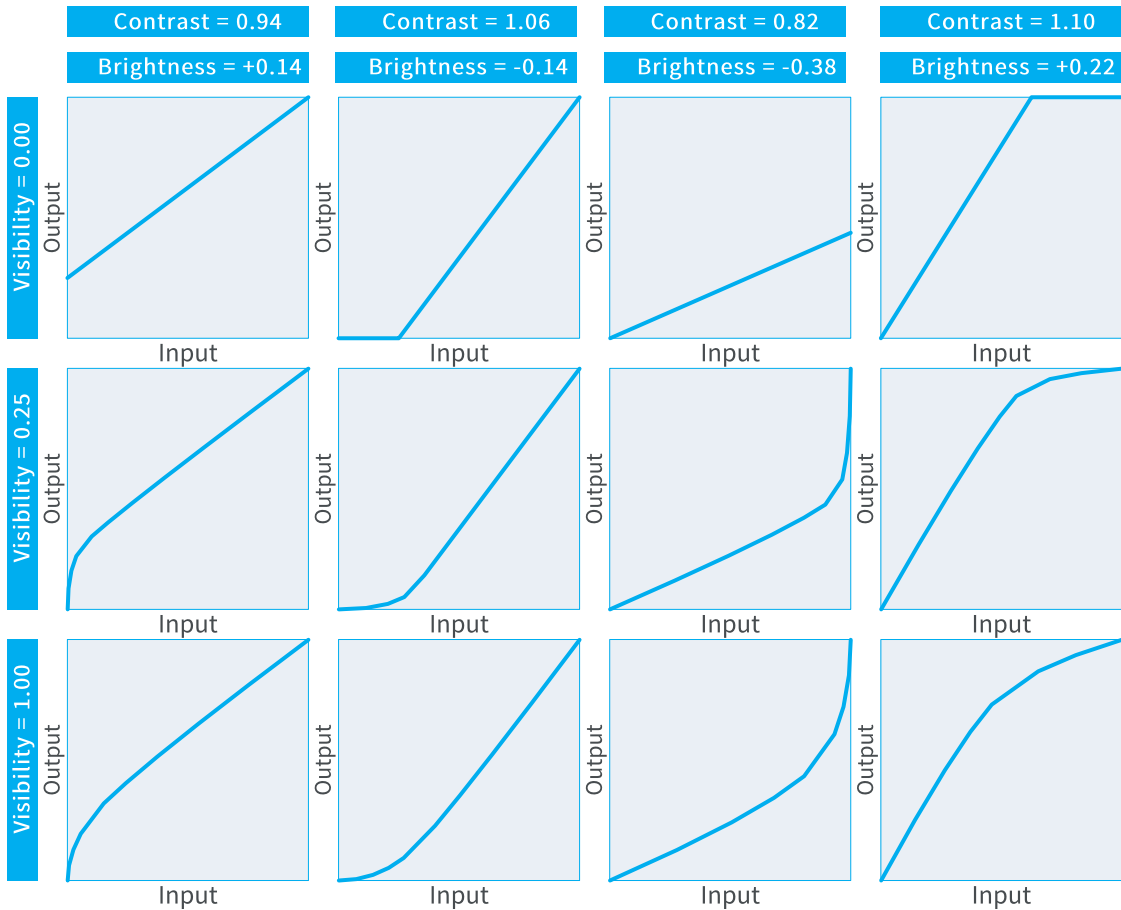


Effect of Visibility for typical values of Contrast and Brightness parameters assuming that Negative = FALSE

Negative Parameter

The `Negative` parameter applies to both the Response Control and the Emphasis lookup table definition methods.

This control allows transforming an image into its negative image, where the lightest areas of the image appear darkest and the darkest areas appear lightest.

Negative	Note
FALSE	Default value.
TRUE	The transformation table is mirrored around a vertical axis in the graphs. This swaps the black and white values, and gives rise to a photographic negative effect.

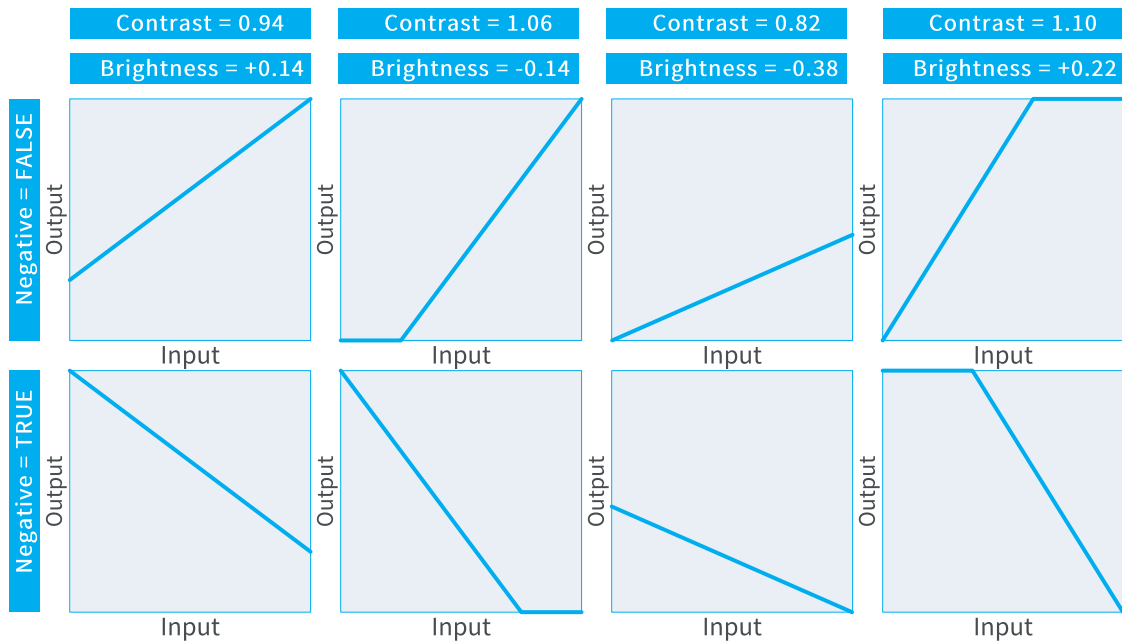

Effect of Negative for typical values of other controls

Emphasis Parameter

The `Emphasis` parameter exclusively applies to the Emphasis lookup table definition method. It allows transforming an image using a power-law expression:

$$\text{Output} = \text{Input}^\gamma$$


The γ - Gamma - exponent is mathematically linked to `Emphasis` by:

$$\gamma = 10^{-\text{Emphasis}}$$

Emphasis	Gamma	Note
1.00	0.1	Max. Emphasis value; smallest γ value
0.00	1	Default Emphasis value; linear law
-1.00	10	Min. Emphasis value; largest γ value

To achieve a required given γ , `Emphasis` should be set to:

$$\text{Emphasis} = -\log_{10}\gamma$$

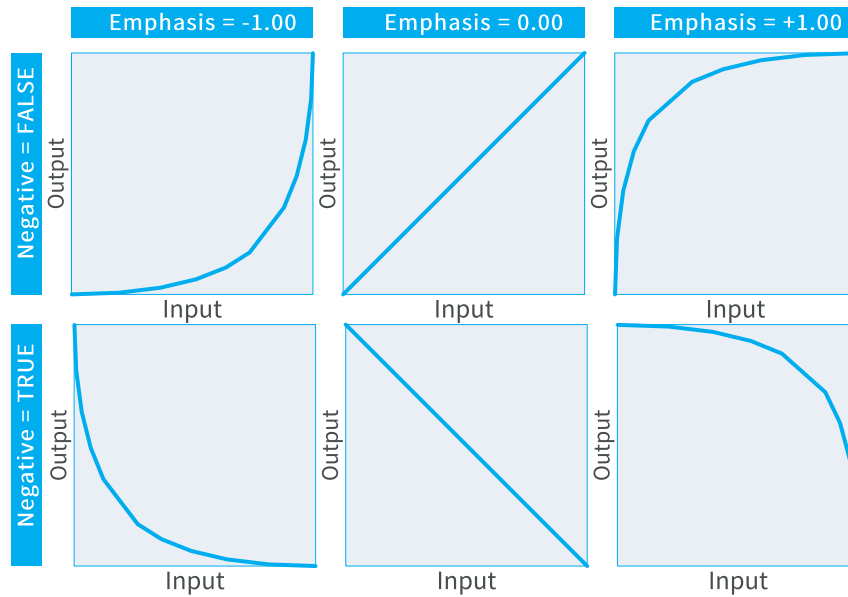


Emphasis effect for typical values of `Emphasis` and both values of `Negative`

Threshold Method Parameters

`SlicingLevel`, `SlicingBand`, `LightResponse`, `BandResponse` and `DarkResponse` parameters exclusively apply to the Threshold lookup table definition method.

As shown on the next figure, the parameters set defines a double threshold transformation law.

Parameter	Minimum Value	Default Value	Maximum Value
Slicing Level	0.00	0.50	1.00
Slicing Band	0.00	0.50	1.00
LightResponse	0.00	0.75	1.00
BandResponse	0.00	0.50	1.00
DarkResponse	0.00	0.25	1.00

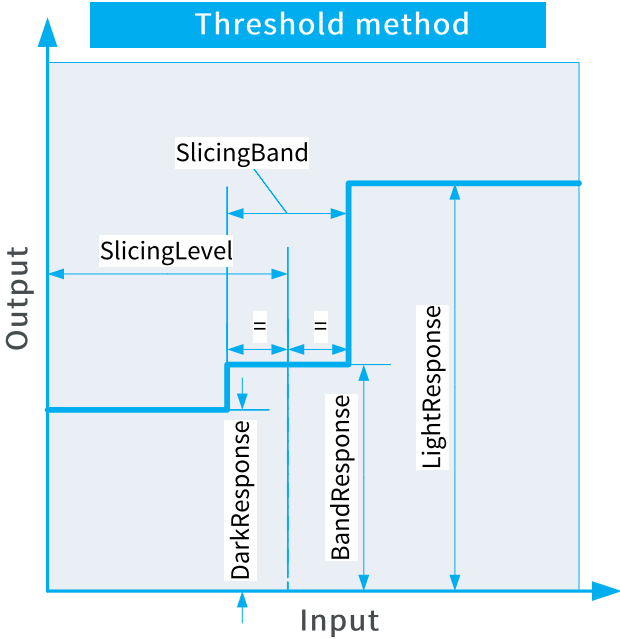

Double threshold transfer function

Note: *SlicingLevel* specifies the mean value of both thresholds in the input range.

8.4. LUT Setup Procedure

To setup the lookup table processing, proceed as follows:

1. Disable the lookup table
2. Define the lookup table configuration
3. Define the content of the lookup table
4. Upload the lookup table content into a specified lookup table data set
5. Enable the lookup table with a specified data set

Disabling the lookup table

To disable the lookup table:

- Set the `LUTEnable` feature to a `Off`.

Defining the lookup table configuration

To define the lookup table configuration, set the `LUTConfiguration` feature according to:

- The camera pixel type and bit depth
- The required output bit depth.

Refer to "[Monochrome Lookup Table Processing](#)" on page 85 for configurations applicable to monochrome pixels.

Note: *The lookup table configuration must be set prior to any other action.*

Defining the lookup table content

Refer to "[LUT Content Definition](#)" on page 88 for a description of the parametric and tabular methods used for defining a lookup table content.

Note: *At least one lookup table set must be defined.*

Upload a lookup table content

To upload a lookup table content in one operation:

- Select a lookup table data set to access by assigning the appropriate value to the `LUTSet` feature. For instance `Set1`.
- Set the `LUTIndex` feature to 0.
- Write a string of `LUTLength` values to the `LUTValue` feature.

Note: *The application may also selectively upload any individual lookup table entry or any block of consecutive lookup table entries.*

Reading back a lookup table data set

To read back the lookup table data set in one operation:

- Select a lookup table data set to access by assigning the appropriate value to the `LUTSet` feature. For instance `Set1`.
- Set the `LUTIndex` feature to 0.
- Set the `LUTReadBlockLength` feature to the value returned by `LUTLength`.
- Get a string of `LUTReadBlockLength` values from the `LUTValue` feature.

Note: *The application may also selectively read any lookup table entry individually or any block of consecutive entries.*

Enabling the lookup table

To enable the lookup table:

- Set the `LUTEnable` feature to a value designating the lookup table data set to use.

Configuration Script Example

The following script is an example illustrating how to configure the lookup table for monochrome 8-bit to 8-bit operation and to define and upload 4 lookup table data sets using different lookup table definition methods.

```
function configure(g) {
  // Disable the lookup table
  g.StreamPort.set('LUTEnable', 'Off');
  // Configure the lookup table
  g.StreamPort.set('LUTConfiguration', 'M_8x8');

  // Build lookup table data set 1: response control
  g.StreamPort.set('LUTSet', 'Set1');
  require('coaxlink://lut/response-control')(g, { Contrast: 0.94
                                                , Brightness: 0.14
                                                , Visibility: 0.25
                                                , Negative: false });

  // Build lookup table data set 2: emphasis
  g.StreamPort.set('LUTSet', 'Set2');
  require('coaxlink://lut/emphasis')(g, { Emphasis: 0.5
                                         , Negative: true });

  // Build lookup table data set 3: threshold
  g.StreamPort.set('LUTSet', 'Set3');
  require('coaxlink://lut/threshold')(g, { SlicingLevel: 0.5
                                           , SlicingBand: 0.5
                                           , LightResponse: 0.75
                                           , BandResponse: 0.5
                                           , DarkResponse: 0.25 });

  // Build lookup table data set 4: table
  g.StreamPort.set('LUTSet', 'Set4');
  var i;
  for (i = 0; i < 256; ++i) {
    g.StreamPort.set('LUTIndex', i);
    g.StreamPort.set('LUTValue', String(255 - i));
  }
}
```



```
}  
configure (grabbers [0] );
```

9. Bayer CFA Decoding

Hardware Bayer CFA to RGB color pixel data conversion

Applies to:

9.1. Bayer CFA to RGB Conversion	99
9.2. Using Bayer CFA Decoder	103

9.1. Bayer CFA to RGB Conversion

The Bayer CFA decoder transforms the raw Bayer CFA data stream issued by the camera into an RGB color data stream.

The missing pixel components are reconstructed from the nearest components using one of the following interpolation methods:

- The *legacy interpolation method* computes the missing color components by applying exclusively the `Mean()` function.
- The *advanced interpolation method* computes the missing color components using the `Mean()` and the `Median()` functions. The advanced interpolation eliminates the aliasing effect on the highly contrasted sharp transitions in the image.

Functions Definitions

The `min()` function returns the lowest integer value from a set of 2 integer values.

The `max()` function returns the highest integer value from a set of 2 integer values.

The `mean()` function returns one integer value that represents the mean value of 2 integers. It is computed as follows:

Function	Mean(a, b)
<i>Formula</i>	$(a + b + 1) \gg 1$

The `median()` function returns a set of two integer values that are the two median values of a set of four integers. It is computed as follows:

Function	Median(a, b, c, d)
<i>Value 1 formula</i>	$\text{Min} [\text{Max}(a, b); \text{Max}(c, d)]$
<i>Value 2 formula</i>	$\text{Max} [\text{Min}(a, b); \text{Min}(c, d)]$

Decoder operation

For each pixel of the source image, the CFA decoder computes two missing color components from surrounding pixels.


The text hereafter describes how the 4 central pixels located at positions 22, 32, 23 and 33 of a 4 x 4 Bayer CFA array are computed:

B11	G21	B31	G41
G12	R22	G32	R42
B13	G23	B33	G43
G14	R24	G34	R44

The relative positions of the surrounding pixels are identified by compass markings:



NW	N	NE
W		E
SW	S	SE

Formulas for position 22

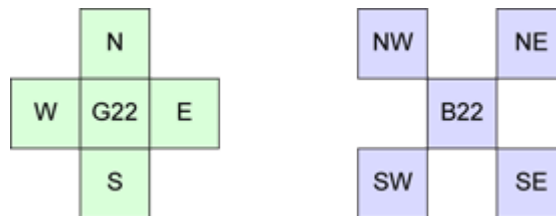



Component	Method	Formula
R22	Legacy, Advanced	R22
G22	Legacy	Mean[Mean(N,S), Mean(W,E)]
	Advanced	Mean[Median(N, S, E, W)]
B22	Legacy	Mean[Mean(NW, SW), Mean(NE, SE)]
	Advanced	Mean[Median(NW, SW, NE, SE)]

  Formulas for position 23




Component	Method	Formula
R23	Legacy, Advanced	Mean(N,S)
G23	Legacy, Advanced	G23
B23	Legacy, Advanced	Mean(W,E)

  Formulas for position 32



Component	Method	Formula
R32	Legacy, Advanced	Mean(W,E)
G32	Legacy, Advanced	G32
B32	Legacy, Advanced	Mean(N,S)

Formulas for position 33

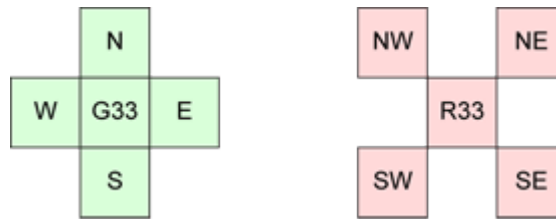

Component	Method	Formula
R33	Legacy	Mean[Mean(NW, SW), Mean(NE, SE)]
	Advanced	Mean[Median(NW, SW, NE, SE)]
G33	Legacy	Mean[Mean(N,S), Mean(W,E)]
	Advanced	Mean[Median(N, S, E, W)]
R33	Legacy, Advanced	B33

9.2. Using Bayer CFA Decoder

Prerequisites

1. Frame grabber

Coaxlink card and firmware-variant with CFA decoder:

Product	Firmware variant
1633 Coaxlink Quad G3	1-camera
1635 Coaxlink Quad G3 DF	1-df-camera
3602 Coaxlink Octo	1-camera
	2-camera

2. Camera

- a. Bayer CFA area-scan
- b. Up to 16384 pixels per line
- c. Having the color registration (GR, RG, GB, or BG) of the first two first transmitted pixels of the first transmitted line and the pixel bit depth (8-bit, 10-bit, 12-bit , 14-bit or 16-bit) correctly specified in the `pixelF` field of the CoaXPRESS image header.

Important: When the fields `Xoffs` and/or `Yoffs` are greater than 0, the camera must report an adapted `pixelF` value corresponding to the transmitted data!

Bayer to RGB Pixel Processing Configurations

When the Bayer CFA decoder is enabled:

- the "Pixel Component Unpacking" on page 106 control is inoperative, the Coaxlink card unpacks 10-bit, 12-bit or 14-bit pixels to lsb
- the "Pixel Component Re-Ordering" on page 108 feature allows to swap the Red and Blue components and deliver either BGR or RGB pixels

Input Pixel Format	RedBlueSwap	Output Pixel Format
Bayer**8	off	RGB8
	on	BGR8
Bayer**10pmsb	off	RGB10
	on	BGR10
Bayer**12pmsb	off	RGB12
	on	BGR12

Input Pixel Format	RedBlueSwap	Output Pixel Format
Bayer**14pmsb	off	RGB14
	on	BGR14
Bayer16	off	RGB16
	on	BGR16

Enabling the Bayer CFA Decoder

In the Data Stream module, set the **BayerMethod** feature value to **Legacy** or **Advanced** according to the desired interpolation method.

Disabling the Bayer CFA Decoder

In the Data Stream module, set the **BayerMethod** feature value to **Disable**.

Bayer CFA Decoder Performance

Product	Firmware variant	Peak pixel processing rate
1633 Coaxlink Quad G3	1-camera	1,000,000 pixels/s
1635 Coaxlink Quad G3 DF	1-df-camera	1,000,000 pixels/s
3602 Coaxlink Octo	1-camera	2,000,000 pixels/s
	2-camera	1,000,000 pixels/s per stream

Note: The peak pixel processing rate the Bayer CFA decoder approximately matches the performance of the DMA transfer when delivering RGB8 or BGR8 pixels.

Note: The peak pixel processing rate is significantly lower than the maximum aggregated input data rate achievable by the board! For instance, 2,500,000 vs. 1,000,000 pixels/s for a 1633 Coaxlink Quad G3.!

Important: The effective pixel processing rate may differ significantly from the peak pixel processing rate when the PCI Express available bandwidth is insufficient or when processing very short lines.

PCI Express Performance

PCI Express Interface	Sustainable PCIe data rate	RGB8	RGB10, RGB12, RGB14, RGB16
4-lane Rev 3.0 PCIe End-point	3,350 MB/s typical	~1,117 Mpixels/s	~558 MPixels/s
8-lane Rev 3.0 PCIe End-point	6,700 MB/s typical	~2,238 Mpixels/s	~1,117 Mpixels/s

Note: The PCI interface is not the bottleneck for 8-bit bit depths!

Important: For 10-, 12-, 14- and 16-bit bit depths, the sustainable data output rate is further limited by the performances of the *PCI Express interface* on the Host PC.

Latency

The hardware CFA decoder performs on-the-fly conversion with a negligible latency when the data throughput is NOT limited by the available PCI Express bandwidth!

10. Pixel Component Unpacking

The pixel data processor is capable of unpacking of 10-bit, 12-bit, and 14-bit pixel component data to 16-bit pixel data.

The unpacking operation is user-configurable through the `UnpackingMode` GenICam feature. Three options are available:

- Unpacking to lsb (Default setting)
- Unpacking to msb
- No unpacking

Note: For Coaxlink Driver versions prior to 4.2, the unpacking operation was not configurable: 10-bit, 12-bit, and 14-bit pixel component data were unpacked to 16-bit using the alignment to msb method.

Note: Since Coaxlink Driver 4.3, the default option is "Unpacking to lsb".

Note: For Coaxlink Driver versions prior to 7.0.1, the unpacking operation could not be disabled.

Unpacking to lsb

The significant bits of the pixel component data are aligned to the **least significant bit** of the data container. Padding '0' bits are put as necessary in the **most significant bits** to reach the next 8-bit boundary.

- 10-bit pixels: 0000 00<pp pppp pppp>
- 12-bit pixels: 0000 <pppp pppp pppp>
- 14-bit pixels: 00<pp pppp pppp pppp>

Note: Unpacking to lsb doesn't modify the pixel component value.

Unpacking to msb

The significant bits of the pixel component data are aligned to the **most significant bit** of the data container. Padding '0' bits are put as necessary in the **least significant bits** to reach the next 8-bit boundary.

- 10-bit pixels: <pppp pppp pp>00 0000
- 12-bit pixels: <pppp pppp pppp> 0000
- 14-bit pixels: <pppp pppp pppp pp>00

Note: Unpacking 10-bit, 12-bit, and 14-bit pixel components to msb multiplies the pixel component value by 64, 16, and 4 respectively.

Note: *Unpacking 8-bit and 16-bit pixel components is a neutral operation:*

- *The size of the data container is unchanged: One byte for 8-bit pixel components; two bytes for 16-bit pixel components*
- *The data bits are not modified*

Note: *Unpacking 10-bit, 12-bit, and 14-bit pixel components increases the amount of data by 160%, 133%, and 114% respectively.*

No unpacking

The packed image data transmitted by the camera through the CoaXPress Link is delivered as is to the output buffer.

Note: *This option is restricted to monochrome and Bayer CFA pixel formats.*

11. Pixel Component Re-Ordering

The Coaxlink image data stream pixel processor can be configured to swap the first and the third component data of 3-component pixels.

The swapping is controlled through the `RedBlueSwap` boolean GenICam feature:

- When set to `false` (default settings), the original component order is preserved
- When set to `true`, the first and the third components are swapped.

The function is available for image acquisition from:

- RGB color cameras delivering 3-component pixel data,
- BAYER CFA color cameras providing that the BAYER CFA decoding is enabled.

12. Endianness Conversion

The Coaxlink image data stream pixel processor delivers 16-bit pixel components using the little-endian convention.

The conversion is not performed when `UnpackingMode` is set to `Off`.

Little-endian Convention

The least-significant byte of a multiple byte data is stored at the lowest address location.

For instance, 16-bit data are stored into two consecutive byte locations as follows:

Memory Byte Location	Memory Byte Content
N	Data[7:0]
N+1	Data[15:8]

13. Pixel Ordering

The Coaxlink image data stream pixel processor preserves the pixel order of the CoaXPress data stream.

The pixels data of an image frame are stored in successive address locations starting with the first pixel of the first line at the lowest address.

The successive lines of an image frame are concatenated in the image buffer.

14. Image Data Transfer

Buffer Filling

A DMA engine transfers the processed image data over the PCI Express bus to the allocated GenTL buffers according to rules that are different for line-scan and area-scan image acquisition.

GenTL Buffer Filling Rules - Area-scan cameras

In area-scan imaging, GenTL buffers are filled according to the following rules:

- The first acquired line data of a frame is, by default, stored at the beginning of a new buffer. When vertical image flipping is enabled by setting `StripeArrangement` to `1X_1YE`, the first acquired line data of a frame is stored at the location of the last full line of a new buffer.
- When image transfer to host memory is done, the buffer, possibly partially filled, is made available to the application for processing.
- When the buffer is too small to contain a complete frame, the remaining data is discarded.

GenTL Buffer Filling Rules - Line-scan cameras

In line-scan imaging, GenTL buffers are filled according to the following rules:

- The first acquired line data of a scan is, by default, stored at the beginning of a new buffer. When vertical image flipping is enabled by setting `StripeArrangement` to `Geometry_1X_1YE`, the first acquired line data of a scan is stored at the location of the last full line of a new buffer.
- A buffer contains an integer number of image lines data.
- When the remaining space of a buffer is not sufficient to store an image line data, the acquisition continues into a new buffer and the filled buffer is made available to the application for processing.
- When the last line data of a scan is acquired, the last buffer, possibly partially filled, is made available to the application for processing.

Image data padding

The DMA engine provides the capability to organize the data differently in the buffer by adding line padding or stripe padding.

Note: *Prior to Coaxlink Driver 6.2, the DMA engine was transferring the whole image data as a single 1D entity regardless the 2D structure: the lines of processed image data are concatenated into the destination buffer.*

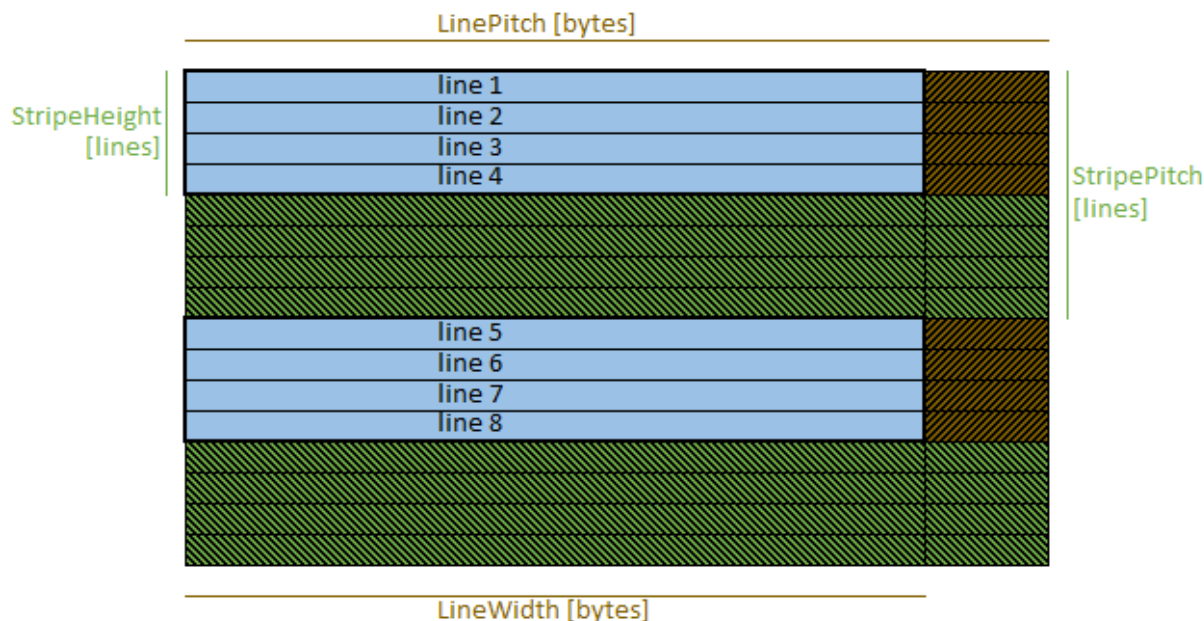


Image buffer padding model

Line Padding

The `LineWidth` and `LinePitch` features control the line padding.

When `LinePitch > LineWidth`, the line padding is enabled: the DMA engine leaves `LinePitch - LineWidth` bytes of padding at the end of each image line.

The values of `LineWidth` and `LinePitch` can only be changed when the data stream doesn't own any buffer (i.e., before announcing any buffer, or after all announced buffers have been revoked).

`LinePitch` can be set to 0 to disable padding after lines.

Stripe padding

Stripes are groups of adjacent lines. A stripe of height 1 is a line.

The `StripeHeight` and `StripePitch` features control the stripe padding.


When `StripePitch > StripeHeight`, the stripe padding is enabled: the DMA engine leaves `StripePitch - StripeHeight` lines of padding at the end of each stripe.

The values of `StripeHeight` and `StripePitch` can only be changed when the data stream doesn't own any buffer (i.e., before announcing any buffer, or after all announced buffers have been revoked).

`StripePitch` can be set to 0 to disable padding after lines.

Vertical Image Flip

The DMA engine provides the capability to flip the image vertically.

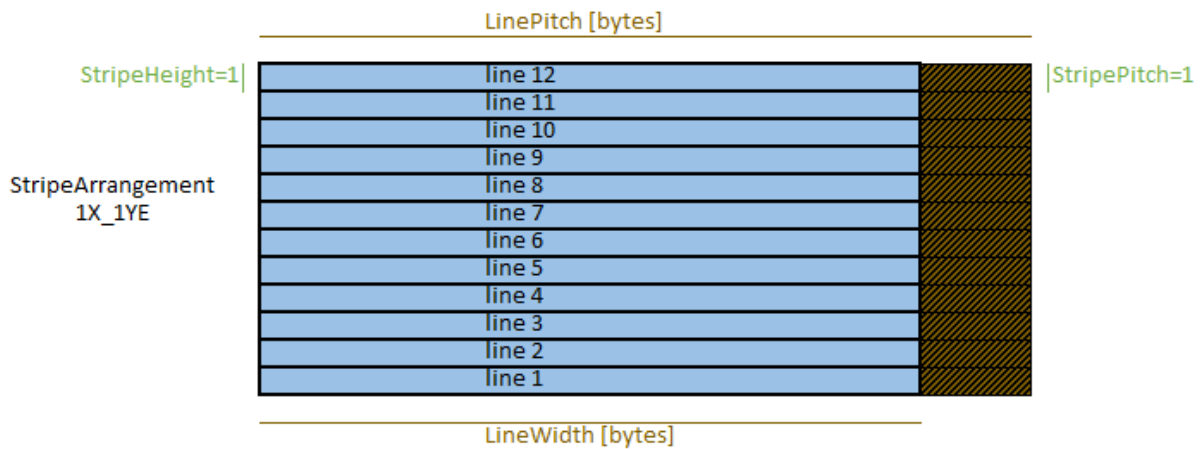

Flipped image data

The vertical image flip is controlled by the `StripeArrangement` feature of the data Stream module.

By default, `StripeArrangement` is set to `1X_1Y`: the vertical image flip is disabled.

When `StripeArrangement` is set to `1X_1YE`, the driver determines the position of the first image line in the buffer by using this formula: $\text{BufferBase} + (\text{BufferSize} + \text{LinePitch} - \text{LineWidth}) / \text{LinePitch} * \text{LinePitch} - \text{LinePitch}$.

As a result:

- if the buffer is too small, it is the bottom part of the image (as given by the camera) that will be lost;
- lines will start at $\text{BufferBase} + n * \text{LinePitch}$;
- only complete lines are transferred;
- if the buffer size is not a multiple of `LinePitch` bytes, some bytes at the end of the buffer will be left unchanged.

Note: When evaluating the above formula, if `LinePitch` is equal to zero, `LineWidth` will be used instead. Similarly, if `StripeHeight` is zero, 1 will be used instead.

Statistics

The stream statistics tool monitors the image data stream at the card output and provides the application with averaged frame-, line- and data-rate.

Stream Statistics Sampling Methods

The sampling method determines the **averaging interval**. It can be any of the following:

- `LastSecond` or `LastTenSeconds`: The last completed **time** slot of 1 or 10 seconds.

- `Last2Buffers`, `Last10Buffers`, `Last100Buffers`, `Last1000Buffers`: The last 2, 10, 100, or 1000 **acquired buffers**
- `LastAcquisition`: The last acquisition activity period. Namely since the last `DSSstartAcquisition()` function call until now, if the acquisition is still active otherwise until the last `DSSstopAcquisition()` function call.
- `LastAcquisition`: Time interval between `StatisticsStartSampling` and `StatisticsStopSampling` commands.

The default sampling method is `LastSecond`.

Statistical Data

The statistical data is effectively computed when getting any of the following feature:

- `StatisticsFrameRate` reports the averaged frame rate expressed in frames/second (area-scan).
- `StatisticsLineRate` reports the average line rate expressed in lines/second (line-scan).
- `StatisticsDataRate` reports the average data rate expressed in megabytes/second

For every GenTL buffer filled during the averaging interval, the tool counts:

- The number of filled GenTL buffers and the corresponding number of frames (area-scan) or lines (line-scan)
- The number of transferred bytes of image data.

The related GenICam features are gathered into the Stream Statistics Category of the GenTL Data Stream Module.


15. Line Scan Acquisition

This section applies only to the line-scan firmware variants:    

15.1. Line Scan Acquisition Principles	116
15.2. Line Scan Acquisition Use cases	121

15.1. Line Scan Acquisition Principles

Line Scan Imaging

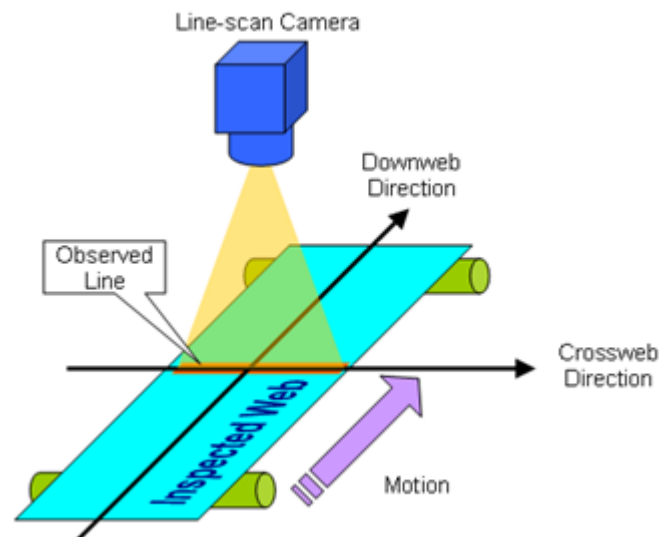


Typical line-scan imaging system

The expression “Line-scan imaging” designates machine vision applications where 2-D images are obtained by the combination of successive image lines captured from a 1-D imaging device that moves relatively to the object.

In line-scan imaging:

- The imaging device is often, but not necessarily, a line-scan camera.
- The inspected object is often a continuous web, it can also be discrete objects having fixed or variable size.
- The inspected web moves relatively to the camera. The motion speed during the acquisition can be fixed or variable.
 - The **cross-web direction** or **transverse direction** is the axis on the web plane that is observed by the camera.
 - The **down-web direction** or **axial direction** is the motion direction of the inspected web relatively to the camera.

Scanning Area

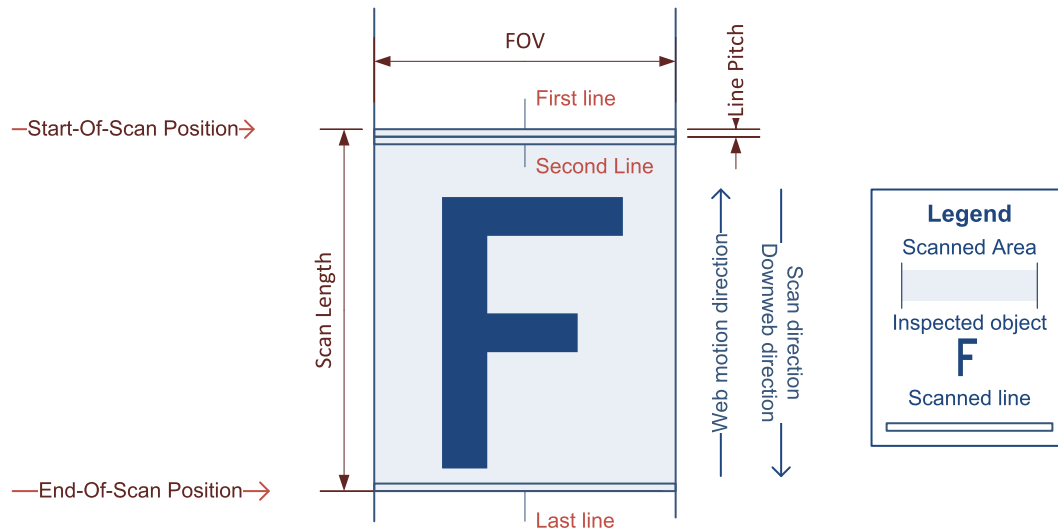

Scanning area definitions

The scanning area is a 2-D area on the web having a width equal to FOV and a length equal to Scan Length.

In the cross-web direction (horizontal direction in the above drawing), the scanning area is delimited by the field of view – FOV – of the camera.

In the down-web direction (vertical direction in the above drawing), the scanning area is delimited by the start-of-scan and the end-of-scan positions. The line pitch is determined by the ratio between the web speed and the camera line rate.

The **field of view – FOV** – of a line-scan camera is determined only by the optical setup and the sensor geometrical properties.

The **start-of-scan position** is a position on the web corresponding to the scan-line boundary preceding the first acquired line.

The **end-of-scan position** is a position on the web corresponding to the scan-line boundary following the last acquired line.

Most of the line-scan cameras are delivering a single row of pixels every camera cycle. Consequently, **multiple camera cycles** are necessary to build-up the object image.

Pixel Aspect Ratio Control

Unlike area-scan imaging, line-scan imaging allows the application to control the image pixel aspect ratio.

In the large majority of cases, the imaging application requires a constant, and preferably a 1:1 image pixel aspect ratio.

The cross-web pitch being locked by the sensor pitch and the optical magnification factor, the image pixel aspect ratio is controllable only through the line pitch control.

The following table summarizes the methods providing a constant line pitch that are applicable with Coaxlink:

Method Name	Description
VCR	<p>Variable Camera cycle.</p> <p>The web speed is variable and the camera cycle rate is kept proportional to the web speed.</p> <p>The frame grabber builds the object image by capturing all the successive lines delivered by the camera.</p>
CCC	<p>Constant Camera Cycle.</p> <p>The camera operates at a constant cycle rate and the frame grabber captures all the successive lines delivered by the camera.</p>

The VCR method requires:

- A **motion encoder** for measuring the web speed.
- A **real-time processing** of the motion encoder events to build a camera trigger at a rate that is **proportional** to the motion encoder events rate.

Having a proportional rate can be achieved by a **divider tool** or a **multiplier/divider tool**:

- The divider tool decimates the input rate by an integer value, it delivers 1 out of N incoming events.
- The multiplier/divider tool enables fine control of the image pixel aspect ratio by allowing any rate conversion ratio value – RCR – in the range 0.001 to 1000 with an accuracy better than 0.1% of the RCR value.

Image Acquisition with Line Scan Imaging Devices

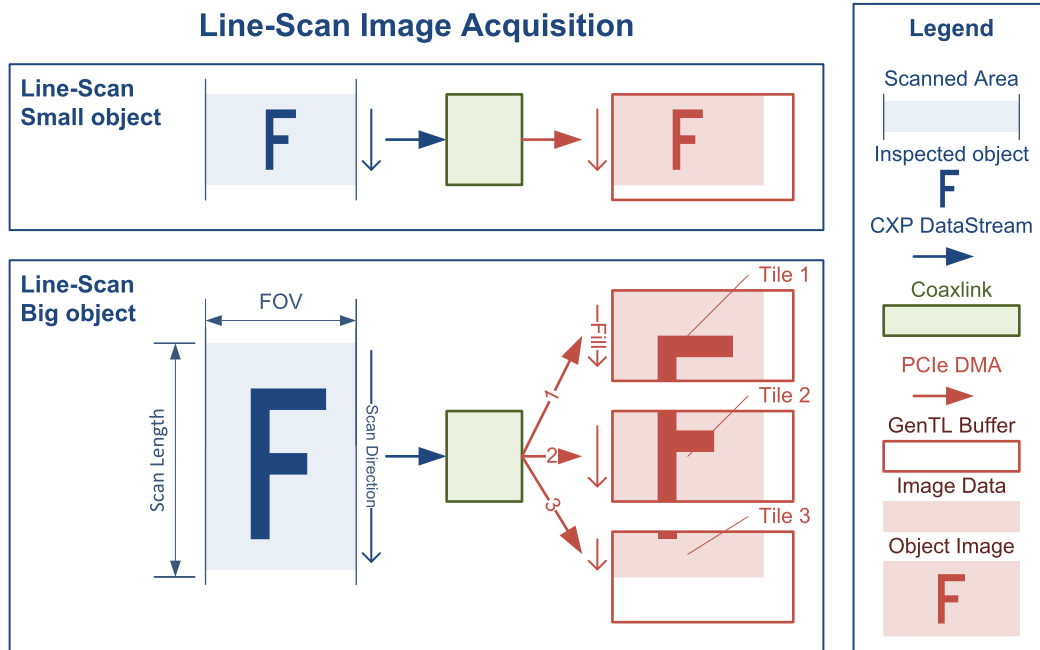


Image capture of small and large objects

For the transmission on the CoaXPress link, (most of) the line-scan cameras use **one CoaXPress Image Data Stream**.

Regarding the delivery methods of the image data, two cases are to be considered:

- For small objects, the object image data are delivered into a **single GenTL buffer**.
- For big objects, the object image data are delivered into **multiple GenTL buffers**.

In both cases, the image data are delivered through a single PCIe DMA channel and the transmission latency through Coaxlink is low: “one image line”.

GenTL Buffer Filling Rules - Line-scan cameras


In line-scan imaging, GenTL buffers are filled according to the following rules:

- The first acquired line data of a scan is, by default, stored at the beginning of a new buffer. When vertical image flipping is enabled by setting `StripeArrangement` to `Geometry_1X_1YE`, the first acquired line data of a scan is stored at the location of the last full line of a new buffer.
- A buffer contains an integer number of image lines data.
- When the remaining space of a buffer is not sufficient to store an image line data, the acquisition continues into a new buffer and the filled buffer is made available to the application for processing.

- When the last line data of a scan is acquired, the last buffer, possibly partially filled, is made available to the application for processing.

15.2. Line Scan Acquisition Use cases

Scanning of continuous objects

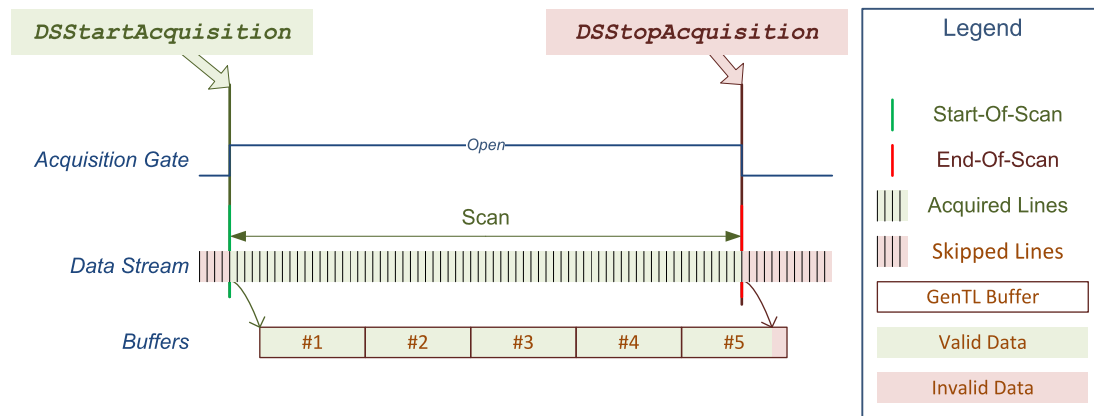

Scanning of continuous objects

This case applies to the image scanning of **continuous objects**.

The Coaxlink acquisition controller is configured as follows:

- `StartOfScanTriggerSource = Immediate`.
- `EndOfScanTriggerSource = StopScan`.


When the `DSStartAcquisition` function is called, the scanning starts at the next line boundary.

The acquisition gate closes when the application calls the `DSStopAcquisition` function.

Depending on the allocated buffer size and the scanning duration, the object image fits in a single buffer or requires multiple buffers.

Each buffer is delivered to the application as soon as it is filled. The last buffer, likely partially filled, is delivered as soon as the last image data are written.

Fixed-length scanning of discrete objects

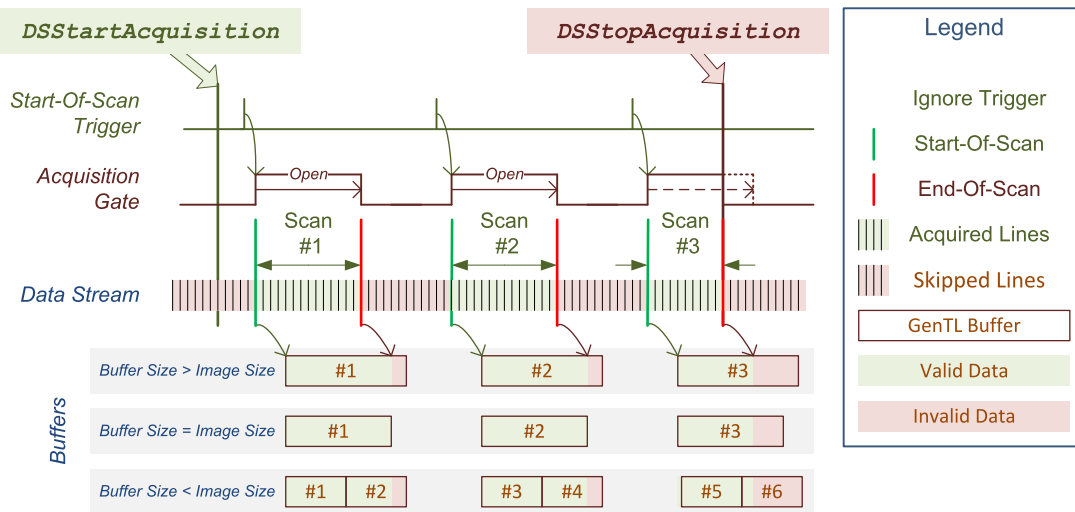

Scanning of discrete objects with a common scan length

The Coaxlink acquisition controller is configured as follows:

- *StartOfScanTriggerSource* = *StartScan* or any applicable I/O Toolbox event output, for instance: *LIN1*.
- *EndOfScanTriggerSource* = *ScanLength*.
- *ScanLength* = any positive number representing the number of lines required to capture the object image entirely.

When the *DSStartAcquisition* function is called, the start-of-scan trigger of the acquisition controller is armed.

Then, the acquisition controller waits for the first occurrence of a valid start-of-scan trigger event.

A valid start-of-scan event can be generated:

- By the application using a *StartScan* command.
- By the selected hardware event source, if specified by *StartOfScanTriggerSource*.


The acquisition controller ignores any Start-of-Scan trigger event while a scanning is in progress.

The acquisition gate opens at the first line boundary following a start-of-scan event.

The acquisition gate closes automatically after the specified number of lines have been acquired or anticipatively when the application calls the *DSStopAcquisition* function.

Depending on the allocated buffer size, the object image fits in a single buffer or requires multiple buffers. Each buffer is delivered to the application as soon as it is filled. At the end-of-scan, partially filled buffers are immediately delivered. The following image acquisition always begins with a new buffer.

Variable-length scanning of discrete objects

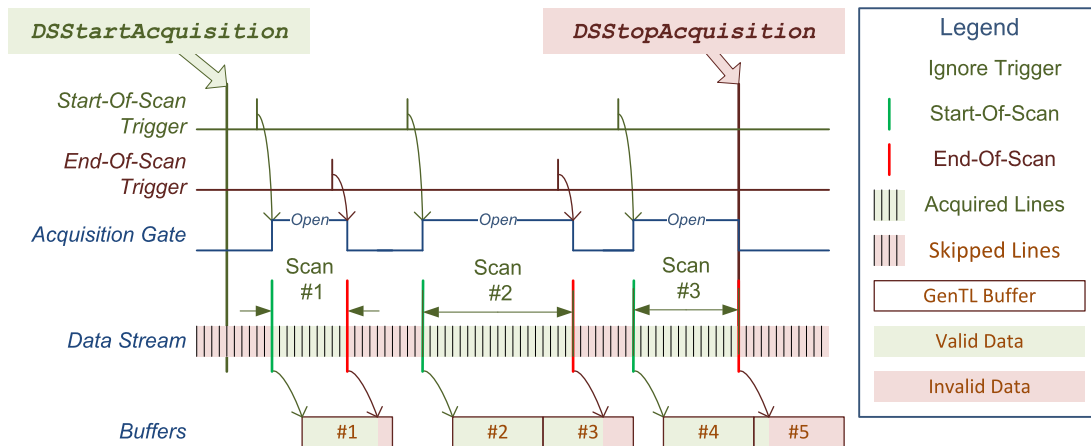

Scanning of discrete objects requiring a variable scan length

The Coaxlink acquisition controller is configured as follows:

- `StartOfScanTriggerSource` = `StartScan` or any applicable I/O Toolbox event output, for instance: `LIN1`.
- `EndOfScanTriggerSource` = `StopScan` or any applicable I/O Toolbox event output, for instance: `LIN2`.

When the `DSStartAcquisition` function is called, the start-of-scan trigger of the acquisition controller is armed.

Then, the acquisition controller waits for the first occurrence of a valid start-of-scan trigger event.

A valid start-of-scan event can be generated:

- By the application using a `StartScan` command.
- By the selected hardware event source, if specified by `StartOfScanTriggerSource`.

The acquisition controller ignores any Start-of-Scan trigger event while a scanning is in progress.

The acquisition gate opens at the first line boundary following a start-of-scan event.

The acquisition gate closes at the first line boundary following a valid end-of-scan event or immediately when the application calls the `DSStopAcquisition` function.

A valid end-of-scan event can be generated:

- By the application using a `StopScan` command.
- By the selected hardware event source, if specified by `EndOfScanTriggerSource`.

The acquisition controller ignores any End-of-Scan trigger event when no scanning is in progress.

Depending on the allocated buffer size, the object image fits in a single buffer or requires multiple buffers. Each buffer is delivered to the application as soon as it is filled. At the end-of-scan, partially filled buffers are immediately delivered. The next image acquisition always begins with a new buffer.

16. C2C-Link

16.1. C2C-Link Description	126
16.2. C2C-Link Specification	128
16.3. Trigger Propagation Delays	130
16.4. C2C-Link Use Cases	132
16.5. C2C-Link Availability	133
16.6. C2C-Link Setup	134
16.7. 3303 C2C-Link Ribbon Cable	135
16.8. Custom C2C-Link Ribbon Cable Assembly	136
16.9. 1636 InterPC C2C-Link Adapter	137
Product Pictures	138
Hardware Description	139
16.10. Using 1636 as HD26F I/O Adapter	141
16.11. Using 1636 as C2C-Link Extender	142
Adapter Powering	142
InterPC Interconnect	142
Lamps	143

16.1. C2C-Link Description


The C2C-Link is a hardware communication medium allowing a single “**C2C-Link master device**” to **reliably** share 1 or 2 trigger events with multiple “**C2C-Link slave devices**”.

The C2C-Link is scalable: it may interconnect devices belonging to the same Coaxlink card, or to different cards in the same PC or to different cards in different PCs.

The C2C-Link feedback channel allows any C2C-Link device to indicate to the C2C-Link master device that it is not able to accept a trigger.

A C2C-Link interconnection may combine up to three interconnection levels:

- The **IntraCard Level** interconnects 2 or more C2C-Link devices belonging to the same card using FPGA internal resources.
- The **IntraPC Level** interconnects C2C-Link devices across two or more cards of the same PC. It requires one accessory cable such as the 3303 C2C-Link Ribbon Cable or a custom-made C2C-Link cable for each PC.
- The **InterPC Level** interconnects C2C-Link devices across two or more PCs. It requires one 1636 InterPC C2C-Link Adapter for each PC and one RJ 45 CAT 5 STP straight LAN cable for each adapter but the last one.

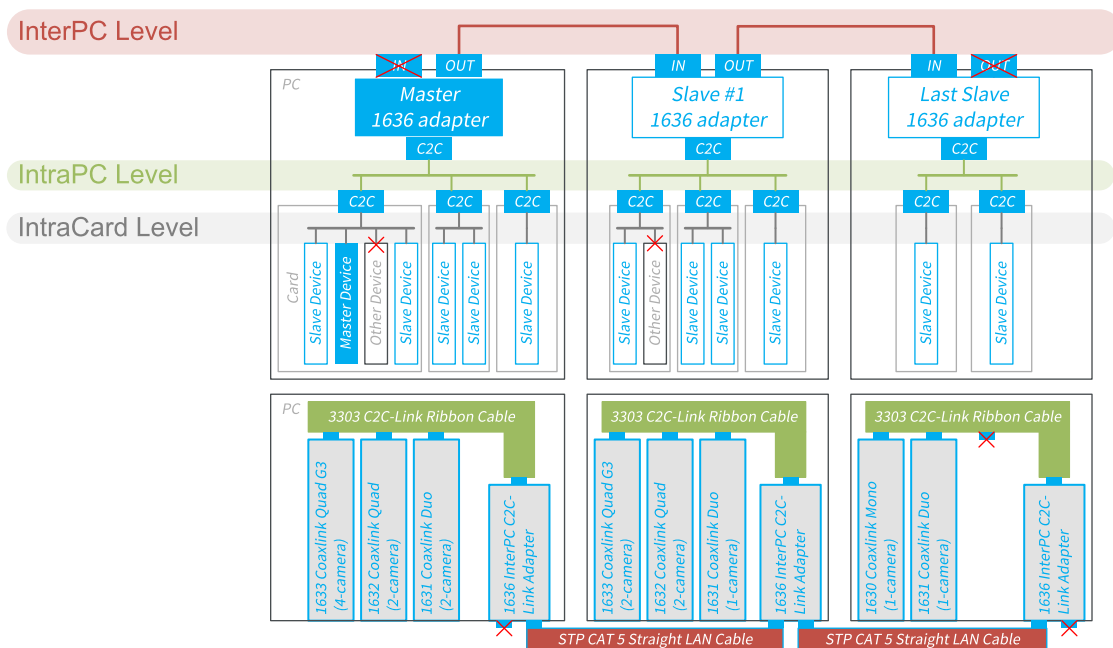

C2C-Link configuration example using InterPC, IntraPC and IntraCard levels

C2C-Link Configurations

C2C-Link Configuration	Interconnection Levels
IntraCard	IntraCard only
IntraPC	IntraPC + IntraCard (optional)
InterPC	InterPC + IntraPC+ IntraCard (optional)

16.2. C2C-Link Specification

Definitions

Trigger delay

Propagation delay of the trigger signal from the master device to a slave device. This delay is composed of the propagation delay inside electronic devices (FPGA, adapter...) and interconnection cables.

For cables, the delay is proportional to the cable length, typically: 5 ns/m.

Trigger delay skew

Dispersion of the trigger delay values across all the devices belonging to a C2C-Link.

Trigger delay jitter

Variation of the trigger delay depending on external factors such as temperature, signal noise...

Trigger rate

Rate of occurrence of repetitive trigger events. The reciprocal value (1/Trigger rate) is the minimum time interval required between consecutive triggers.

IntraCard C2C-Link Interconnection Level

Parameter	Min.	Typ.	Max.	Units
Trigger delay jitter			5	ns
Trigger rate	0		2.5	MHz

IntraPC C2C-Link Interconnection Level

Parameter	Min.	Typ.	Max.	Units
Cable connectors count (including 1636 adapter if any)	2		4	-
Cable length	-		0.6	m
Trigger delay jitter	5		10	ns
Trigger rate	0		2.5	MHz

InterPC C2C-Link Interconnection Level

The following specification targets applications where the **highest trigger rate** is required:

Parameter	Min.	Typ.	Max.	Units
1636 adapters count	2		10	-
Adapter-to-adapter LAN cable length	0.3		100	m
Cumulated adapter-to-adapter LAN cable length	0.3		100	m
Trigger delay jitter	10	20	40	ns
Trigger rate	0		2.5	MHz

The following specification targets applications where the **longest reachable distance** is required:

Parameter	Min.	Typ.	Max.	Units
1636 adapters count	2		32	-
Adapter-to-adapter cable length	0.3		1200	m
Cumulated adapter-to-adapter cable length	0.3		1200	m
Trigger delay jitter			1	μs
Trigger rate	0		200	kHz

Note: The maximum trigger rate specification can be extrapolated for intermediate distances between 100 m and 1200 m assuming that the length x frequency product is constant: in this case 250 [m. MHz].

16.3. Trigger Propagation Delays

The propagation delay of the Trigger signals from the master device to a slave device can be roughly estimated by adding the typical delays encountered in each segment of the signal path.

Typical Delay values per C2C-Link segment

Delay Element	Min.	Typ.	Max.	Units
(1) IntraPC interconnection (Whole IntraPC C2C-Link interconnect including FPGA I/O and IntraPC cable)	0	5	10	ns
(2) 1636 InterPC C2C-Link Adapter – IntraPC-to-InterPC delay		15		ns
(3) 1636 InterPC C2C-Link Adapter – InterPC-to-IntraPC delay		20		ns
(4) 1636 InterPC C2C-Link Adapter – InterPC-to-InterPC delay		0		ns
(5) InterPC LAN cable		5		ns/m

Example 1 – IntraPC Configuration

For an IntraPC only configuration there is only one delay element to consider: (1)

Parameter	Min.	Typ.	Max.	Units
(1) IntraPC interconnection	0	5	10	ns
Total Trigger Delay	0	5	10	ns

Example 2 – 3-adapter InterPC Configuration; 20 m+20 m LAN cable

This configuration is composed of 3 Intra-PC segments. For devices belonging to the same IntraPC segment as the Master device, there is only one element to consider.

Parameter	Min.	Typ.	Max.	Units
(1) IntraPC interconnection	0	5	10	ns
Total Trigger Delay for devices of the Master InterPC segment	0	5	10	ns

For devices belonging to the same IntraPC segment as the Slave1 adapter, there are 5 delay elements to consider:

Parameter	Min.	Typ.	Max.	Units
(1) Master IntraPC interconnection	0	5	10	ns
(2) Master 1636 InterPC C2C-Link Adapter – IntraPC-to-InterPC delay		15		ns

Parameter	Min.	Typ.	Max.	Units
(5) Master to slave1 InterPC LAN cable – 20 m		100		ns
(3) Slave1 1636 InterPC C2C-Link Adapter – InterPC-to-IntraPC delay		20		ns
(1) Slave1 IntraPC interconnection	0	5	10	ns
Total Trigger Delay for devices of the Slave1 InterPC segment		145		ns

For devices belonging to the same IntraPC segment as the Slave2 adapter, there are 7 delay elements to consider:

Parameter	Min.	Typ.	Max.	Units
(1) Master IntraPC interconnection	0	5	10	ns
(2) Master 1636 InterPC C2C-Link Adapter – IntraPC-to-InterPC delay		15		ns
(5) Master to slave1 InterPC LAN cable – 20 m		100		ns
(4) Slave1 1636 InterPC C2C-Link Adapter – InterPC-to-InterPC delay		0		ns
(5) Slave1 to slave2 InterPC LAN cable – 20 m		100		ns
(3) Slave2 1636 InterPC C2C-Link Adapter – InterPC-to-IntraPC delay		20		ns
(1) Slave2 IntraPC interconnection	0	5	10	ns
Total Trigger Delay for devices of the Slave2 InterPC segment		245		ns

16.4. C2C-Link Use Cases

CIC Synchronization

The Cycle Trigger event of the Camera and Illumination Controller of the "C2C-Link Master Device" is distributed to one or more "C2C-Link Slave Devices".

The CIC Cycles of all the devices start simultaneously. However, the Cycle Timing parameters can be configured individually.

Refer to [cic-sync.htm](#) for more information.

16.5. C2C-Link Availability

One C2C-Link connector is available on all Coaxlink products for extension of the C2C-Link beyond the card boundary.

One **IntraCard C2C-Link** interconnect is available only in multi-device firmware variants, namely:

- 2-camera
- 2-camera, line-scan
- 4-camera,
- 4-camera, line-scan

CIC Synchronization is available on all firmware variants except:

- 1-df-camera
- 1-df-camera, line-scan

16.6. C2C-Link Setup

General Procedure

- 1. C2C-Link hardware setup:** This step is specific to each C2C-Link Configuration. Refer to sections hereafter.
- 2. GenAPI setup:** Assign a value to the `C2CLinkConfiguration` GenTL Device feature.

IntraCard C2C-Link Configuration Hardware Setup

This configuration exclusively uses FPGA internal resources to build the C2C-Link interconnect; it doesn't require any additional hardware!

IntraPC C2C-Link Configuration Hardware Setup

This configuration requires one accessory cable such as the 3303 C2C-Link Ribbon Cable or a custom-made C2C-Link cable for each PC.


Insert a C2C-Link female connector of the C2C-Link cable into the C2C-Link pin header connector of each participating Coaxlink cards.

InterPC C2C-Link Configuration Hardware Setup

This configuration requires one 1636 InterPC C2C-Link Adapter for each PC and one RJ 45 CAT 5 STP straight LAN cable for each adapter but the last one.

In each participating PC:

- 1.** Install 1636 InterPC C2C-Link Adapter into a free slot and secure the bracket.
- 2.** Connect the adapter to a power source. Refer to "[Adapter Powering](#)" on page 142.
- 3.** Using one 3303 C2C-Link Ribbon Cable, bind together the C2C-Link connectors of all the participating cards together with the C2C-Link of the adapter card.
- 4.** Using LAN Cables, interconnect the adapters. Refer to "[InterPC Interconnect](#)" on page 142.

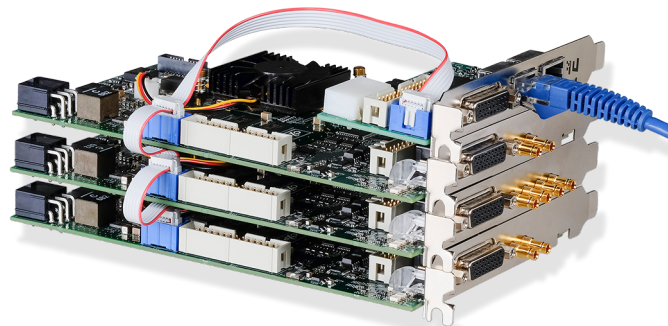


IntraPC segment of an InterPC configuration

16.7. 3303 C2C-Link Ribbon Cable

3303 C2C-Link Ribbon Cable is an accessory product used for Intra-PC C2C-Link interconnection.

3303 C2C-Link Ribbon Cable

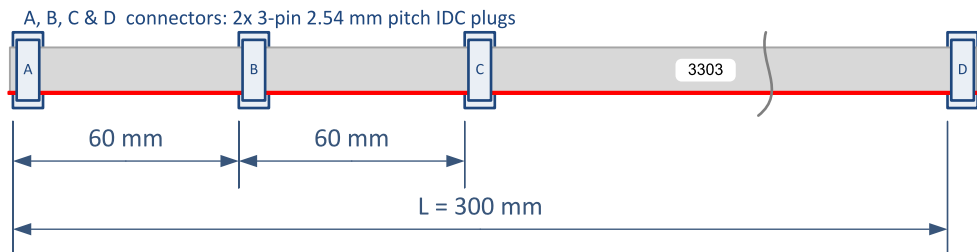


3303 C2C-Link Ribbon Cable assembly

The 3303 C2C-Link Ribbon Cable is a 6-conductor 0.05-in pitch ribbon fitted with 4 6-pin female ribbon cable connectors.

This cable is used for interconnecting the C2C-Link connectors of up to 4 cards located in the same PC.

16.8. Custom C2C-Link Ribbon Cable Assembly

Assembly instructions of a custom-made IntraPC C2C-Link interconnection.

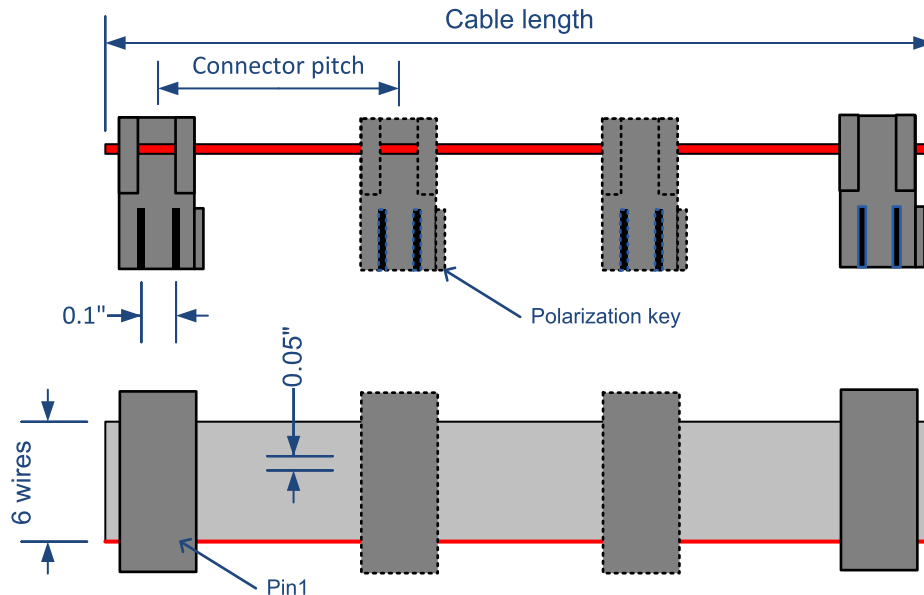

Custom C2C-Link Ribbon Cable Assembly

The cable assembly is composed with:

- A piece of a 6-conductor 0.05-in pitch ribbon cable. For instance: *Belden's (9L280XX Series)*.
- Two or more pieces of a 2 x 3-pin female ribbon cable connectors. For instance: *TE connectivity 1-1658528-1*.

The cable assembly has:

- A maximum of 4 connectors allowing up to 4 cards to share the same C2C-Link.
- A maximum length of 60 cm.

Note: *The connector pitch(es) must be determined according to the actual card to card spacing in the Host PC.*

16.9. 1636 InterPC C2C-Link Adapter


The 1636 InterPC C2C-Link Adapter is an accessory product for use as an **InterPC C2C-Link extender** and/or as a **HD26F I/O adapter**.

For a 1636 InterPC C2C-Link Adapter hardware description, refer to ["Hardware Description" on page 139](#).

For a description of the C2C-Link extender usage, refer to ["Using 1636 as C2C-Link Extender" on page 142](#).


For a description of the HD26F I/O adapter usage, refer to ["Using 1636 as HD26F I/O Adapter" on page 141](#).

Product Pictures

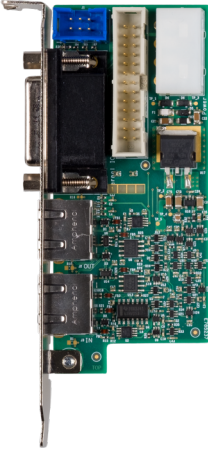

Pictures of 1636 InterPC C2C-Link Adapter

Hardware Description

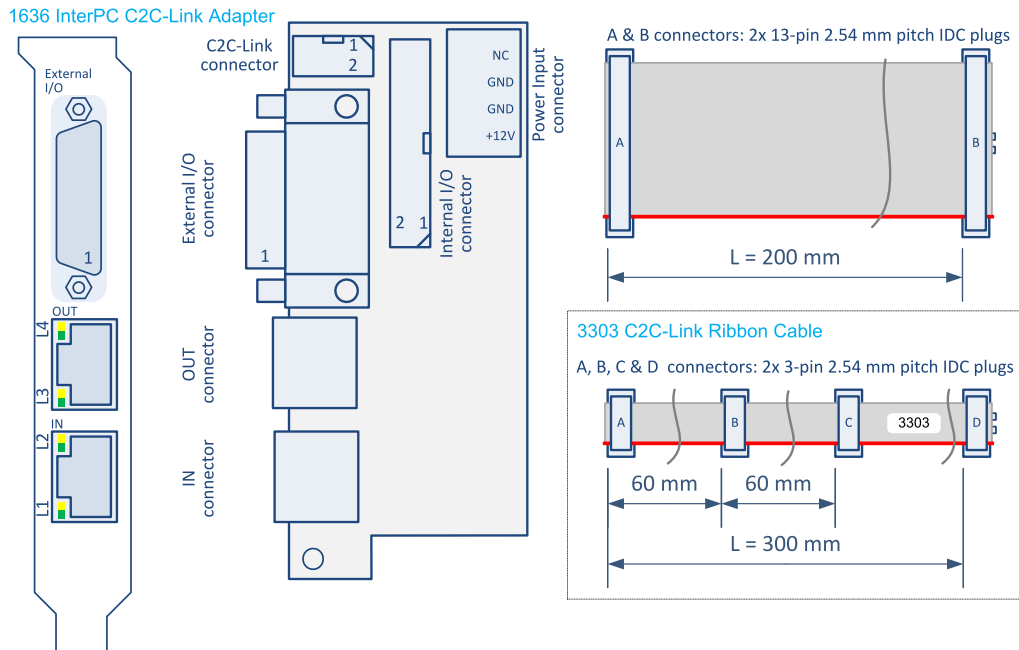

1636 InterPC C2C-Link Adapter

The 1636 InterPC C2C-Link Adapter product accessory is composed of:

- A printed circuit board assembly fitted with a standard-profile PC bracket.
- A 200-mm 26-way ribbon cable.
- A 3303 C2C-Link Ribbon Cable.

Connectors

The **External I/O connector** is a HD26F – 26-pin 3-row high-density female – Sub-D connector fitted on the bracket with UNC 4-40 screws. Refer to ["Using 1636 as HD26F I/O Adapter" on page 141](#) for the usage description and the pin assignments.

The **IN connector** and the **OUT connector** are RJ-45 8-pin sockets fitted on the bracket. Refer to ["Using 1636 as C2C-Link Extender" on page 142](#) for the usage description.

The **Internal I/O connector** is a 26-pin dual-row 0.1" pitch pin header with shrouding. Refer to ["Using 1636 as HD26F I/O Adapter" on page 141](#) for the usage description and the pin assignments.

The **C2C-Link connector** is a 6-pin dual-row 0.1" pitch pin header with shrouding. Refer to ["Using 1636 as C2C-Link Extender" on page 142](#) for the usage description.

The **Internal I/O connector** is a 26-pin dual-row 0.1" pitch pin header with shrouding. Refer to ["Using 1636 as HD26F I/O Adapter" on page 141](#) for the usage description.

The **Power Input connector** is a 0.2" pitch right-angled Disk Drive Power connector. Refer to ["Using 1636 as C2C-Link Extender" on page 142](#) for the usage description.

Lamps

The **IN connector** and the **OUT connector** are each equipped with 2 green/yellow LED lamps named respectively **L1**, **L2**, **L3** and **L4**. Refer to ["Using 1636 as C2C-Link Extender" on page 142](#) topic for the usage description.

16.10. Using 1636 as HD26F I/O Adapter

To use 1636 InterPC C2C-Link Adapter as an HD26F I/O adapter:

- Plug the A-connector of the supplied 200-mm 26-way ribbon cable to the **Internal I/O** connector of the 1636 InterPC C2C-Link Adapter
- Plug the B-connector to the **Internal I/O** connector of the target card.

Note: *No power supply connection is required when using the 1636 InterPC C2C-Link Adapter as an HD26F I/O adapter only.*

16.11. Using 1636 as C2C-Link Extender

Adapter Powering


Important: The 1636 InterPC C2C-Link Adapter must be powered when it is used as a C2C-Link extender.

The user has two options to supply power to the adapter:

- From the Coaxlink card +12V power output of an Internal IO connector through the 26-way ribbon cable attached to the **Internal I/O** connector.
- From the Host PC power supply through a Disk Drive Power connector cable plugged into the **Power Input connector**.

Parameter	Min.	Typ.	Max.	Units
+12 V DC Input voltage	11.0	12.0	13.0	V
+12 V Input power		1.8		W

InterPC Interconnect

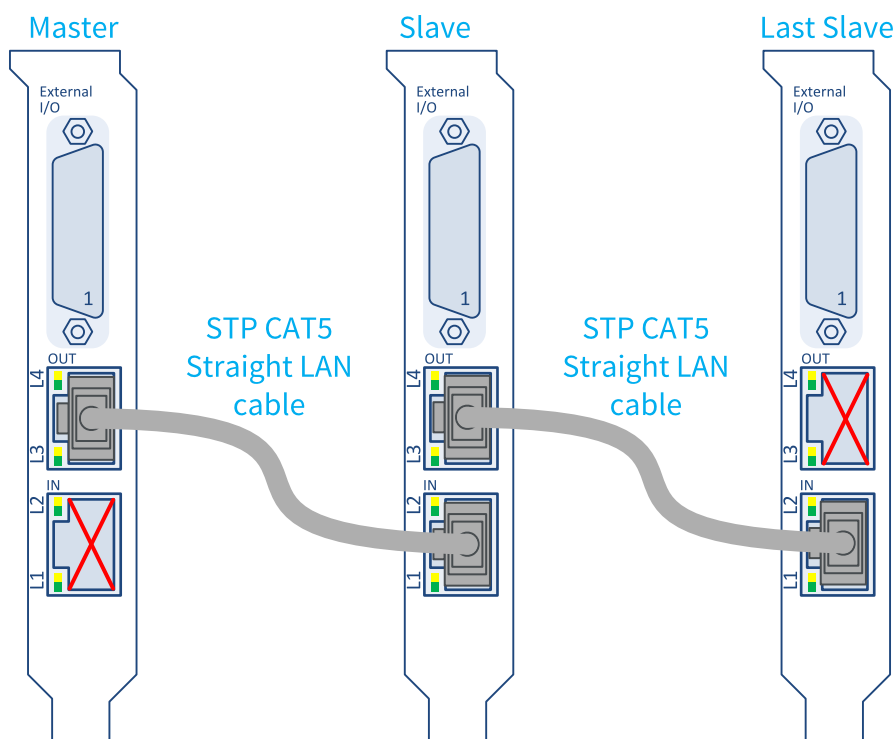

External wiring of a C2C-Link across 3 adapters.

The external wiring of the C2C-Link is made with RJ 45 CAT 5 STP straight LAN cables. N-1 cables are required to interconnect N adapters in a daisy-chain scheme.

The daisy-chain begins on the OUT connector of the Master adapter and ends at the IN connector of the Last Slave adapter.


The IN connector of the Master adapter and the OUT connector of the Last Slave adapter are unused.

Note: *The adapter disables the signal drivers of the IN and OUT connectors to avoid electrical damages when it detects a bad or a missing connection.*

The InterPC cable drivers and receivers are not electrically isolated.

Important: *To avoid damages, the interconnected PCs must have a common ground reference.*

Lamps

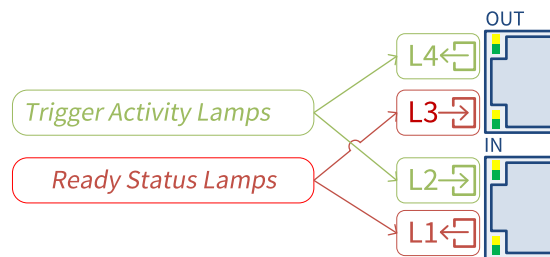

1636 InterPC C2C-Link Adapter lamps

Trigger Activity Lamps

The L2 and L4 Lamps indicate the trigger activity on the LAN cable. L2 shows the activity on the received trigger signals; L4 shows the activity on the transmitted trigger signals.

Lamp State	Indication
Off	The LAN cable is unplugged or the adapter is not powered.
Green	No trigger activity. <i>No trigger events in the past 10 milliseconds.</i>
Yellow	Trigger activity. <i>One or more trigger events in the past 10 milliseconds.</i>

Ready Status Lamps


The L1 and L3 Lamps indicate the state of the ready signal on the LAN cable. L1 shows the state of the transmitted ready signal; L3 shows the state of the received ready signal.

Lamp State	Indication
Off	The adapter is not powered.
Green	Ready true.

Lamp State	Indication
	<p>For L1: all the C2C-Link devices attached to this adapter and the downwards adapters (if any) are ready.</p> <p>For L3: all the C2C-Link devices attached to the downwards adapters (if any) are ready.</p>
Yellow	<p>Ready false.</p> <p>For L1: one or more C2C-Link devices attached to this adapter and the downwards adapters (if any) are not ready.</p> <p>For L3: one or more C2C-Link devices attached to the downwards adapters (if any) are not ready.</p>

Note: Unlike the trigger activity lamps, the ready signals are not enlarged. Short-duration not-ready states are hardly visible!

Adapters Array Lamp States - Normal Situations

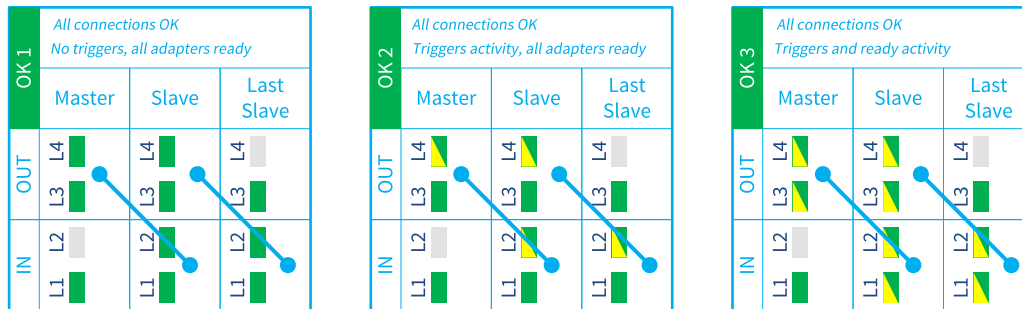


The above drawings show the lamps states of 3 daisy-chained adapters for 3 normal situations.

In the OK 1 situation, all adapters are ready to accept triggers but no triggers are sent by the master.

In the OK 2 situation, the master adapter sends triggers and the ready signal of all adapters is permanently high. The yellow/green toggling L2 and L4 lamps indicate the trigger activity. The steady green L1 and L3 lamps indicate that all adapters are permanently ready to receive triggers.

In the OK 3 situation, the master adapter sends triggers and the ready signal of all adapters is cycling. The yellow/green toggling L2 and L4 lamps indicate the trigger activity. The yellow/green toggling L1 and L3 lamps indicate that all adapters are not ready to receive triggers for a significant duration.

Adapters Array Lamp States - Abnormal Situations

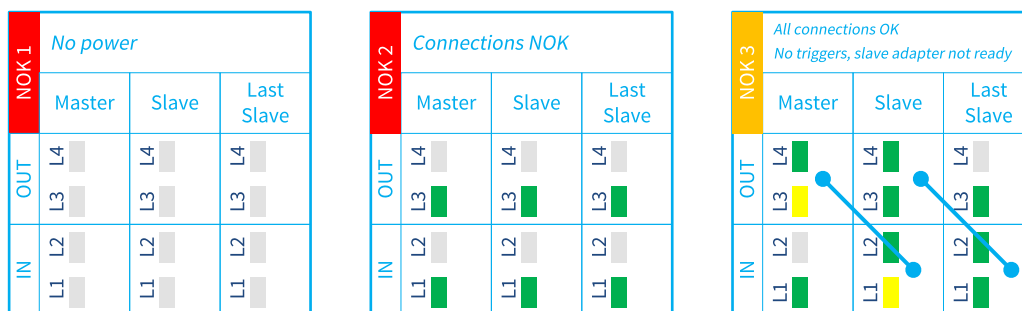

The above drawings show the lamps states of 3 daisy-chained adapters for 3 abnormal situations.

In the NOK 1 situation, no adapters are powered. All lamps are Off.

In the NOK 2 situation, all adapters are powered but all connections are missing or incorrect.

In the NOK 3 situation, all adapters are powered and all connections are OK, but the second adapter is not ready preventing the master to send new triggers. This situation is considered as abnormal when it persists.

Troubleshooting Guide


Lamps state	Indication and possible causes	Action
All lamps Off	The adapter is not powered.	Apply power to the adapter
L2 Off L1 Green	The external connection to the IN connector is missing or incorrect.	For the master adapter, this is OK: nothing to do! For the other adapters: check and correct the connection to the OUT connector of the previous adapter in the daisy-chain.
L4 Off L3 Green	The external connection to the OUT connector is missing or incorrect.	For the last slave adapter of the daisy-chain, this is OK: nothing to do! For the other adapters: check and correct the connection to the IN connector of the next adapter in the daisy-chain.

17. I/O Toolbox

17.1. I/O Toolbox Context	147
17.2. I/O Toolbox Structure	148
17.3. I/O Toolbox Composition	150
17.4. Line Input Tool	152
17.5. Quadrature Decoder Tool	153
17.6. Event Input Tool	156
17.7. Divider Tool	157
17.8. Multiplier/Divider Tool	158
17.9. Delay Tool	161
17.10. User Actions Tool & User Output Register	163

The **I/O Toolbox** is a configurable array of tools that builds-up streams of event pulses from external signals applied to the input-capable I/O lines.

17.1. I/O Toolbox Context

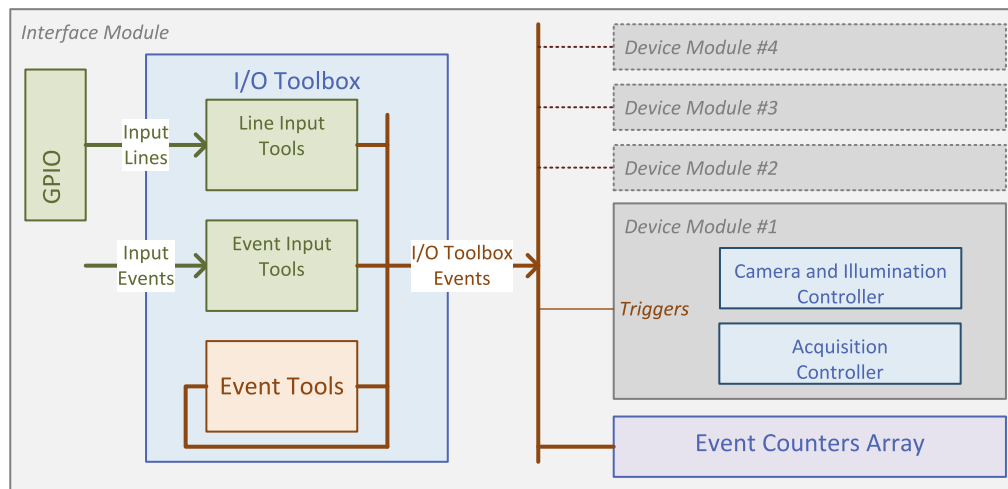

I/O Toolbox context block diagram

There is only one I/O Toolbox instance per Coaxlink card. It belongs to the GenTL Interface module.

The input-capable I/O lines (*Input Lines*) and a selected event sources (*Input Events*) are feeding the *Input Tools* the I/O Toolbox.

All the I/O Toolbox tools generate one (or more) event streams (*I/O Toolbox Events*).


The I/O Toolbox Events streams are distributed to various consumers on the card.

Any I/O Toolbox events can be used in any GenTL Device module of the card as:

- The hardware Cycle Trigger source.
- The hardware Start-of-scan Trigger source.
- The hardware End-of-scan Trigger source.

Every I/O Toolbox event stream is associated with a 32-bit event counter.

17.2. I/O Toolbox Structure

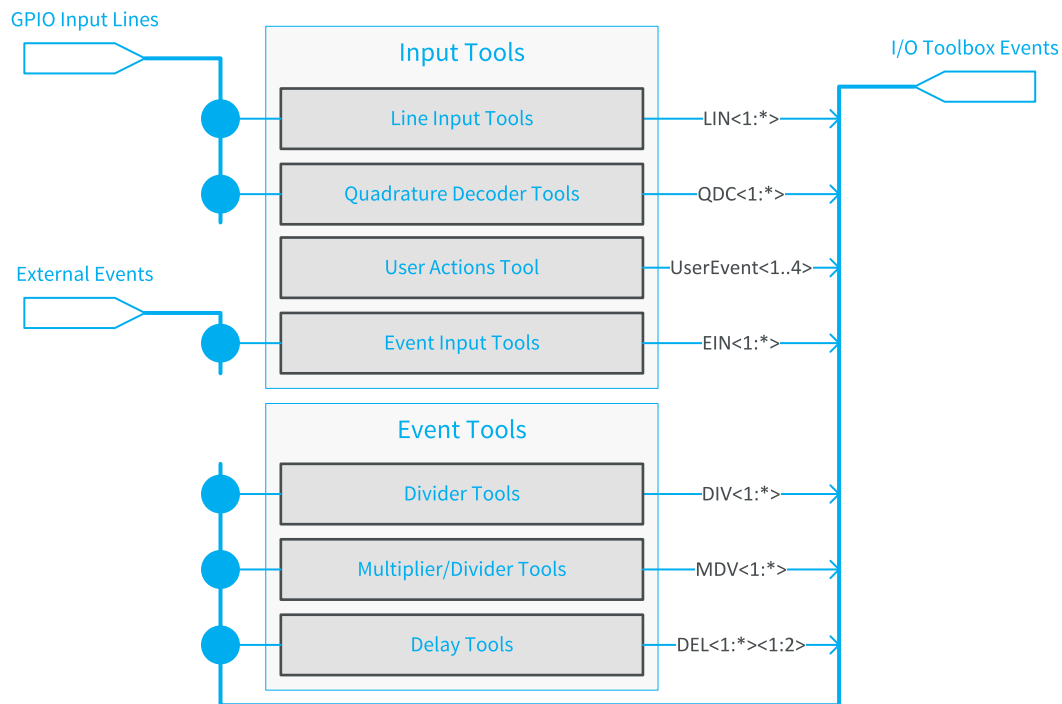

I/O Toolbox structure diagram

I/O Toolbox Input Tools

The I/O Toolbox input tools are fed by the input-capable GPIO lines and a selected set of hardware event sources from outside the I/O Toolbox.

They deliver one I/O Toolbox event stream.

There are four types of input tools:

1. The **Line Input Tools**, for use with sensors and detectors using a single GPIO input line.
2. The **Quadrature Decoder Tools** for use with quadrature motion encoders using two GPIO input lines.
3. The **User Actions Tool** for use by the application software to generate user events
4. The **Event Input Tools** for use in line-scan data-forwarding applications.

The **GPIO Input Lines Interconnections Matrix** allows any Line Tool to be fed by any GPIO input line.

The **External Events Interconnections Matrix** allows any Event Input Tool to be fed by the external event source.

Note: Currently, only the CoaXPress Host interface GPIO message receiver of connector A is available.

I/O Toolbox Event Tools

The I/O Toolbox Event Tools are fed by one (or more) I/O Toolbox event stream(s) and deliver one (or more) I/O Toolbox event stream(s).

There are three types of events tools:

1. The **Divider Tool** generates an event stream by keeping 1 event out of D events of the input stream.
2. The **Multiplier/Divider Tool** generates an event stream having M events every D events of the input stream.
3. The **Delay Tool** delays the events of one (or two) streams, either by a configurable period of time or by a configurable number of motion encoder ticks.

The **Internal Events Interconnection Matrix** allows any Event Tool to be fed by any I/O Toolbox event stream.

Tools can be cascaded to form a tool chain:

A tool chain always begins with a Line Tool.

A (Line or Event) Tool may drive 0, 1 or several Event Tools.

17.3. I/O Toolbox Composition

The composition of the I/O Toolbox is product- and firmware-variant-specific.

1630 Coaxlink Mono

Firmware Variant	#LIN	#QDC	#DIV	#MDV	#DEL	#UAS	#EIN
1-camera	8	1	1	1	2	1	-

1631 Coaxlink Duo

Firmware Variant	#LIN	#QDC	#DIV	#MDV	#DEL	#UAS	#EIN
1-camera	8	1	1	1	2	1	-
2-camera	8	2	2	2	2	1	-
1-camera, line-scan	8	1	1	1	1	1	-
2-camera, line-scan	8	2	2	2	2	1	-

1632 Coaxlink Quad

Firmware Variant	#LIN	#QDC	#DIV	#MDV	#DEL	#UAS	#EIN
1-camera	8	1	1	1	2	1	-
2-camera	8	2	2	2	2	1	-
1-camera, line-scan	8	1	1	1	2	1	-

1633 Coaxlink Quad G3

Firmware Variant	#LIN	#QDC	#DIV	#MDV	#DEL	#UAS	#EIN
1-camera	8	1	1	1	2	1	-
2-camera	8	2	2	2	2	1	-
4-camera	8	4	4	4	4	1	-
1-camera, line-scan	8	1	1	1	2	1	-
2-camera, line-scan	8	2	2	2	2	1	-
4-camera, line-scan	8	4	4	4	4	1	-
1-camera, 4-data-stream	8	1	1	1	2	1	-
1-slm-camera	8	1	1	1	2	1	-
1-sls-camera	8	1	1	1	2	1	-

1629 Coaxlink Duo PCIe/104-EMB 1634 Coaxlink Duo PCIe/104-MIL

Firmware Variant	#LIN	#QDC	#DIV	#MDV	#DEL	#UAS	#EIN
1-camera	8	1	1	1	2	1	-
2-camera	8	2	2	2	2	1	-
1-camera, line-scan	8	1	1	1	2	1	-

1635 Coaxlink Quad G3 DF

Firmware Variant	#LIN	#QDC	#DIV	#MDV	#DEL	#UAS	#EIN
1-camera	8	1	1	1	2	1	-
1-df-camera	8	1	1	1	2	1	-
1-camera, line-scan	8	1	1	1	2	1	-
1-df-camera, line-scan	8	1	1	1	2	1	2

1638 Coaxlink Quad CXP-3

Firmware Variant	#LIN	#QDC	#DIV	#MDV	#DEL	#UAS	#EIN
4-camera	8	1	1	-	1	-	-


3602 Coaxlink Octo

Firmware Variant	#LIN	#QDC	#DIV	#MDV	#DEL	#UAS	#EIN
1-camera	8	1	1	1	1	1	-
2-camera	8	1	1	1	1	1	-
8-camera	8	1	1	1	1	1	-
1-camera, line-scan	8	1	1	1	1	1	-
2-camera, line-scan	8	1	1	1	1	1	-

17.4. Line Input Tool

Tool Name	Short Name	Inputs Count/Type	Outputs Count/Type/Name
Line Input Tool	LIN	1 GPIO input line	1 event stream: LIN<i>

Diagram

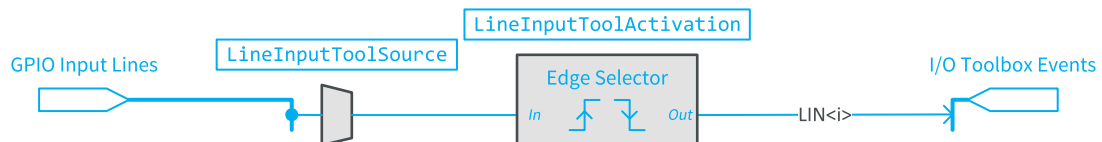

LIN tool functional and wiring diagram

Any input-capable GPIO line can be selected as the input source.

The tool feeds one I/O Toolbox event stream named LIN<i>.

Operation


The Line Input tool detects the rising or the falling edge of the *LineInput* signal delivered by the I/O Control block selected by `LineInputToolSource`.

The Line Input tool delivers one event at every rising or falling edge according to the `LineInputToolActivation` settings.

17.5. Quadrature Decoder Tool

Tool Name	Short Name	Inputs Count/Type	Outputs Count/Type/Name
Quadrature Decoder Tool	QDC	2 paired I/O input lines	1 event stream: QDC<i> 1 status bit: QDC<i>Direction 1 status word: QDC<i>Position

Diagram

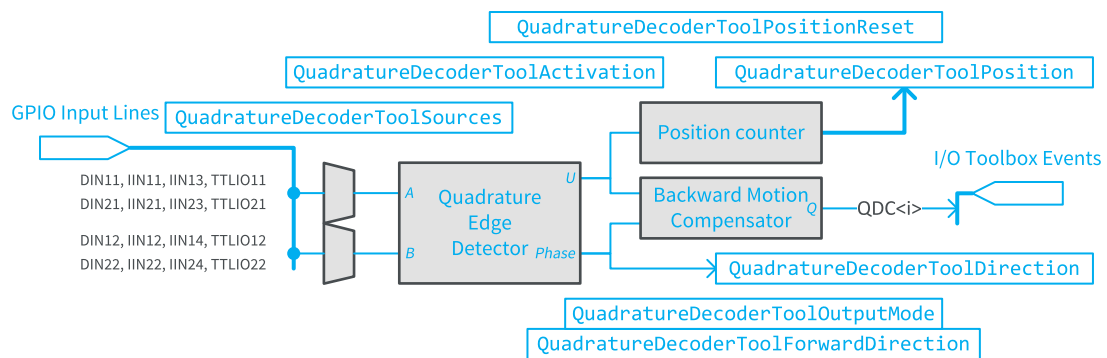

QDC tool functional and wiring diagram

The quadrature edge detector is fed by a pair of signals named A and B delivered by a **phase-quadrature motion encoder** device.

The source selectors allows following pairs of adjacent input-capable GPIO input lines to be selected as A/B input sources: DIN11-DIN12, DIN21-DIN22, TTLIO11-TTLIO12, TTLIO21-TTLIO22, IIN11-IIN12, IIN13-IIN14, IIN21-IIN22, and IIN23-IIN24.

The tool includes the following function blocks:

- A quadrature edge detector
- A backward motion compensator
- A 32-bit position counter

The tool delivers:

- One I/O Toolbox event stream named QDC<i>.
- A *direction* status bit indicating the direction of the motion.
- A *position* status word indicating the position offset.


Operation

The Quadrature Decoder Tool decodes the A/B signals and delivers 1, 2, or 4 events every A/B cycle, possibly filtered by the backward motion compensator.

Quadrature Edge Detector

The **quadrature edge detector** analyzes the transitions on the A/B lines. It delivers:

- An event stream, named U, having 1, 2, or 4 events every A/B cycle according the `QuadratureDecoderToolActivation` settings
- An identification of the phase between A and B (A leads B or vice-versa)

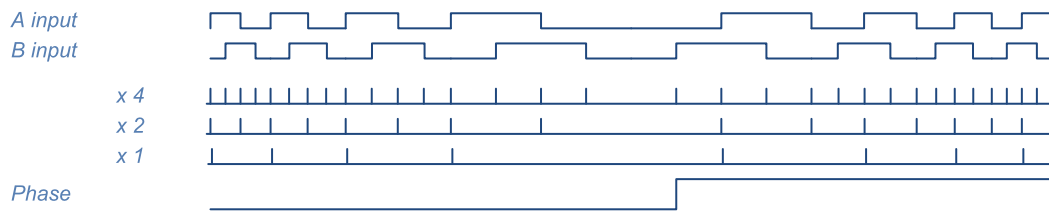

Quadrature edge detector waveforms


The U stream may be filtered by the backward motion compensator before being delivered to the QDC<i></i> output.

The phase indication may be inverted according to the `QuadratureDecoderToolForwardDirection` settings before being delivered to the *Direction* output.

Backward motion compensator


The **backward motion compensator** (BMC) filters the U stream according to the `QuadratureDecoderToolOutputMode` setting.

When set to `Unfiltered`, all the events of the U stream are delivered to the QDC<i></i> output:

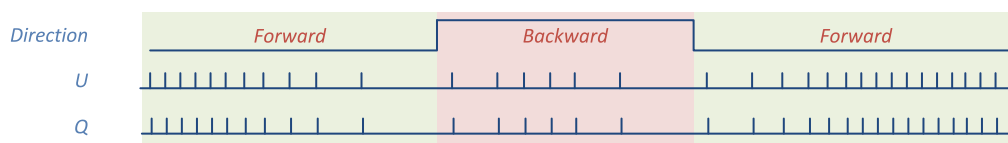


BMC waveforms - Unfiltered

When set to `ForwardOnly`, only the events corresponding to the forward direction are delivered to the QDC<i></i> output:

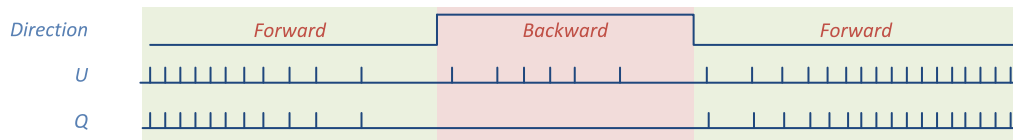

BMC waveforms - Forward Only

When set to `FirstPassForwardOnly`, only the events corresponding to the first pass in the forward direction are delivered to the QDC<i> output:

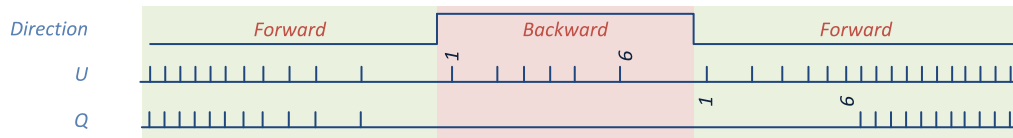

BMC waveforms - First Pass Forward Only

Position Counter

The **position counter** increments by 1 for any U event corresponding to the forward direction and decrements by 1 for the backward direction.


The counter can be reset using the `QuadratureDecoderToolPositionReset` command.

17.6. Event Input Tool

Applies to:

Tool Name	Short Name	Inputs Count/Type	Outputs Count/Type/Name
Event Input Tool	EIN	1 Event	1 event stream: EIN<i>

Diagram

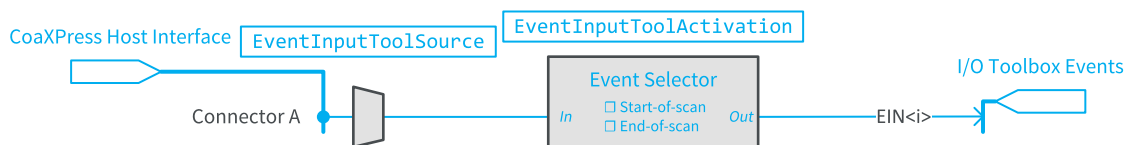

EIN tool functional and wiring diagram

Connector A of the CoaXPress Host Interface is the only source of events that can be selected. The tool feeds one I/O Toolbox event stream named EIN<i>.

Operation


The Event Input tool decodes the custom CoaXPress GPIO message received on the CoaXPress connector A of a slave 1635 Coaxlink Quad G3 DF.

The Event Input tool delivers one event on the reception of a "Start-of-scan message" or an "End-of-scan message" according to the EventInputToolActivation settings.

17.7. Divider Tool

Tool Name	Short Name	Inputs Count/Type	Outputs Count/Type/Name
Divider Tool	DIV	1 Toolbox event stream	1 event stream: DIV<i>

Diagram

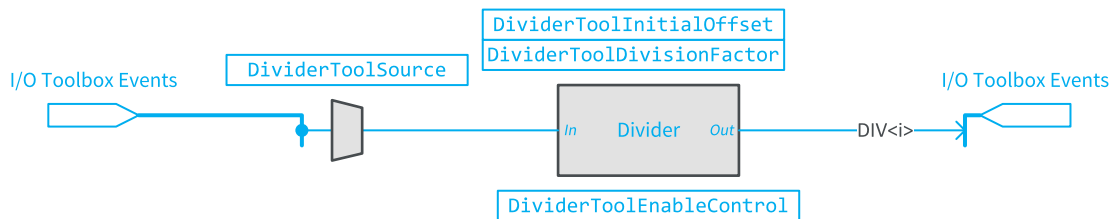


DIV tool functional and wiring diagram

Any I/O Toolbox event stream can be selected as the input source.

The tool feeds one I/O Toolbox event stream named DIV<i>.

Operation

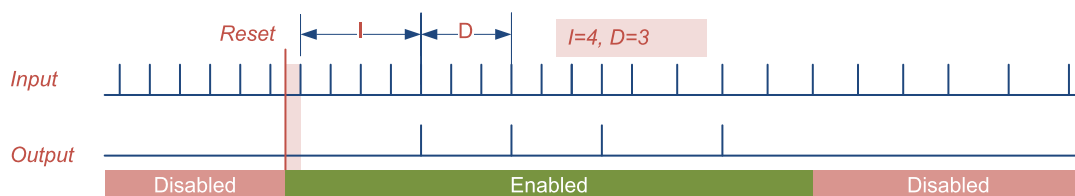

DIV tool waveforms

Once enabled, the Divider tool skips the first – **I** – input events before delivering an event every **D** input events.

The division factor – **D** – is defined by `DividerToolDivisionFactor`. The default value is 2 and the value range is 1 ... 65535.


The initial offset – **I** – is defined by `DividerToolInitialOffset`. The default value is 0 and the value range is 0 ... 65535.

The operation state is defined by `DividerToolEnableControl`. The default value is `Disable0`

17.8. Multiplier/Divider Tool

Tool Name	Short Name	Inputs Count/Type	Outputs Count/Type/Name
Multiplier/Divider Tool	MDV	1 Toolbox event stream	1 Toolbox event stream: MDV<i>

Multiplier/Divider Tool Wiring Diagram

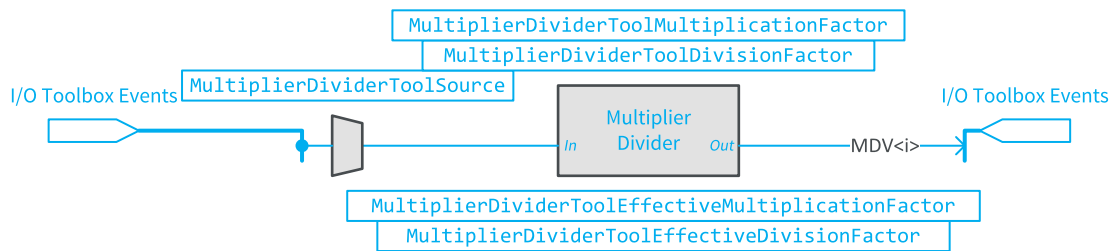

MDV tool functional and wiring diagram

Any I/O Toolbox event stream can be selected as the input source.


The tool feeds one I/O Toolbox event stream named MDV<i>.

Multiplier/Divider Tool Operation

The Multiplier/Divider tool multiplies and/or divides the input rate by any rate conversion ratio – RCR – value in the range 0.001 to 1000.0.

The Multiplier/Divider tool measures the time interval between every consecutive input events and adapts the output rate accordingly.

The Multiplier/Divider is **frequency accurate**. The output frequency is strictly proportional to the input frequency provided that the input frequency is stable (or varies slowly). In such conditions, the Multiplier/Divider delivers M events for every D input events.

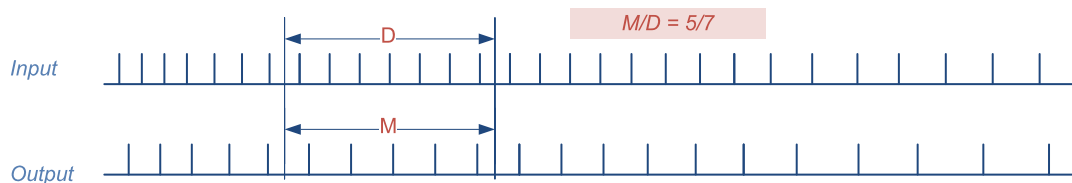

MDV tool waveforms

The Rate Conversion Ratio is configured as the ratio of two float numbers:

- The **M** value is defined by `MultiplierDividerToolMultiplicationFactor`. The default value is 1.0 and the value range is 0.001 to 1000.0.
- The **D** value is defined by `MultiplierDividerToolDivisionFactor`. The default value is 1.0 and the value range is 0.001 to 1000.0.


The effective multiplication and division factors are respectively reported by `MultiplierDividerToolMultiplicationFactor` and `MultiplierDividerToolDivisionFactor`.

Note: The effective values may slightly differ from the specified values. However, the RCR relative error remains negligible (less than 1/1000).

Note: Frequency variations of the input event stream are reported to the output event stream with a latency of 1 period of the input event stream. Such a latency induces some phase errors in the output event stream. The phase of the output event stream accumulates retards when the input frequency increases and vice-versa when the input frequency increases. Consequently, the Multiplier/Divider is **not phase accurate**.

Multiplier/Divider Tool Operating Limits

Characteristic	Symbol	Min	Max
Rate Conversion Ratio	RCR	0.001	1000
Input Rate	f_{IN}	0.1 Hz	5 MHz
Output Rate	f_{OUT}	0.1 Hz	5 MHz

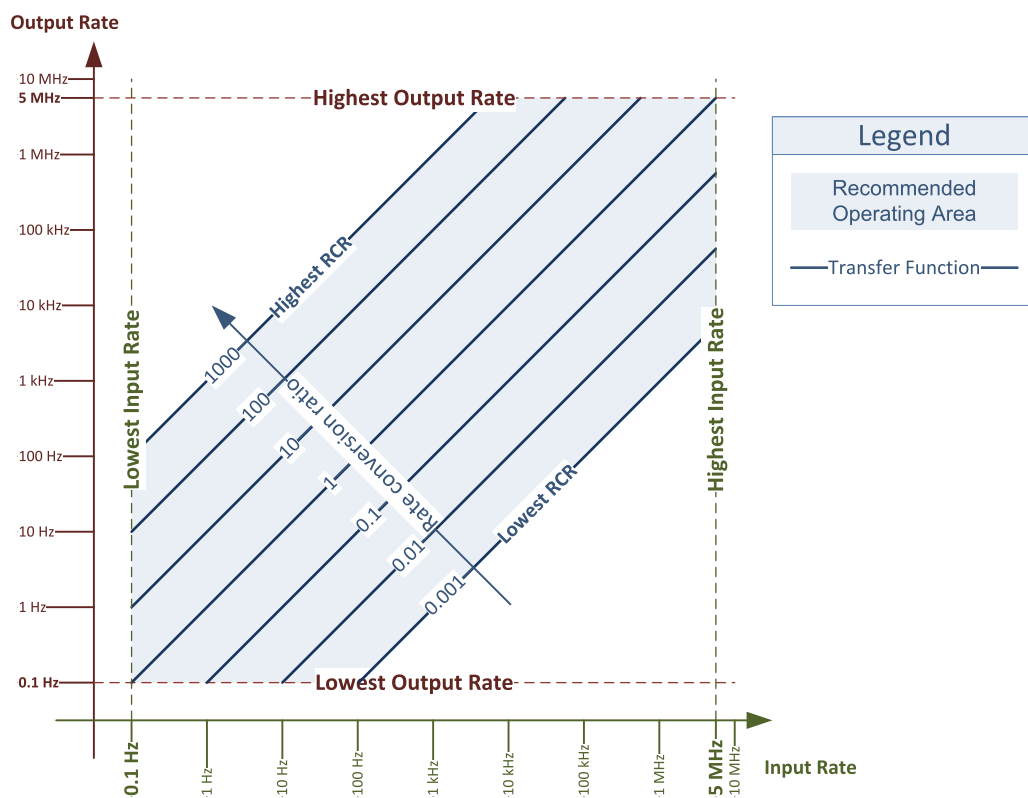


MDV tool operating limits diagram

17.9. Delay Tool

Tool Name	Short Name	Inputs Count/Type	Outputs Count/Type/Name
Delay Tool	DEL	2 Toolbox event streams 1 clock signal	2 Toolbox event stream: DEL<i>1 , DEL<i>2

Diagram

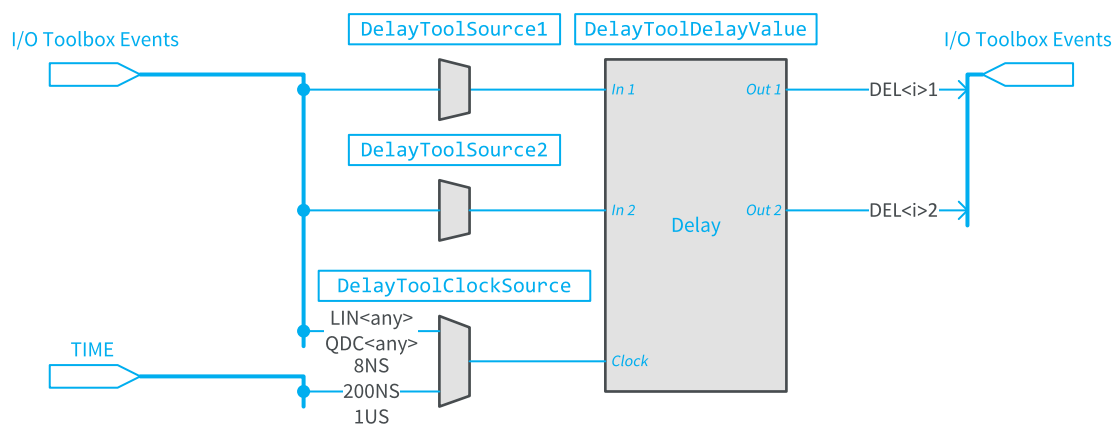

DEL tool functional and wiring diagram

Any I/O Toolbox event stream can be selected as the input 1 source.

Any I/O Toolbox event stream can be selected as the input 2 source.

The tool feeds two I/O Toolbox event streams. The outputs of the tool instance <i> are named DEL<i>1 and DEL<i>2.

Operation

The event streams applied on either inputs (In1 and In2) are replicated on the corresponding output (Out1 and Out2) after a configurable number of clock tick events.

The sources are selected by DelayToolSource1 and DelayToolSource2 respectively.

The same delay applies to both channels. The common delay is defined by DelayToolDelayValue. The delay range is 0 up to 16,777,215 clock ticks.


The same clock source applies to both channels. The clock source is defined by DelayToolClockSource. It can be a **time base** or a **line tool event stream**.

Selecting a **time base** implements a time delay function. The available time bases are:

- 8NS: A 125 MHz high accuracy regular time base allowing delays up to 134 milliseconds by steps of 8 ns
- 200NS: A 5 MHz high accuracy regular time base allowing delays up to 3.35 seconds by steps of 200 ns
- 1US: A 1 MHz high accuracy regular time base allowing delays up to 16.7 seconds by steps of 1 μ s


Selecting a **line tool event stream** implements a position offset function when the line tool is fed by a motion encoder device. Any available Line Input tool or Quadrature Decoder tool can be used as delay clock source.

Important: *The Delay tool operates as a delay line. The tool may accept a new event while the previous one is not yet delivered! The Delay tool is capable of recording, globally for all channels, up to 16 distinct events.*

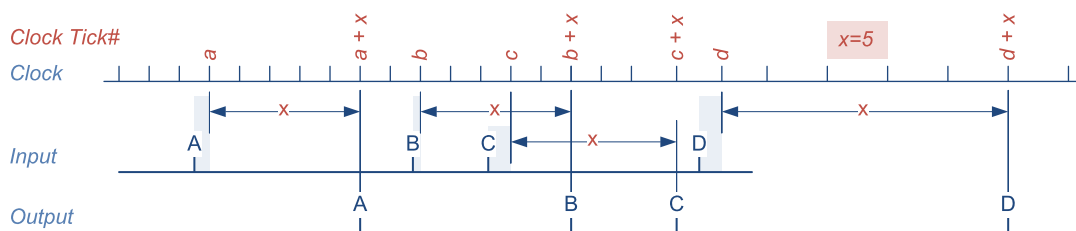

DEL tool waveforms

17.10. User Actions Tool & User Output Register

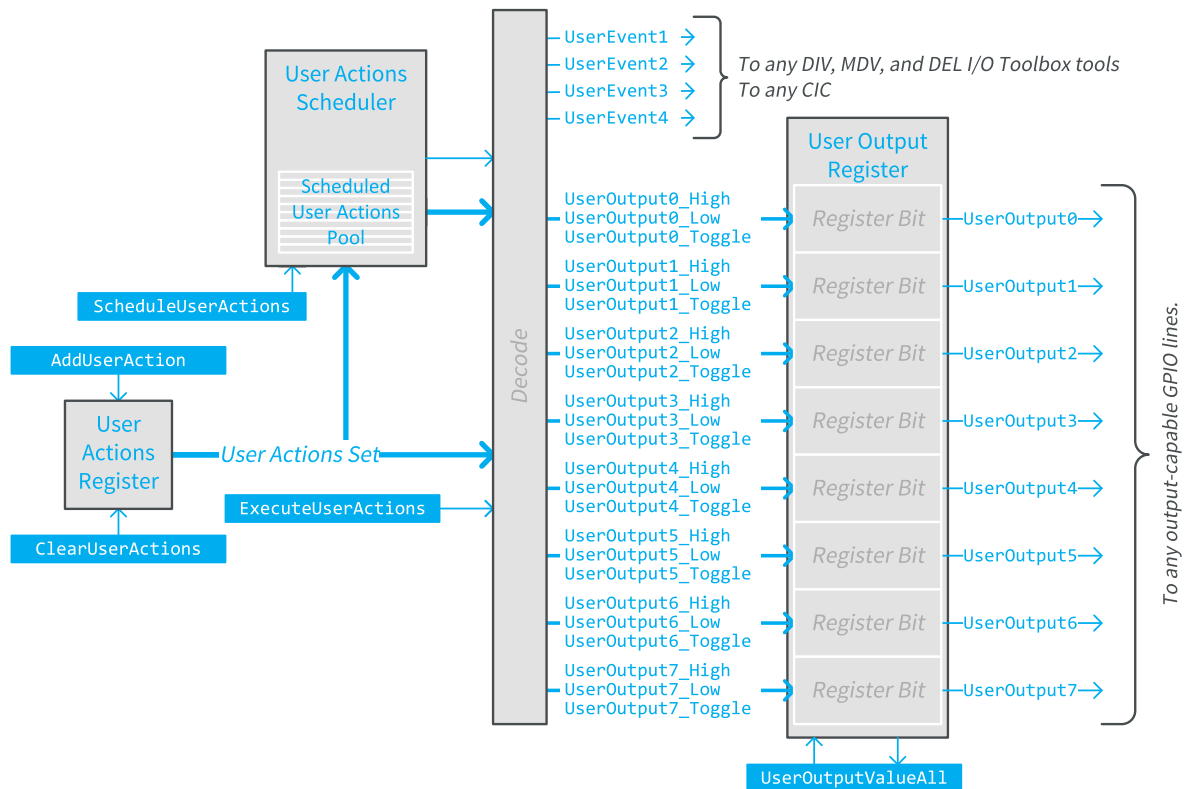

UAS tool functional and wiring block diagram

The **User Actions Tool (UAS)** allows the application software to perform the following **User Actions**:

- Generate events on any User Events source.
- Setting high any bit of the User Output Register.
- Setting low any bit of the User Output Register
- Toggling any bit of the User Output Register.


With the `ClearUserActions` and `AddUserActions` GenICam features, the user application can define a **User Actions Set** composed with all the actions to be executed simultaneously.

After having defined the User Actions Set, the application software has two options for its execution:

- Using the `ExecuteUserActions` GenICam feature to execute immediately all the actions defined in the **User Actions Set**.

- Using the `ScheduleUserActions` GenICam feature to delegate the execution of the User Actions Set to the **User Actions Scheduler**.

User Actions Scheduler

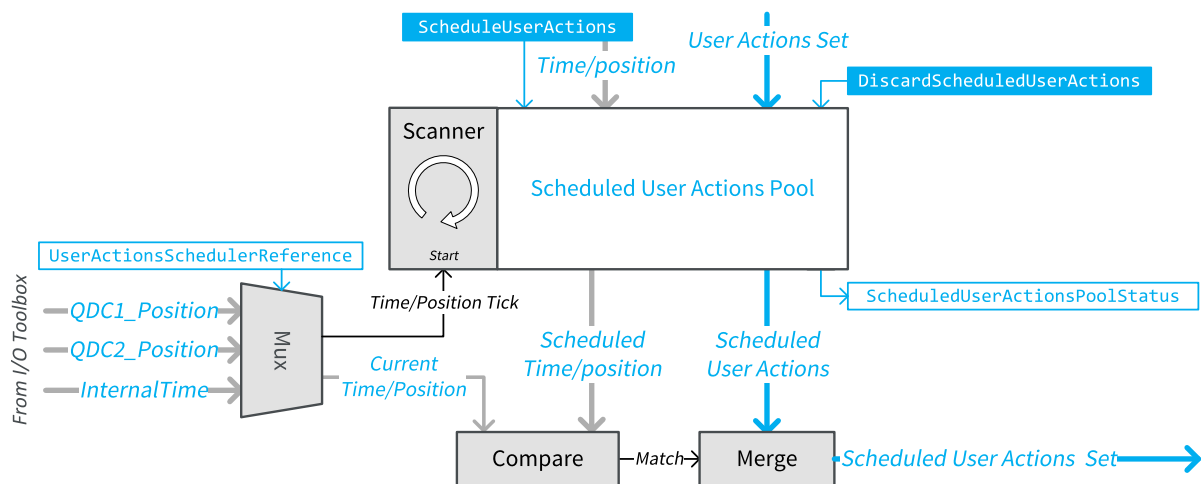

User actions scheduler functional diagram

The UAS function block allows an application software to postpone the execution of the actions.

Scheduler Reference Settings

Prior to using the User Actions Scheduler, the user application has to select a 32-bit reference counter. This is achieved by assigning one of the following three values to the `UserActionsSchedulerReference` GenICam feature:

- `InternalTime` selects the **Coaxlink card local time**: A monotonic time base that increments by 1 every 1 microsecond and wraps around after about 71 minutes when it reaches the maximum value of 4,294,967,295.
- `QDC1Position` and `QDC2Position` selects the **Position Counter** of the Quadrature Decoder tools QDC1 and QDC2 respectively.

Important: For correct operation of the UAS with a position reference, the position counter must increment monotonically and not faster than every microsecond.

Note: To ensure monotonic increments of the QDC position counter:

- Set properly `QuadratureDecoderToolForwardDirection` such that the counter increments when the object moves in the forward direction.
- If it exists any backward motion, prevent the position counter to decrement by setting the `QuadratureDecoderToolOutputMode` to `ForwardOnly` or to `FirstPassForwardOnly`.

Schedule User Actions Pool Operation

The Scheduled User Actions Pool is a memory area where the Scheduled User Actions Sets are

stored by the user application. The pool has 64 locations.

To add a new Scheduled User Actions to the Pool, the user application must:

1. Ensure that there is at least one free location by getting the value of the `ScheduledUserActionsPoolStatus` GenICam feature,
2. Define a User Actions Set,
3. Determines the time/position 32-bit value when the actions are to be executed,
4. Set this value to `ScheduledUserActions` GenICam feature.

Scheduled User Actions are removed from the pool when they are executed.

The pool can be cleared at any time by executing the `DiscardScheduledUserActions` GenICam command.

Scanner Operation and Scheduled Actions Execution

At every increment of the 32-bit (time or position) reference counter, the Scanner reads all the locations and compares the scheduled reference time/position with the current time/position count value.

When the values are identical, the Scheduled User Actions Set is elected for execution at the end of the scan and removed from the pool.

When multiple sets are elected for execution, their actions are merged.

Note: *Merging a set low and a set high action on the same User Output Register bit results into a toggle action.*

At the end of the scan: the merged elected actions are executed simultaneously. The time delay from the reference tick up to the execution of the elected actions is very small (sub-microsecond) and constant.

User Events Sources

There are User Events sources named `UserEvent1` ... `UserEvent4`.

Any User Event can be used:

- As Cycle Trigger source by all the Camera and Illumination Controllers.
- As Cycle Sequence Trigger source by all the Camera and Illumination Controllers.
- As event source by all the Divider tools of the I/O Toolbox.
- As event source by all the Multiplier/Divider tools of the I/O Toolbox
- As event source for both channels of all the Delay) tools of the I/O Toolbox.

User Output Register

Coaxlink products provide a User Output Register where bits are named `UserOutput0` ... `UserOutput7`.

Note: *1630 Coaxlink Mono implements only the 4 lowest bits!*

Any User Output Register bit can be used as a signal source by any output-capable GPIO line.

The user application has two options to define the state of the User Output Register bits:

- The User Actions option allows to change the state of each bit individually.
- Setting a value to the `UserOutputValueAll` to define the state of all bits.

Getting the value of `UserOutputValueAll` allows the user application to get the state of all bits.

18. General Purpose I/O Lines

18.1. I/O Lines Types	168
18.2. Available I/O Lines	169
18.3. I/O Lines Usage	171
18.4. I/O Control Blocks	172
18.5. Line Mode Control	174
18.6. I/O Lines Specifics	175
18.7. Line Polarity Control	176
18.8. Filter Control	177
18.9. Line Source Selection	178
18.10. Logical I/O Line State	179
18.11. Physical I/O Line State	180
18.12. Line Driver Physical Output States	181
18.13. Initial States	182

18.1. I/O Lines Types

Lines Type	Electrical Style	Frequency range	Name Prefix
Differential input lines	RS-422 differential inputs	Up to 5 MHz	DIN
TTL input/output lines	5 Volt-tolerant LVTTL single-ended input or LVTTL (totem-pole, open-emitter and open-collector) single-ended output	Up to 5 MHz	TTLIO
Isolated input lines	Isolated current-sense input compliant with 5 V, 12 V and 24 V signaling levels	Up to 50 kHz	IIN
Isolated output lines	Isolated 100 mA/30V contact output	Up to 50 kHz	IOUT

18.2. Available I/O Lines

I/O Lines per Product

Product	I/O Line Set 1	I/O Line Set 2
1629 Coaxlink Duo PCIe/104-EMB	OK*	-
1630 Coaxlink Mono	OK	-
1631 Coaxlink Duo	OK	OK
1632 Coaxlink Quad	OK	OK
1633 Coaxlink Quad G3	OK	OK
1633-LH Coaxlink Quad G3 LH	OK	OK
1634 Coaxlink Duo PCIe/104-MIL	OK*	-
1635 Coaxlink Quad G3 DF	OK	OK
1637 Coaxlink Quad 3D-LLE	OK	OK
1638 Coaxlink Quad CXP-3	OK	OK
3602 Coaxlink Octo	OK	-

Important: (*) For and : the I/O Line Set 1 is available only when the 3300 HD26F I/O module for Coaxlink Duo PCIe/104 , accessory is installed.

I/O Line Set 1

The I/O Line Set 1 is composed of 10 I/O lines:

I/O Line Type	I/O Line Names	Count
Differential input	DIN11, DIN12	2
TTL inputs/output	TTLIO11, TTLIO12	2
Isolated input	IIN11, IIN12, IIN13, IIN14	4
Isolated output	IOUT11, IOUT12	2

I/O Line Set 2

The I/O Line Set 2 is composed of 10 I/O lines.

I/O Line Type	I/O Line Names	Count
Differential input	DIN21, DIN22	2
TTL inputs/output	TTLIO21, TTLIO22	2
Isolated input	IIN21, IIN22, IIN23, IIN24	4
Isolated output	IOUT21, IOUT22	2

18.3. I/O Lines Usage

Input Lines

The input-capable I/O lines (DIN, TTLIO, IN) can be used as:

- General purpose input: An input signal whose state can be read or monitored by the host application.
- Motion encoder input: A pair of input signals delivered by a quadrature motion encoder and used for triggering the acquisition from the camera.
- Trigger input: An input signal used to trigger the acquisition from the camera.

Output Lines

The output-capable I/O lines (TTLIO, IOOUT) can be used as:


- General purpose output: An output signal whose state can be set by the host application.
- Strobe output: An output signal usually used to control a strobe light, in synchronization with the camera.
- Camera trigger output (only available on TTLIO): An output signal generated by the Coaxlink card and used to trigger the camera.

18.4. I/O Control Blocks


Every I/O line is controlled through one I/O control block.

Block Diagrams


There are 3 variations of the control block depending on the input/output capabilities of the I/O line:

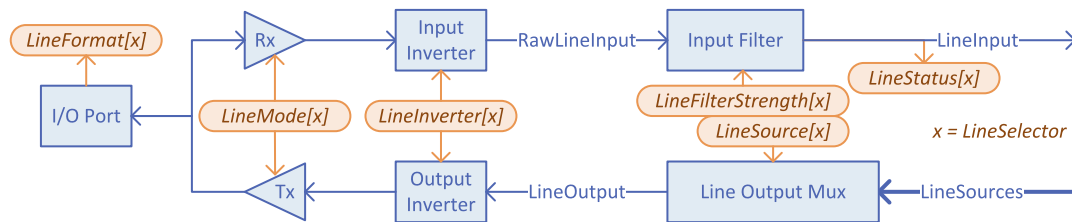

I/O control block for bidirectional I/O lines

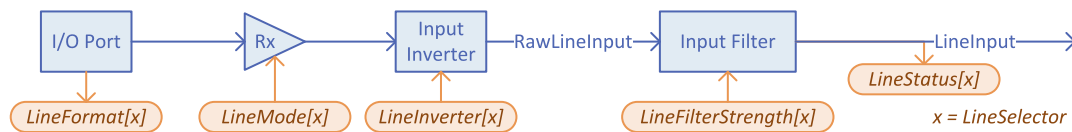

I/O control block for input-only I/O lines

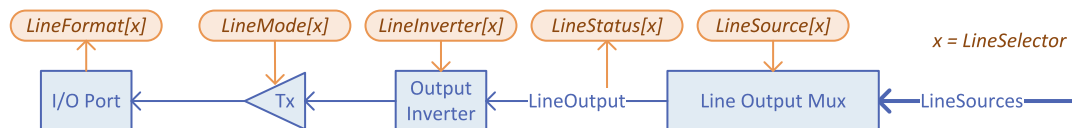

I/O control block for output-only I/O lines

In the above drawings:

- A thin blue line represents one individual electrical signal path
- A thick blue line represents a collection of electrical signal paths
- The blue arrowhead shows the propagation direction of the electrical signal(s)
- A blue shape represents a functional element of the I/O control block
- An orange (oval) shape represents a GenICam feature; the text inside being the feature name

- An [x] appended to the feature name indicates that the feature is associated with a selector feature (in this case: LineSelector)
- The orange arrowhead indicates the access-mode of the feature: read-only features having incoming arrows, writable features having an outgoing arrow.

Input Path

Input-only and bidirectional I/O lines share a common input path structure including:

- The I/O port block representing the I/O pins on the I/O connector(s)
- The Rx block representing the line receiver circuit
- The Input Inverter block representing the user-configurable logic inverter
- The Input Filter block representing the user-configurable glitch-removal filter

Output Path

Output-only and bidirectional I/O lines share a common output path structure including:

- The I/O port block representing the I/O pins on the I/O connector(s)
- The Tx block representing the line driver circuit
- The Output Inverter block representing the user-configurable logic inverter
- The Line Output Mux block representing the user-configurable source multiplexer

18.5. Line Mode Control

For all the I/O lines, the `LineMode` feature reports the configuration of the I/O port.

Only the TTL I/O lines have a user-configurable line mode.

A TTLIO can operate as an input or as an output.

When used as input, no configuration is required since at power-up all TTLIO ports are configured as Inputs.

When used as output, the user has the choice between 3 configurations of the line driver. The line driver can be configured in 3 ways::

- As a totem-pole driver capable of driving low and high.
- As an open-collector driver capable of driving low only
- As an open-emitter driver capable of driving high only.

The two latest configurations allows wired-AND configurations.

18.6. I/O Lines Specifics

Line Selector	Bit#	Line Format	Line Mode
DIN11	0	DIFF	Input
DIN12	1	DIFF	Input
DIN21	2	DIFF	Input
DIN22	3	DIFF	Input
IIN11	4	ISO	Input
IIN12	5	ISO	Input
IIN13	6	ISO	Input
IIN14	7	ISO	Input
IIN21	8	ISO	Input
IIN22	9	ISO	Input
IIN23	10	ISO	Input
IIN24	11	ISO	Input
IOUT11	12	ISO	Output
IOUT12	13	ISO	Output
IOUT21	14	ISO	Output
IOUT22	15	ISO	Output
TTLIO11	16	TTL	Input, Output, DriveLow or DriveHigh
TTLIO12	17	TTL	Input, Output, DriveLow or DriveHigh
TTLIO21	18	TTL	Input, Output, DriveLow or DriveHigh
TTLIO22	19	TTL	Input, Output, DriveLow or DriveHigh

The above table summarizes the details of the I/O Control blocks of each I/O line:

- The first column indicates the `LineSelector` value
- The second column indicates the bit position in the integer value reported by `LineStatusAll`
- The third column indicates the value reported by `LineFormat`
- The fourth column indicates the values that can be assigned to `LineMode`

Note: Check the "Available I/O Lines" on page 169 for applicable values.

18.7. Line Polarity Control

All the I/O lines are fitted with a polarity control. For bidirectional I/O lines, a single control affects equally both paths.

The line polarity is user-configurable through the `LineInverter` control.

Note: *The user is invited to set the polarity control according to the polarity of the external signal in such a way that the Line Input signals of the input path and the LineSources signals of the output path are always using positive logic.*

18.8. Filter Control

All the I/O input lines are fitted with a glitch-removal filter. The filter strength is user-configurable through the `LineFilterStrength` control.

The strength control provides 5 positions from 'Lowest' to 'Highest'. The default position is 'Low'.

Each position corresponds to a specific filter time constant for each of the 3 I/O input line types.

Line Filter Time Constant per I/O input line type and LineFilterStrength :

LineFilterStrength	Differential inputs (DIN)	TTL inputs (TTLIO)	Isolated Inputs (IIN)
Lowest	50 ns	50 ns	500 ns
Low	100 ns	100 ns	1 μ s
Medium	200 ns	200 ns	2 μ s
High	500 ns	500 ns	5 μ s
Highest	1 μ s	1 μ s	10 μ s

The user is invited to set the filter strength according to the quality of the external signal. Select a filter strength such that its time constant is:

- Greater than the longest glitch duration
- Greater than the 10%~90% rise/fall time of the signal
- At least 2 times smaller than the smallest signal pulse duration

The glitch removal filter introduces a latency into the input signal path. The latency is equal to the filter time constant when the incoming signal has clean transitions. The latency may increase significantly in case of bad quality signals.

18.9. Line Source Selection

Any output-capable I/O lines is fitted with a source signal multiplexer.

The source signal multiplexers implement a fully-populated signal routing matrix allowing a selection of internal signals to be routed to any output lines.

Selecting a signal source

To select an internal signal to be used as signal source for the line driver of an output capable I/O line:

Step 1: Select an I/O line by assigning the appropriate value to the `LineSelector` feature

Step 2: Assign the appropriate value to the `SignalSource` feature

Output-lines routing matrix

Source Signal	Possible destinations
Any Bit of the User Output Register	Any output line
Any Device Module Camera Trigger Output	Any TTLIO output line
Any Device Module Strobe Output	Any output line
Steady Low	Any output line

18.10. Logical I/O Line State

Logical I/O line state

The (logical) state of an I/O line is the logical state of an electrical signal of the I/O control block:

- For input-capable I/O lines: the *LineInput* signal: a point in the input path of the I/O control block that is located after the Input Inverter.
- For output-only I/O lines: the *LineOutput* signal, a point in the output path of the I/O control block that is located before the Output Inverter.

Getting the state of a single I/O line

- 1. Step 1:** Select an I/O line by assigning the appropriate value to the `LineSelector` feature
- 2. Step 2:** Obtain directly the line status by getting the value of the `LineStatus` feature

Getting the state of all I/O lines in a single operation

Get the value of the `LineStatusAll` feature.

Each bit of the integer corresponds to an I/O line. A bit at one corresponds to a line logical state being high.

18.11. Physical I/O Line State

The physical state of the I/O line state does not only depend on the value reported when reading `LineStatus` but also on the following I/O block settings: `LineFormat`, `LineMode`, and `LineInverter`

LineFormat	LineMode	LineInverter/LineStatus	Physical I/O line state
DIFF	Input	False/False or True/True	$(VIN+ - VIN-) < VThreshold$
		False/True or True/False	$(VIN+ - VIN-) > VThreshold$ or unconnected I/O line
ISO	Input	False/False or True/True	Opto coupler is OFF. The line current is < 1 mA. <i>Line may be left unconnected or connected with the wrong polarity.</i>
		False/True or True/False	Opto coupler is ON. The line current is > 1 mA.
ISO	Output	False/False or True/True	Opto coupler is OFF
		False/True or True/False	Opto coupler is ON
TTL	Input	False/False or True/True	The line voltage is < 0.8 Volt.
		False/True or True/False	The line voltage is > 2.0 Volt.
TTL	Output	False/False or True/True	The line is driven LOW.
		False/True or True/False	The line is driven HIGH.
TTL	DriveLow	False/False or True/True	The line is driven LOW.
		False/True or True/False	The line voltage is > 2.0 Volt.
TTL	DriveHigh	False/False or True/True	The line voltage is < 0.8 Volt.
		False/True or True/False	The line is driven HIGH.

18.12. Line Driver Physical Output States

The line driver output state depends not only on the logical level of the selected Line Output signal but also on the following I/O block settings: `LineFormat`, `LineMode`, and `LineInverter`.

LineFormat	LineMode	LineInverter / LineOutput logical level	Line driver output state
ISO	Output	False / low or True / high	The opto-coupler switch is turned OFF.
		False / high or True / low	The opto-coupler switch is turned ON.
TTL	Output	False / low or True / high	The I/O line is driven LOW.
		False / high or True / low	The I/O line is driven HIGH.
TTL	DriveLow	False / low or True / high	The I/O line is driven LOW.
		False / high or True / low	The I/O line is not driven.
TTL	DriveHigh	False / low or True / high	The I/O line is not driven.
		False / high or True / low	The I/O line is driven HIGH.

18.13. Initial States

At power-on, the I/O lines are in the following state:

Differential Inputs

LineInverter = False

LineFilterStrength = Low

TTL Inputs/outputs

LineMode = Input (The line is not driven)

LineInverter = False

LineFilterStrength = Low

Isolated Inputs

LineInverter = False

LineFilterStrength = Low

Isolated Outputs

LineInverter = False

LineFilterStrength = Low

The opto-coupler is OFF.

19. Event Signaling And Counting

19.1. Introduction	183
19.2. Custom Events Sources	186
19.3. Event Specific Context Data	189
19.4. About GenTL Signaling	191

19.1. Introduction

Short description

Coaxlink products feature a powerful event management that allows the application to be notified of the occurrence of various events.

In addition to the GenTL standard `EVENT_NEW_BUFFER` event, the Coaxlink GenTL producer provide a wide set of custom event sources.

The event sources are grouped by types according to the function block and the GenTL module they belong to.

Each custom event source is associated with a counter that counts the number of occurrences.

For each notified custom event, the following event context data is recorded and made available to the application:

- Identifier of the event source
- Time stamp (expressed in microseconds)
- 3 user-defined context data

Each individual event source is configurable:

- The event notification can enabled or disabled.
- The content of each user-defined context data.

Event data are temporarily stored in the Event Queue Buffer. The Coaxlink Driver is notified, using an interruption mechanism, of the availability of one or more event entries in the Coaxlink Event Queue Buffer.

The Coaxlink Driver implements the GenTL signaling mechanism for reporting the occurrence of asynchronous events to the application software.

The EGrabber API provides 3 callback threading models:

- **CallbackOnDemand:** This is the simplest model which gives complete control over when and how callbacks are invoked. Events are processed on demand.
- **CallbackSingleThread:** This model delivers events to callbacks in their chronological order, sequentially, in a dedicated thread context. Events are processed automatically as soon as they are available.
- **CallbackMultiThread:** This model delivers events to callbacks in separate threads (one thread per event DATA type). Events are processed automatically as soon as they are available.

Event Types

GenTL identifies the events according to their Type and their relevant object Module.

Standard Event Types

The Coaxlink Driver implements the following standard event type for registration by the GenTL Consumer application:

GenTL Standard Event Type	GenTL Module	Description
EVENT_NEW_BUFFER	Data Stream	Notification on newly filled buffers.

Custom Event Types

Beside the **standard event types**, the GenTL specification provides room for **custom event types**.

Custom event types are specific to the GenTL Producer implementation (Coaxlink Driver in this case).

The Coaxlink Driver implements the following custom event types for registration by the GenTL Consumer application:

Event Type	Module	Description
EVENT_CUSTOM_IO_TOOLBOX	Interface (Device)	Notification of I/O Toolbox events
EVENT_CUSTOM_CXP_INTERFACE	Interface (Device)	Notification of CoaXPress Host Interface events
EVENT_CUSTOM_CIC	Device	Notification of Camera and Illumination Control events
EVENT_CUSTOM_DATASTREAM	Data Stream	Notification of CoaXPress data stream events

Note: The *EVENT_CUSTOM_IO_TOOLBOX* and the *EVENT_CUSTOM_CXP_INTERFACE* event types can also be registered on a Device Module.

Note: The custom event types are generic; each one gathers multiple event sources.

For an exhaustive list, refer to ["Custom Events Sources" on page 186](#)

Custom Events Counter

A 32-bit counter is associated with every custom event source.

The counter cannot be disabled. When it reaches its maximum value, 4 294 967 295 ($2^{32} - 1$), it wraps around to 0.

At any time, the user application can:

- Read the count value of a selected event source.
- Reset the counter of a selected event source.
- Reset the counters of all the event sources of the module.

The count-value can also be used as user-defined context data by any event source.

Custom Events Configuration

The event source is configurable.

At any time, the user application can:

- Enable or disable the notification of a selected event source.
- Enable or disable the notification of all the event sources of the module.
- Define the content of each user-defined context data of a selected event source..

Notification

By default, all notifications are disabled.

The application software must configure the event notification filter according the application needs.

The configuration of the notification filter configuration can be modified at any time without interfering with the event counting function.

Context Data

The last 3 32-bit context data words of the event context data can be configured as follows:

- Event-specific data.
- State of all I/O lines sampled at the event occurrence time
- Count value of any event counter.
- Count value of any Quadrature Decoder (QDC) position counter.

Some event sources provide additional options. Refer to ["Event Specific Context Data" on page 189](#)

19.2. Custom Events Sources

Data Stream Event Sources (Data Stream Module)

EVENT_CUSTOM_DATASTREAM

Event Source	Description
DATASTREAM_START_OF_CAMERA_READOUT	The first pixel data of an image frame is written into the on-board FIFO Buffer. Applies to area-scan firmware variants only.
DATASTREAM_END_OF_CAMERA_READOUT	The last pixel data of an image frame is written into the on-board FIFO Buffer. Applies to area-scan firmware variants only.
DATASTREAM_START_OF_SCAN	The first pixel data of an image scan is written into the on-board FIFO Buffer. Applies to line-scan firmware variants only.
DATASTREAM_END_OF_SCAN	The last pixel data of an image scan is written into the on-board FIFO Buffer. Applies to line-scan firmware variants only.
DATASTREAM_REJECTED_FRAME	An image frame is rejected (On-board FIFO Buffer is full) Applies to area-scan firmware variants only.
DATASTREAM_REJECTED_SCAN	An image scan is rejected (On-board FIFO Buffer is full) Applies to line-scan firmware variants only.

I/O Toolbox custom events (Interface module)

EVENT_CUSTOM_IO_TOOLBOX event sources

Event Source	Description
IO_TOOLBOX_LIN1	Line Input Tool 1 – Event output
IO_TOOLBOX_LIN2	Line Input Tool 2 – Event output
IO_TOOLBOX_LIN3	Line Input Tool 3 – Event output
IO_TOOLBOX_LIN4	Line Input Tool 4 – Event output
IO_TOOLBOX_LIN5	Line Input Tool 5 – Event output
IO_TOOLBOX_LIN6	Line Input Tool 6 – Event output

Event Source	Description
IO_TOOLBOX_LIN7	Line Input Tool 7 – Event output
IO_TOOLBOX_LIN8	Line Input Tool 8 – Event output
IO_TOOLBOX_QDC1	Quadrature Decoder Tool 1 – Event output
IO_TOOLBOX_QDC1_DIR	Quadrature Decoder Tool 1 – Changed direction
IO_TOOLBOX_QDC2	Quadrature Decoder Tool 2 – Event output
IO_TOOLBOX_QDC2_DIR	Quadrature Decoder Tool 2 – Changed Direction
IO_TOOLBOX_DIV1	Divider Tool 1 – Event output
IO_TOOLBOX_DIV2	Divider Tool 2 – Event output
IO_TOOLBOX_MDV1	Multiplier/Divider Tool 1 – Event output
IO_TOOLBOX_MDV2	Multiplier/Divider Tool 2 – Event output
IO_TOOLBOX_DEL11	Delay Tool 1 Output 1 – Event output
IO_TOOLBOX_DEL12	Delay Tool 1 Output 2 – Event output
IO_TOOLBOX_DEL21	Delay Tool 2 Output 1 – Event output
IO_TOOLBOX_DEL22	Delay Tool 2 Output 2 – Event output
IO_TOOLBOX_USER_EVENT_1	User Event 1
IO_TOOLBOX_USER_EVENT_2	User Event 2
IO_TOOLBOX_USER_EVENT_3	User Event 3
IO_TOOLBOX_USER_EVENT_4	User Event 4
IO_TOOLBOX_EIN1	Event Input Tool 1 – Event output
IO_TOOLBOX_EIN2	Event Input Tool 2 – Event output

Note: Check the "I/O Toolbox Composition" on page 150 for applicable values

CoaXPress Host Interface Custom Events (Interface module)

EVENT_CUSTOM_CXP_INTERFACE

Event Source	Description
CXP_INTERFACE_CRC_ERROR_CXP_A	A CRC error is detected on the Connection A of the CoaXPress Host Interface.
CXP_INTERFACE_CRC_ERROR_CXP_B	A CRC error is detected on the Connection B of the CoaXPress Host Interface.
CXP_INTERFACE_CRC_ERROR_CXP_C	A CRC error is detected on the Connection C of the CoaXPress Host Interface.
CXP_INTERFACE_CRC_ERROR_CXP_D	A CRC error is detected on the Connection A of the CoaXPress Host Interface.

Camera and Illumination Controller Event Sources (Device)

EVENT_CUSTOM_CIC event sources

Event Source	Description
CIC_CAMERA_TRIGGER_RISING_EDGE	Rising edge of the Camera Trigger output signal (Start of Exposure in RC and RG camera control methods)
CIC_CAMERA_TRIGGER_FALLING_EDGE	Falling edge of the Camera Trigger output signal (End of Exposure in RG camera control method)
CIC_STROBE_RISING_EDGE	Rising edge of the Strobe output signal
CIC_STROBE_FALLING_EDGE	Falling edge of the Strobe output signal
CIC_ALLOW_NEXT_CYCLE	A new camera cycle is allowed to start immediately.
CIC_DISCARDED_CIC_TRIGGER	A CIC cycle trigger is discarded.
CIC_PENDING_CIC_TRIGGER	A CIC cycle trigger is recorded, but its execution is delayed until CIC is ready.
CIC_CXP_TRIGGER_ACK	A positive acknowledgment is received in response to a CoaXPress Host to Device Trigger Message.
CIC_CXP_TRIGGER_RESEND	A resent of the CoaXPress Host to Device Trigger Message is executed.
CIC_TRIGGER	CIC trigger

Note: There is one Camera and Illumination Controller instance per GenTL Device Module. The number of GenTL Device Modules per Coaxlink card is defined by the firmware-variant.

19.3. Event Specific Context Data

EVENT_DATA_NUMID_CIC_DISCARDED_CIC_TRIGGER

Value of EventSpecific for EVENT_DATA_NUMID_CIC_DISCARDED_CIC_TRIGGER is a bitfield that can be interpreted according to the following definitions:

Bit#	Description
0	Cause: image buffer is full.
1	Cause: camera cycle not complete.
2	Cause: maximum number of pending triggers already reached.
3	Cause: data stream is not active

EVENT_DATA_NUMID_CIC_PENDING_CIC_TRIGGER

Value of EventSpecific for EVENT_DATA_NUMID_CIC_PENDING_CIC_TRIGGER is a bitfield that can be interpreted according to the following definitions:

Bit#	Description
0	Cause: image buffer is full.
1	Cause: camera cycle not complete

EVENT_DATA_NUMID_DATASTREAM_START_OF_SCAN

Value of EventSpecific for EVENT_DATA_NUMID_DATASTREAM_START_OF_SCAN is a bitfield that can be interpreted according to the following definitions:

Bit#	Description
1	Cause: software trigger.
2	Cause: hardware trigger
3	Cause: DSStartAcquisition or end of previous scan

EVENT_DATA_NUMID_DATASTREAM_END_OF_SCAN

Value of EventSpecific for EVENT_DATA_NUMID_DATASTREAM_END_OF_SCAN is a bitfield that can be interpreted according to the following definitions:

Bit#	Description
1	Cause: software trigger.
2	Cause: hardware trigger

Bit#	Description
3	Cause: Cause: reached scan length
4	Cause: DSStopAcquisition
5	Cause: internal exception (image buffer almost full)

EVENT_DATA_NUMID_DATASTREAM_REJECTED_FRAME

Value of EventSpecific for EVENT_DATA_NUMID_DATASTREAM_REJECTED_FRAME is a bitfield that can be interpreted according to the following definitions:

Bit#	Description
0	Cause: image buffer is full.
1	Cause: data stream is not active

19.4. About GenTL Signaling

The Coaxlink Driver implements the Signaling mechanism of a GenTL Provider.

This mechanism is briefly described hereafter. For an extensive description, refer to section 4.2 starting on page 34 of the [GenICam GenTL Standard Version 1.4](#).

Event Registration

Source: GenTL specification

Before the GenTL Consumer can be informed about an event, the event object must be registered. After a module instance has been created in the enumeration process an event object can be created with the `GCRRegisterEvent()` function. This function returns a unique `EVENT_HANDLE` which identifies the registered event object. To get information about a registered event the `EventGetInfo()` function can be used.

There must be only one event registered per module and event type.

(...)

After an `EVENT_HANDLE` is obtained the GenTL Consumer can wait for the event object to be signaled by calling the `EventGetData()` function. Upon delivery of an event, the event object carries data. This data is copied into a GenTL Consumer provided buffer when the call to `EventGetData()` was successful.

Notification and Data Retrieval

Source: GenTL specification

If the event object is signaled, data was put into the event data queue at some point in time. The `EventGetData()` function can be called to retrieve the actual data.

(...)

When data is read with this function the data is removed from the queue. Afterwards the GenTL Producer implementation checks whether the event data queue is empty or not. If there is more data available the event object stays signaled and next the call to `EventGetData()` will deliver the next queue entry. Otherwise the event object is reset to not signaled state.

(...)

The exact type of data is dependent on the event type and the GenTL Producer implementation. The data is copied into a user buffer allocated by the GenTL Consumer. The content of the event data can be queried with the `EventGetDataInfo()` function. The maximum size of the buffer to be filled is defined by the event type and can be queried using `EVENT_INFO_DATA_SIZE_MAX` after the buffer is delivered. This information can be queried using the `EventGetInfo()` function.

20. OEM Safety Key

The OEM Safety Key capability allows the application to:

- Program an "OEM safety key" in the non-volatile memory of the Coaxlink card.
- Retrieve the encrypted version of the OEM safety key just programmed.
- Check a key against the programmed OEM safety key or its encrypted version.

OEM Safety Key

The OEM Safety Key is an application-defined string of characters. Any character except the null character is allowed. The string length is unlimited.

Key Programming

When the application sets the `ProgramOemSafetyKey` GenICam feature with the OEM Safety Key value, the Coaxlink Driver computes an encrypted version of the OEM Safety Key and stores it in the non-volatile memory of the Coaxlink card.

The encrypted value can be retrieved by getting the value of `EncryptedOemSafetyKey` immediately after having set `ProgramOemSafetyKey`.

Important: Important: Only the same application process having set `ProgramOemSafetyKey` is allowed to retrieve the encrypted value. This is only allowed until any other GenICam feature is set.

Key Checking

The application has to select one `OemSafetyKeyVerification` value of the

In order to verify the OEM Safety Key of a Coaxlink card, the application sets a "challenge" value to the `CheckOemSafetyKey[selector]` feature.

When the [selector] argument is set to `EncryptedKey`, the set action terminates normally only when the challenge string is identical to the encrypted OEM Safety Key string.

When the [selector] argument is set to `ProgrammingKey`, the set action terminates normally only when the challenge string is identical to the programming OEM Safety Key string.

When the [selector] argument is set to `ProgrammingKeyOrEncryptedKey`, or omitted, the set action terminates normally only when the challenge string is identical to the original OEM Safety Key string or to the encrypted OEM Safety Key string.

Euresys recommends using the `EncryptedKey` selector. This improves the security level since the programming key doesn't need to appear anywhere in the end user application. Having only the encrypted key, the end user cannot retrieve the original programming key.

20.1. Using OEMSafetyKey

Programming Step – Option A

Using GenICam Browser:

- Go to the GenApi tab of the interface module.
- Write a secret key to `ProgramOemSafetyKey`
- Copy the value of `EncryptedOemSafetyKey` and paste it somewhere appropriate.

Note: *There is a direct relationship between the programming key and the encrypted key. A given programming key will always lead to the same encrypted key, even on different computers or with different Coaxlink cards. This makes it possible to read the encrypted key once and hard-code this value in the application that must be protected by the OEM safety key.*

Programming Step – Option B

Using a custom application:

1. Program the OEM safety key of the Coaxlink card by writing a secret key to `ProgramOemSafetyKey`.
2. Read back the encrypted key by reading `EncryptedOemSafetyKey`. Write this value somewhere appropriate.

```
grabber.set<InterfacePort>("ProgramOemSafetyKey", "plain-text key"); // 1
std::string encryptedKey=grabber.get<InterfacePort>("EncryptedOemSafetyKey"); // 2
```

Verification Step

In the application that must be protected by the OEM key:

```
InterfacePort>("CheckOemSafetyKey[EncryptedKey]", "encrypted key retrieved in the programming step");
```

Note: *Even if the encrypted key is discovered and an attacker uses it to reprogram cards, the above verification will fail.*


21. Laser Line Extraction

Applies to:

21.1. Introduction	195
Laser Line Extraction Algorithms	196
21.2. LLE Processing Core Implementation	197
LLE Processing Core Characteristics	198
Linear Filter	200
Coring Threshold	201
Maximum Detection	202
Peak Detection	203
Center of Gravity	204
21.3. Use Case Example	205
Objective	205
Defining the ROI	206
Setting Filtering and Thresholding	208
Defining the LLE Algorithm	209
Defining Scan Length and Buffer Size	211
21.4. Appendix	212

21.1. Introduction

In a laser-line triangulation system, a laser line (or any other “narrow light stripe” generation method) is projected on a 3D object. A camera, placed in another perspective than the laser, is then used to capture an image of that line, deformed by the shape of the object. The deformations of the line are a direct representation of the shape of the 3D object in the plane of the laser line. By scanning the object, that is making it move under the laser line and taking multiple images, you can reconstruct its 3D shape.

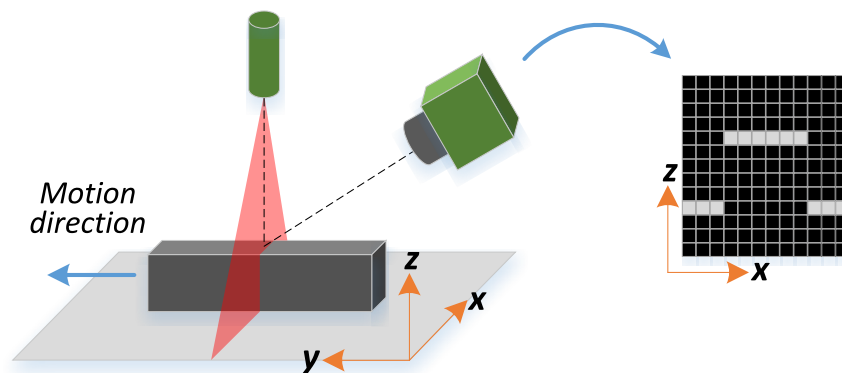


Simplified laser triangulation system

Laser Line Extraction Algorithms


A Laser Line Extraction (LLE) algorithm is required to create a *depth map* based on a sequence of profiles of the object captured by the camera sensor.

The objective of an LLE algorithm is to estimate the position where a laser line horizontally crosses a Region of Interest (ROI). The detection can be done by analyzing each column of a frame individually.

An LLE algorithm typically outputs a data array containing the vertical position of a detected laser line along of a ROI, i.e., each computed ROI produces a single data array.

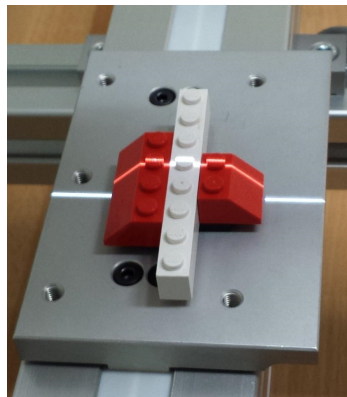

Measured object

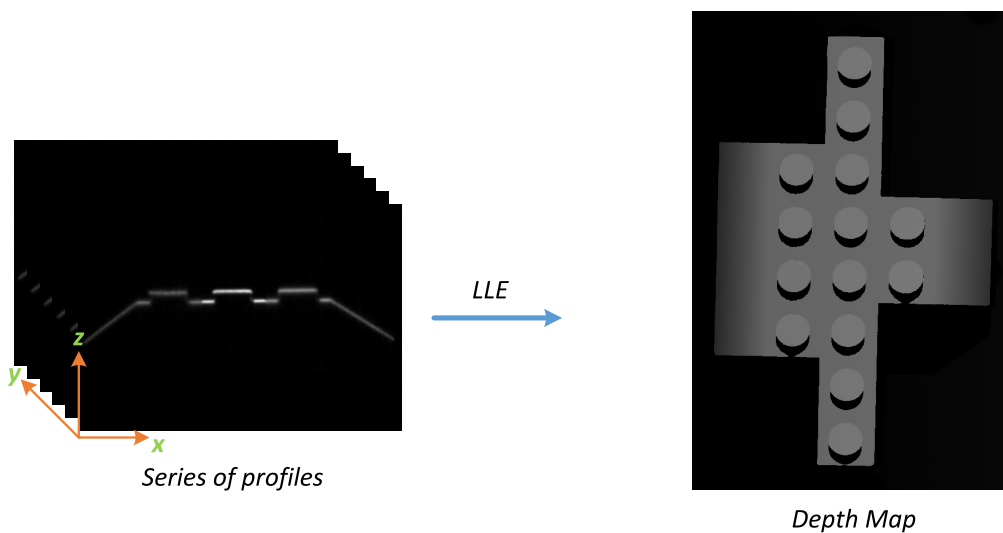


Depth map generation

21.2. LLE Processing Core Implementation

The LLE Processing Core is embedded in the 1637 Coaxlink Quad 3D-LLE frame grabber. It can compute the *depth map* of a measured object with *zero host CPU usage* and *zero latency*.

It provides 3 algorithms for laser line extraction (*Maximum Detection*, *Peak Detection*, and *Center of Gravity*) as well as a pre-processing stage for filtering and thresholding.

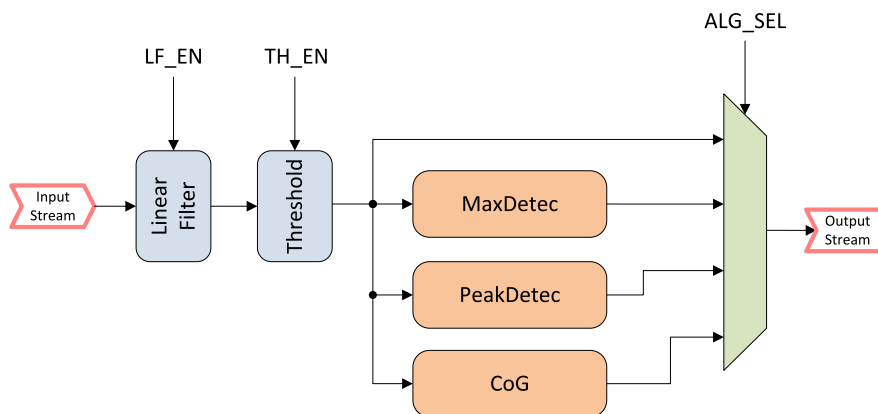

Simplified block diagram of the LLE Processing Core

LLE Processing Core Characteristics

Absolute Maximum Input XSize

- All algorithms: 8192 pixels

Max. Effective Input YSize [pixels]

MaxDetec 8	MaxDetec 16	PeakDetec 11_5	PeakDetec 8_8	CoG 11_5	CoG 8_8
255	65535	2048	256	2048	256

Output Format [GenICam PFNC v2.1]

MaxDetec 8	MaxDetec 16	PeakDetec 11_5	PeakDetec 8_8	CoG 11_5	CoG 8_8
8-bit (integer)	16-bit (integer)	UQ11.5	UQ8.8	UQ11.5	UQ8.8

Output Pixel Format

MaxDetec 8	MaxDetec 16	PeakDetec 11_5	PeakDetec 8_8	CoG 11_5	CoG 8_8
Coord3D_C8	Coord3D_C16	Coord3D_C16	Coord3D_C16	Coord3D_C16	Coord3D_C16

Output Sub-pixel Resolution [pixel]

MaxDetec 8	MaxDetec 16	PeakDetec 11_5	PeakDetec 8_8	CoG 11_5	CoG 8_8
1	1	1/32	1/256	1/32	1/256

InvalidDataFlag Value

- MaxDetec 8 algorithm: 0x00
- Other algorithms: 0x0000

Note: This value identifies a non-valid result.

Valid Output Range

- MaxDetec 8 algorithm: 0x01 ~ 0xFF
- Other algorithms: 0x0001 ~ 0xFFFF

Supported Input Pixel Format

- All algorithms: Mono8

Number of Laser Lines

- All algorithms: 1 per ROI

Maximum Performance

- All algorithms:
 - 2,500 megapixels/s
 - 4,700 profiles/s from a 2048 x 256 or 4096 x 128 image
 - 9,500 profiles/s from a 2048 x 128 image
 - 19,000 profiles/s from a 1024 x 128 image
 - 38,000 profiles/s from a 1024 x 64 image

Note: The above figures are based on the maximum bandwidth of a 4-connection CXP-6 CoaXPress link.

Available Output Types


- All algorithms:
 - Depth map
 - Raw camera image

Important: Not both outputs simultaneously!

Linear Filter


The *Linear Filter* module applies a convolution operator on a 1x3 sliding window directly on the data flow as it comes from the camera. The 3 elements of the convolution kernel (A, B, and C) are configurable accepting any positive integers where the sum of the 3 elements is a value between 1 and 512.

This figure illustrates the positioning of the convolution kernel elements within a given ROI:

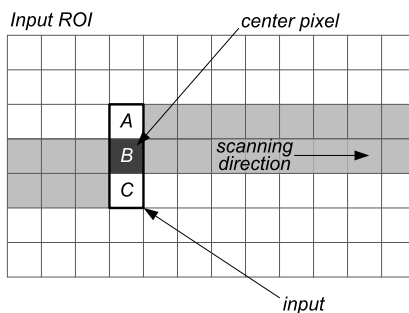

Linear Filter kernel disposition

When an element of the kernel is located outside of the ROI boundaries (typical sliding window problem), its input pixel value is replaced by the central window pixel.

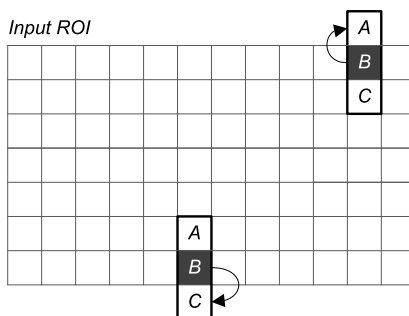


Linear Filter behavior at the ROI boundaries.

Coring Threshold

The coring is a non-linear operator that performs a simple segmentation technique, classifying pixels into two categories according to the following rule:

$$g(x, y) = \begin{cases} f(x, y), & f(x, y) > T \\ 0, & \text{otherwise} \end{cases}$$

T is the coring threshold.

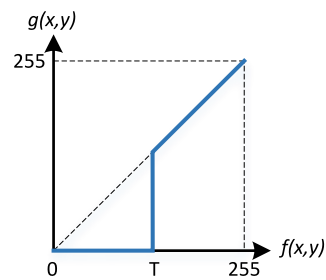

Coring response

Maximum Detection

The Maximum Detection module can be configured to output a depth map in 8-bit or 16-bit data width. The difference between these two modes is the maximum effective ROI YSize supported by the Maximum Detection module. The 8-bit mode can represent heights of up to 255 Pixels and the 16-bit mode can represent heights of up to 65535 Pixels.

When a maximum intensity is detected in more than one pixel on a given ROI column, the Maximum Detection algorithm will indicate the one with the highest position.

InvalidDataFlag

An *InvalidDataFlag* is generated when:

- The detected line position is above the maximum ROI height.
- No MAX intensity is detected in an ROI column.

Peak Detection

The Peak Detection module produces a depth map represented by 16-bit fixed-point words. It can be configured with two precisions:

- *UQ11.5* in which 5-bit (LSB) represent the fraction part and 11-bit (MSB) the integer part. In this mode, the maximum effective ROI YSize supported by the Peak Detection module is almost 2048 Pixels.
- *UQ8.8* in which 8-bit (LSB) represent the fraction part and 8-bit (MSB) the integer part. In this mode, the maximum effective ROI YSize supported by the Peak Detection module is almost 256 Pixels.

When more than one peak is detected on a given ROI column, the Peak Detection module will indicate the position of the one where the corresponding $f(x)$ pixel has the highest intensity. If more than one corresponding $f(x)$ pixel have the same condition (highest intensity), then the one with highest position among them will be indicated.

InvalidDataFlag

An *InvalidDataFlag* is generated when:

- The detected line position is above the max ROI height supported.
- No line is detected in an ROI column.

Center of Gravity

The Center of Gravity module produces a depth map represented by 16-bit fixed-point words. It can be configured with two precisions:

- *UQ11.5* in which 5-bit (LSB) represent the fraction part and 11-bit (MSB) the integer part. In this mode, the maximum effective ROI YSize supported by the Center of Gravity module is almost 2048 Pixels.
- *UQ8.8* in which 8-bit (LSB) represent the fraction part and 8-bit (MSB) the integer part. In this mode, the maximum effective ROI YSize supported by the Center of Gravity module is almost 256 Pixels.

When more than one peak is detected on a given ROI column, the Center of Gravity module will indicate the position of the one where the corresponding $f(x)$ pixel has the highest intensity. If more than one corresponding $f(x)$ pixel have the same condition (highest intensity), then the one with highest position among them will be indicated.

InvalidDataFlag

An *InvalidDataFlag* is generated when:

- The detected line position is above the max ROI height supported.
- An overflow occurs in an internal Sum. This condition can occur when in a same ROI column a large number of *successive* pixels present intensities above the threshold level.
- No line is detected in an ROI column.


21.3. Use Case Example

Objective	205
Defining the ROI	206
Setting Filtering and Thresholding	208
Defining the LLE Algorithm	209
Defining Scan Length and Buffer Size	211

Objective

In this example, the objective is to obtain a reliable measure of a PCB surface. For simplification purposes, the acquisition parameters are set using GenICam Browser and the camera is not controlled (free run). Other parameters like triangulation geometries, lenses, and laser color and power are not covered in this example.

This figure shows the laser line triangulation setup used in this example:

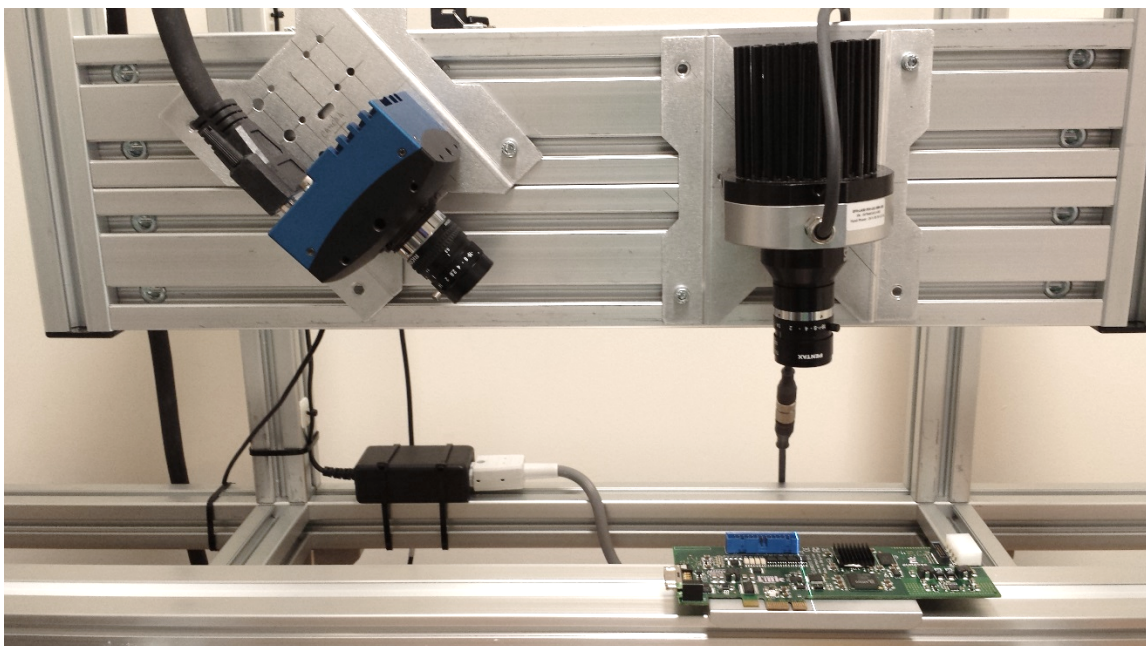


Laser line triangulation setup

Defining the ROI


The defined ROI should cover the whole sensor region where the laser line variations occurs. The initial step is to set a full resolution ROI to verify the overall image.

To create a full resolution ROI, the ScanLength and BufferHeight must be set to the same Height value set on the “Remote Device” (camera). All these parameters can be seen in the in the “GenApi” tab of the “Data Streams” module as shown hereafter:

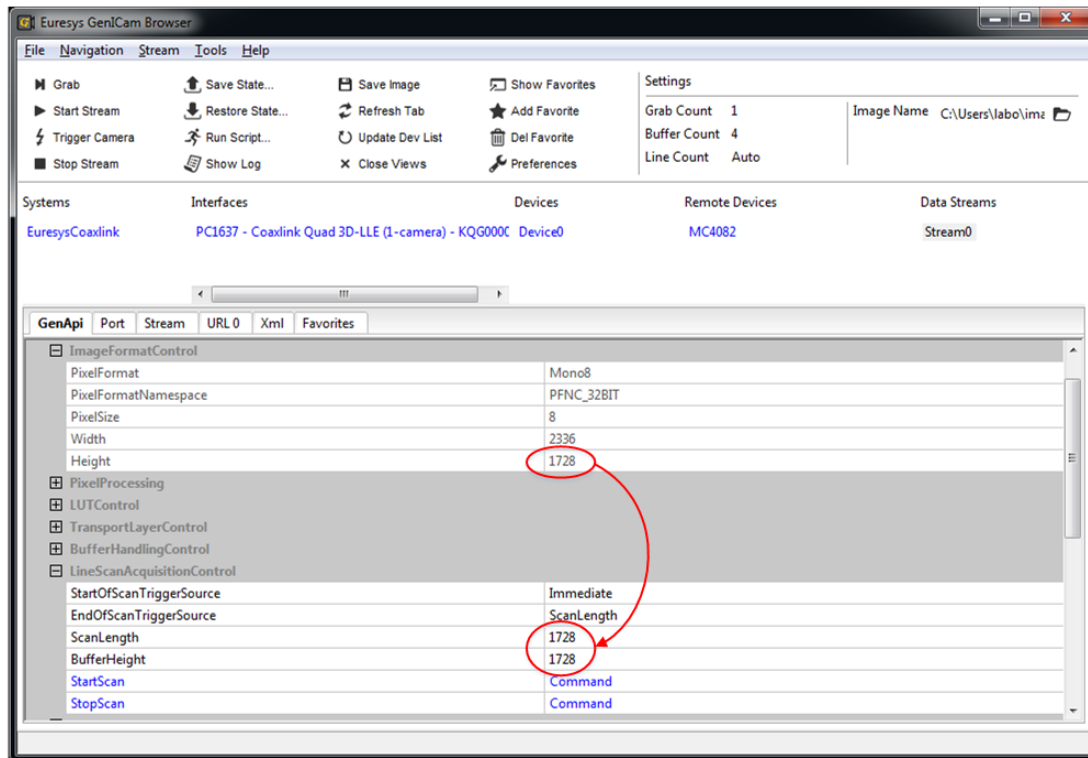


Full resolution ROI

The resulting frame can be seen in the following figure where it is possible to verify the effective region where the laser line variations occur.

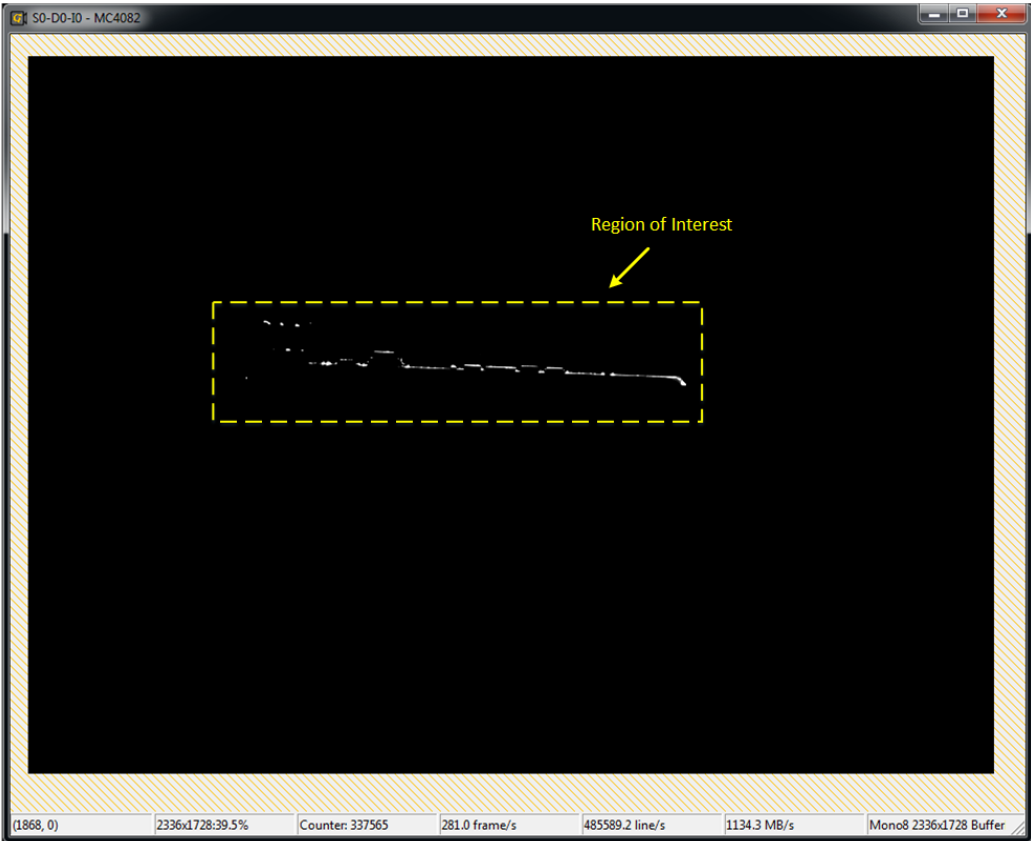


Resulting image (Full resolution ROI)

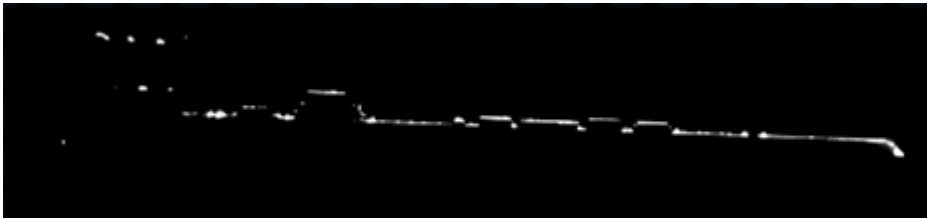

ROI Expanded View

Setting Filtering and Thresholding


It is possible to activate a pre-processing stage in the LLE process. In the example shown below, the threshold level is set to 20 and the convolution filter kernel is set with A=2, B=5, and C=2. With these parameters, we will have a smoother image where any background noise below the threshold level is replaced by 0.

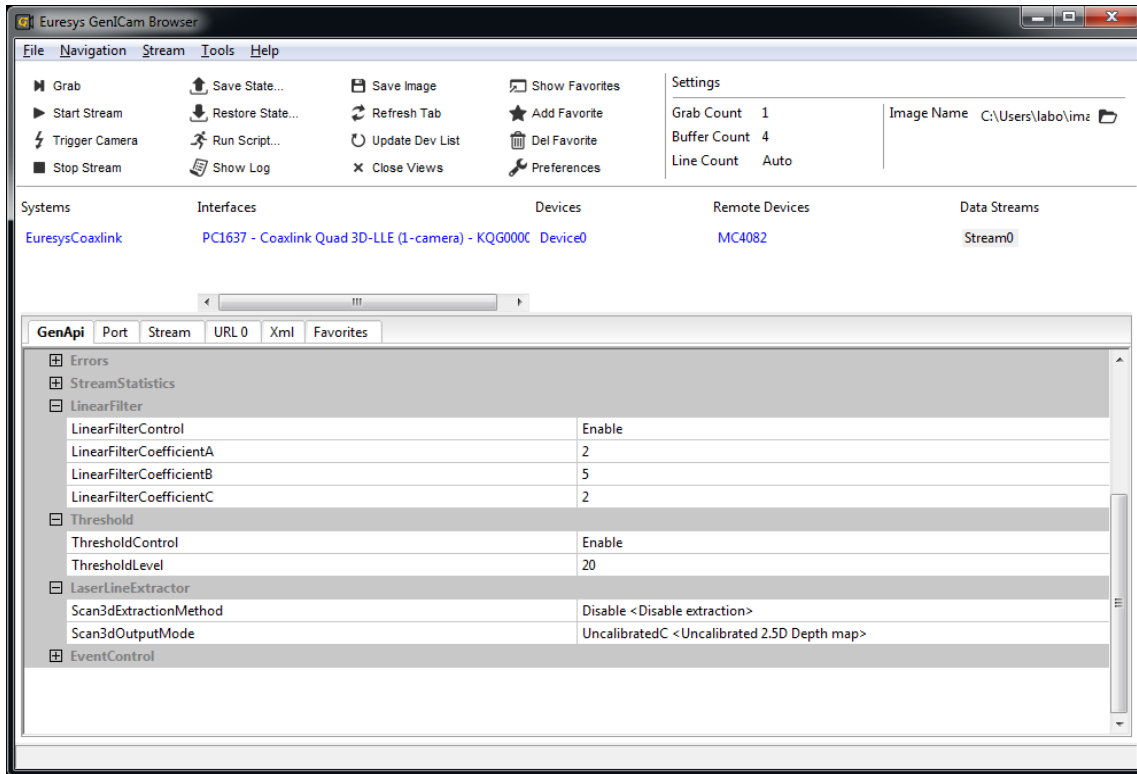

Filtering and Thresholding parameters

Defining the LLE Algorithm

The GenICam feature Scan3dExtractionMethod gives access to all available LLE Algorithms. The following figure shows how this feature is presented in GenICam Browser.

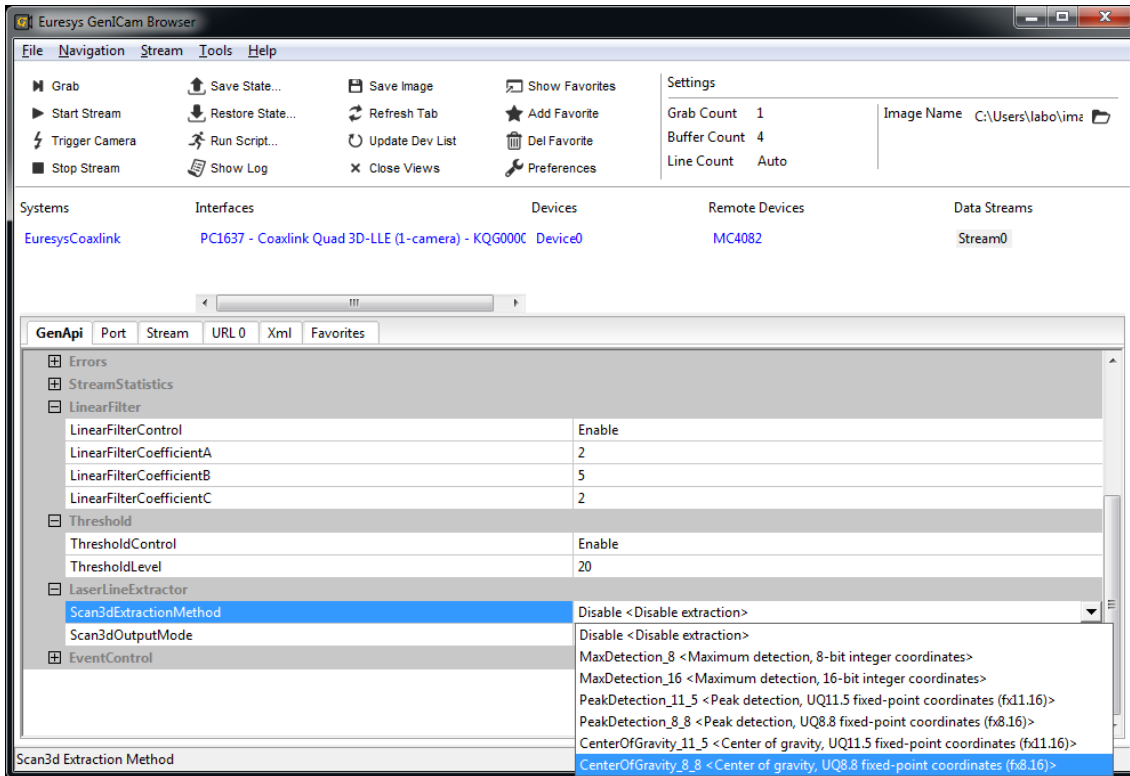

Laser Line Extraction options

The choice between the available algorithms depends on a number of factors related to the target application. We highlight here the main differences among the available algorithms.

ROI YSize

The number of effective vertical pixels in a ROI (YSize) is limited by the maximum integer value that can be represented by the output format of the chosen algorithm as described below:

- MaxDetection_8 (8-bit): 0xFF (255 pixels).
 - The value 0x00 is reserved to indicate an InvalidDataFlag.
- MaxDetection_16 (16-bit): 0xFFFF (65535 pixels).
 - The value 0x0000 is reserved to indicate an InvalidDataFlag.
- PeakDetection_11_5 (UQ11.5): 0xFFFF (almost 2048 pixels).
 - The value 0x0000 is reserved to indicate an InvalidDataFlag.
- PeakDetection_8_8 (UQ8.8): 0xFFFF (almost 256 pixels).
 - The value 0x0000 is reserved to indicate an InvalidDataFlag.

- `CenterOfGravity_11_5` (UQ11.5): 0xFFFF (almost 2048 pixels).
 - The value 0x0000 is reserved to indicate an `InvalidDataFlag`.
- `CenterOfGravity_8_8` (UQ8.8): 0xFFFF (almost 256 pixels).
 - The value 0x0000 is reserved to indicate an `InvalidDataFlag`.

Algorithm Resolution

The position resolution of the available algorithms varies from 1 pixel up to 1/256 pixel as described below:

- `MaxDetection_8` (8-bit): 1 pixel.
- `MaxDetection_16` (16-bit): 1 pixel.
- `PeakDetection_11_5` (UQ11.5): 1/32 pixel.
- `PeakDetection_8_8` (UQ8.8): 1/256 pixel.
- `CenterOfGravity_11_5` (UQ11.5): 1/32 pixel.
- `CenterOfGravity_8_8` (UQ8.8): 1/256 pixel.

Algorithm Specificities

As mentioned previously, the choice of an LLE algorithm strongly depends on the target application. Following, a description of the main features of each LLE algorithm from the application point of view:


- `MaxDetection_8` (8-bit): This version of the `MaxDetection` module with an 8-bit depth map output generates a very small amount of data which requires less computing performance from the 3D post-processing stage.
- `MaxDetection_16` (16-bit): With its 16-bit integer depth map output, the version of the `MaxDetection` module can support very large input ROIs.
- `PeakDetection`: The two versions of the `PeakDetection` module offer a trade-off between sub-pixel resolution and maximum effective ROI size. The `PeakDetection` was designed to be insensitive to intensity-dependent biases.
- `CenterOfGravity`: The two versions of the `CenterOfGravity` module also offer a trade-off between sub-pixel resolution and maximum effective ROI size. The `CenterOfGravity` was designed to be robust to noisy inputs and wide lines.

Defining Scan Length and Buffer Size


The ScanLength and BufferHeight will depend on the desired number of profiles to acquire from a given object. The size of the object being scanned, the camera frame rate, and the object movement speed are essential parameters to be defined along with the ScanLength.

Scanning Results

The resulting depth map of the measured PCB can be seen in the following figures.

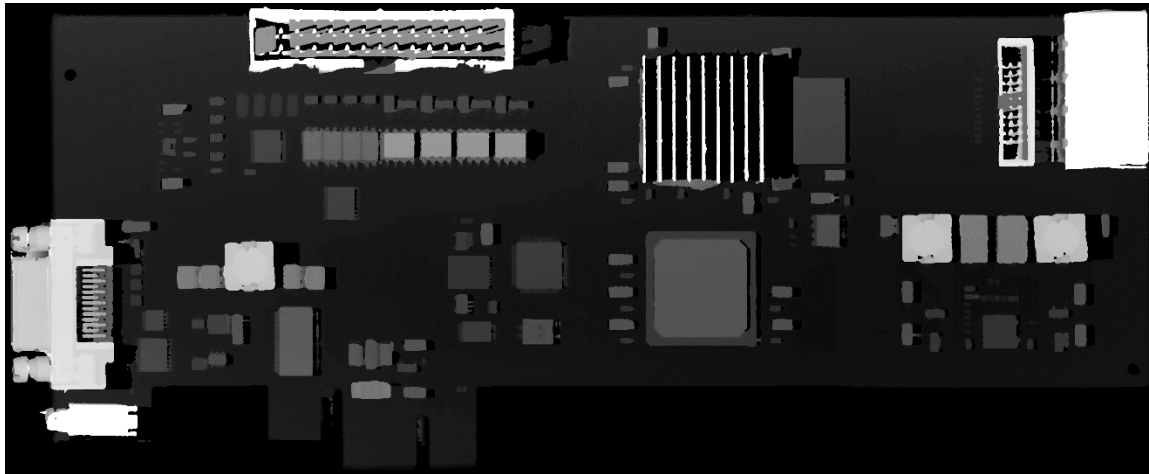

Depth map example

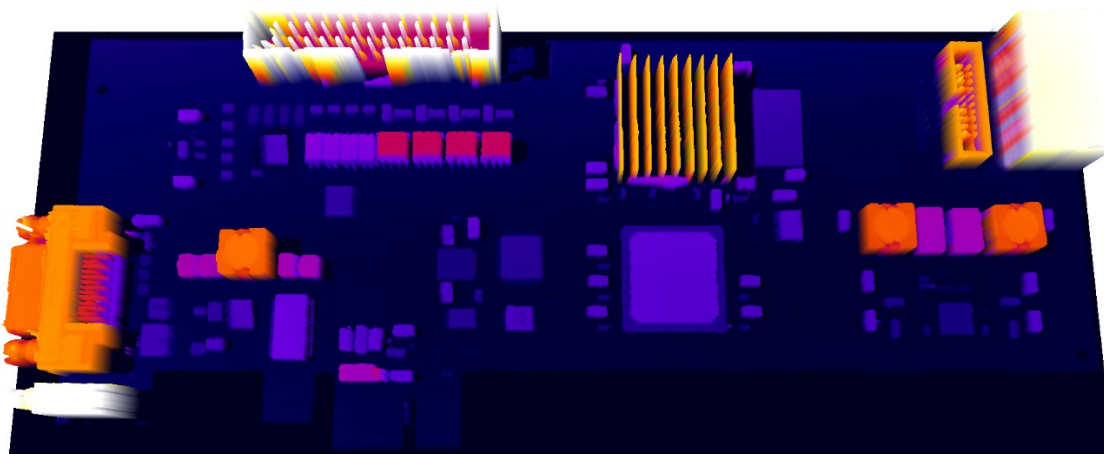

Depth map example: 3D surface plot

21.4. Appendix

Fixed-point “Q-format” notation

The UQ_{m.n} system is a representation of fixed-point numbers in the Q-format where Q designates a number in the Q-format notation, U preceding Q indicates an unsigned value, m indicates the number of bits of the integer portion of the number, and n designates the fraction portion of the number. For instance, UQ_{11.5} is an unsigned fixed-point value represented by 16-bit words with 11 integer bits and 5 fractional bits. Other valid notations for UQ_{11.5} are fx_{11.16} and 0:11:5.

How to convert “UQ_{11.5}” fixed-point values to floating-point

The UQ_{11.5} fixed-point values produced by the laser line extractor are 16-bit words representing values with 11 integer bits and 5 fractional bits.

To convert from this format to float, first convert the value to float, then divide by $2^5 = 32$.

```
float toFloat(unsigned short x) {  
    float f = x;  
    return f / 32;  
}
```

How to convert “UQ_{8.8}” fixed-point values to floating-point

The UQ_{8.8} fixed-point values produced by the laser line extractor are 16-bit words representing values with 8 integer bits and 8 fractional bits.

To convert from this format to float, first convert the value to float, then divide by $2^8 = 256$.

```
float toFloat(unsigned short x) {  
    float f = x;  
    return f / 256;  
}
```