

Coaxlink

Coaxlink 12.6 GenICam Reference

1629 Coaxlink Duo PCIe/104-EMB

1630 Coaxlink Mono

1631 Coaxlink Duo

1632 Coaxlink Quad

1633 Coaxlink Quad G3

1633-LH Coaxlink Quad G3 LH

1634 Coaxlink Duo PCIe/104-MIL

1635 Coaxlink Quad G3 DF

1637 Coaxlink Quad 3D-LLE


3602 Coaxlink Octo

3603 Coaxlink Quad CXP-12

3620 Coaxlink Quad CXP-12 JPEG

3621-LH Coaxlink Mono CXP-12 LH

3622 Coaxlink Duo CXP-12

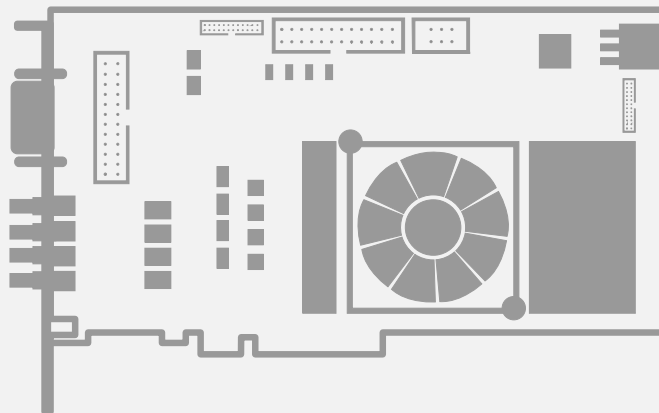

Terms of Use

EURESYS s.a. shall retain all property rights, title and interest of the documentation of the hardware and the software, and of the trademarks of EURESYS s.a.

All the names of companies and products mentioned in the documentation may be the trademarks of their respective owners.

The licensing, use, leasing, loaning, translation, reproduction, copying or modification of the hardware or the software, brands or documentation of EURESYS s.a. contained in this book, is not allowed without prior notice.

EURESYS s.a. may modify the product specification or change the information given in this documentation at any time, at its discretion, and without prior notice.

EURESYS s.a. shall not be liable for any loss of or damage to revenues, profits, goodwill, data, information systems or other special, incidental, indirect, consequential or punitive damages of any kind arising in connection with the use of the hardware or the software of EURESYS s.a. or resulting of omissions or errors in this documentation.

This documentation is provided with Coaxlink12.6.2 (doc build 2114).
www.euresys.com

Contents

1. About This Document	12
1.1. Document Scope	12
1.2. Document Changes	13
2. System Module	14
2.1. Root Category	15
SystemInformation	16
InterfaceEnumeration	17
2.2. SystemInformation Category	18
TLVendorName	19
TLModelName	20
TLID	21
TLVersion	22
TLPath	23
TLType	24
GenTLVersionMajor	25
GenTLVersionMinor	26
2.3. InterfaceEnumeration Category	27
InterfaceUpdateList	28
InterfaceSelector	29
InterfaceID	30
3. Interface Module	31
3.1. Root Category	32
InterfaceInformation	33
DeviceEnumeration	34
CoaXPress	35
CoaXPressErrorCounters	36
CoaXPressAdvanced	37
DigitalIOControl	38
IOExtensionModule	39
UserOutputRegister	40
IOToolbox	41
PCIExpress	42
InterfaceControl	43
InterfaceDetails	44
EventControl	45
OemSafetyKey	46
CustomLogic	47
OnboardMemory	48
3.2. InterfaceInformation Category	49
InterfaceID	50
InterfaceType	51
ProductCode	52
SerialNumber	53
PartNumber	54
FirmwareRevision	55
FirmwareVariant	56
FirmwareStatus	57
FirmwareRecoverySwitch	58
3.3. DeviceEnumeration Category	59
DeviceUpdateList	60

DeviceSelector	61
DeviceID	62
DeviceVendorName	63
DeviceModelName	64
DeviceAccessStatus	65
3.4. CoaXPress Category	66
CxpPoCxpHostConnectionSelector	67
CxpPoCxpAuto	68
CxpPoCxpTurnOff	69
CxpPoCxpTripReset	70
CxpPoCxpDetectionMode	71
CxpPoCxpConfigurationStatus	72
CxpPoCxpStatus	73
CxpPoCxpCurrent	74
CxpPoCxpVoltage	75
CxpPoCxpPowerInputStatus	76
CxpHostConnectionCount	77
CxpHostConnectionSelector	78
CxpConnectionState	80
CxpDownConnectionSpeed	81
CxpDeviceConnectionID	82
CXP1Supported	85
CXP2Supported	86
CXP3Supported	87
CXP5Supported	88
CXP6Supported	89
CXP10Supported	90
CXP12Supported	91
CxpHostConnectionTestMode	92
CxpHostConnectionTestErrorCount	93
CxpHostConnectionTestPacketCount	94
CxpHostConnectionTestInjectError	95
CxpRevisionSelector	96
CxpRevisionSupport	97
ShowCoaXPressAdvancedFeatures	98
3.5. CoaXPressErrorCounters Category	99
CxpLinkLockLossCount	100
Cxp8b10bErrorCount	101
CxpDuplicatedCharactersCorrectedErrorCount	102
CxpDuplicatedCharactersUncorrectedErrorCount	103
CxpStreamDataPacketCrcErrorCount	104
CxpControlPacketCrcErrorCount	105
CxpEventPacketCrcErrorCount	106
CxpLinkLockLossCountReset	107
Cxp8b10bErrorCountReset	108
CxpDuplicatedCharactersCorrectedErrorCountReset	109
CxpDuplicatedCharactersUncorrectedErrorCountReset	110
CxpStreamDataPacketCrcErrorCountReset	111
CxpControlPacketCrcErrorCountReset	112
CxpEventPacketCrcErrorCountReset	113
3.6. CoaXPressAdvanced Category	114
CxpRateMask	115
CxpRateMaskCXP1	116
CxpRateMaskCXP2	117
CxpRateMaskCXP3	118

CxpRateMaskCXP5	119
CxpRateMaskCXP6	120
CxpRateMaskCXP10	121
CxpRateMaskCXP12	122
CxpUpConnectionSpeedConfig	123
CxpDiscoveryTimingSelector	124
CxpDiscoveryTiming	125
CxpControlParameterSelector	126
CxpControlParameter	127
3.7. DigitalIOControl Category	128
LineSelector	129
LineFormat	132
LineMode	133
LineInverter	134
LineFilterStrength	135
LineFilterDelay	136
LineStatus	137
LineStatusAll	138
LineSource	140
3.8. IOExtensionModule Category	144
IOExtensionModuleConfiguration	145
IOExtensionModuleLineSelector	146
IOExtensionModuleLineFormat	148
IOExtensionModuleLineMode	149
IOExtensionModuleLineStatus	150
IOExtensionModuleLineToRepair	151
IOExtensionModuleErrorCount	153
IOExtensionModuleInformation	154
3.9. IOExtensionModuleInformation Category	155
IOExtensionModuleProductCode	156
IOExtensionModuleSerialNumber	157
IOExtensionModulePartNumber	158
IOExtensionModuleRevision	159
IOExtensionModuleVariant	160
3.10. UserOutputRegister Category	161
UserOutputValueAll	162
UserActions	163
AddUserAction	164
ClearUserActions	166
ExecuteUserActions	167
ScheduleUserActions	168
UserActionsSchedulerReference	169
ScheduledUserActionsPoolStatus	170
DiscardScheduledUserActions	171
InternalTime	172
3.11. IOToolbox Category	173
LineInputTool	174
MultiplierDividerTool	175
QuadratureDecoderTool	176
DividerTool	177
DelayTool	178
EventInputTool	179
C2LinkSynchronizationTool	180
3.12. PCIExpress Category	181

PCleMaxPayloadSizeSupported	182
PCleMaxPayloadSize	183
PCleMaxReadRequestSize	184
PCleMaxLinkSpeed	185
PCleCurrentLinkSpeed	186
PCleMaximumLinkWidth	187
PCleNegotiatedLinkWidth	188
PCleLinkSpeed2500MTpsSupported	189
PCleLinkSpeed5000MTpsSupported	190
PCleLinkSpeed8000MTpsSupported	191
PCIBus	192
PCIDevice	193
PCIFunction	194
PCISlot	195
3.13. InterfaceControl Category	196
FanStatus	197
TemperatureSensorSelector	198
Temperature	199
AuxiliaryPowerInput	200
AuxiliaryPower12VInput	201
LampMode	202
LampCustomValue	203
LampCustomLedA	204
LampCustomLedB	205
LampCustomLedC	206
LampCustomLedD	207
LampCustomLedE	208
LampCustomLedF	209
LampCustomLedG	210
LampCustomLedH	211
3.14. InterfaceDetails Category	212
BoardCapabilities	213
FirmwareBoardID	214
CPLDRevision	215
PreviousBootBank	216
NextBootBank	217
CurrentBankSelect	218
CurrentBankSelectReadback	219
NextBankSelect	220
SpiBankStatus	221
PotBankStatus	222
3.15. LineInputTool Category	223
LineInputToolSelector	224
LineInputToolSource	225
LineInputToolActivation	228
3.16. MultiplierDividerTool Category	229
MultiplierDividerToolSelector	230
MultiplierDividerToolSource	231
MultiplierDividerToolOutputControl	233
MultiplierDividerToolMultiplicationFactor	234
MultiplierDividerToolDivisionFactor	235
MultiplierDividerToolEffectiveMultiplicationFactor	236
MultiplierDividerToolEffectiveDivisionFactor	237
3.17. QuadratureDecoderTool Category	238

QuadratureDecoderToolSelector	239
QuadratureDecoderToolSources	240
QuadratureDecoderToolActivation	241
QuadratureDecoderToolForwardDirection	242
QuadratureDecoderToolOutputMode	243
QuadratureDecoderToolPosition	244
QuadratureDecoderToolDirection	245
QuadratureDecoderToolPositionReset	246
3.18. DividerTool Category	247
DividerToolSelector	248
DividerToolSource	249
DividerToolEnableControl	251
DividerToolDivisionFactor	252
DividerToolInitialOffset	253
3.19. DelayTool Category	254
DelayToolSelector	255
DelayToolSource1	256
DelayToolSource2	258
DelayToolClockSource	260
DelayToolDelayValue	261
3.20. EventInputTool Category	262
EventInputToolSelector	263
EventInputToolSource	264
EventInputToolActivation	265
3.21. C2CLinkSynchronizationTool Category	266
C2CLinkSynchronizationToolSelector	267
C2CLinkSynchronizationToolSource	268
C2CLinkSynchronizationToolClock	270
C2CLinkSynchronizationToolDiscardPendingEvent	271
3.22. EventControl Category	272
EventSelector	273
EventNotification	277
EventNotificationContext1	278
EventNotificationContext2	282
EventNotificationContext3	286
EventCount	290
EventCountReset	291
EventNotificationAll	292
EventCountResetAll	293
3.23. OemSafetyKey Category	294
OemSafetyKeyVerification	295
CheckOemSafetyKey	296
ProgramOemSafetyKey	297
EncryptedOemSafetyKey	298
MaximumOemKeyLength	299
3.24. CustomLogic Category	300
CustomLogicControlAddress	301
CustomLogicControlData	302
3.25. OnboardMemory Category	303
OnboardMemoryBase	304
OnboardMemorySize	305
4. Device Module	306
4.1. Root Category	307
DeviceInformation	308

StreamEnumeration	309
CameraAndIlluminationControl	310
CoaXPress	311
EventControl	312
Errors	313
4.2. DeviceInformation Category	314
DeviceID	315
DeviceVendorName	316
DeviceModelName	317
DeviceAccessStatus	318
DeviceType	319
4.3. StreamEnumeration Category	320
StreamSelector	321
StreamID	322
4.4. CoaXPress Category	323
CxpLinkConfiguration	324
CxpLinkConfigurationOption	326
CxpHostConnectionBase	327
CxpHostConnectionCount	328
CxpTriggerMessageFormat	329
CxpTriggerLevel	330
CxpTriggerAckTimeout	331
CxpTriggerMaxResendCount	332
CxpPacketArbiterReset	333
CxpPortAlignment	334
4.5. CameraAndIlluminationControl Category	335
CameraModel	336
CycleTiming	337
CycleControl	338
SequenceControl	339
DeviceReset	340
CameraAndIlluminationControllerStream	341
4.6. CameraModel Category	342
CameraControlMethod	343
C2CLinkConfiguration	344
ExposureReadoutOverlap	345
ExposureRecoveryTime	346
ExposureTimeMin	347
ExposureTimeMax	348
CycleMinimumPeriod	349
4.7. CycleTiming Category	350
ExposureTime	351
StrobeDelay	352
StrobeDuration	353
4.8. CycleControl Category	354
CycleTriggerSource	355
StartCycle	358
CycleMaxPendingTriggerCount	359
CyclePendingTriggerCount	360
CycleLostTriggerCount	361
CycleLostTriggerCountReset	362
4.9. SequenceControl Category	363
StartOfSequenceTriggerSource	364
EndOfSequenceTriggerSource	367

SequenceLength	370
StartSequence	371
StopSequence	372
AbortSequence	373
4.10. EventControl Category	374
EventSelector	375
EventNotification	377
EventNotificationContext1	378
EventNotificationContext2	381
EventNotificationContext3	384
EventCount	387
EventCountReset	388
EventNotificationAll	389
EventCountResetAll	390
4.11. Errors Category	391
ErrorSelector	392
ErrorCount	394
ErrorCountReset	395
5. Data Stream Module	396
5.1. Root Category	397
StreamInformation	398
ImageFormatControl	399
TransportLayerControl	400
BufferHandlingControl	401
PixelProcessing	402
LineScanAcquisitionControl	403
StreamControl	404
Errors	405
LUTControl	406
LinearFilter	407
Threshold	408
LaserLineExtractor	409
Bayer	410
FlatFieldCorrection	411
EventControl	412
StreamStatistics	413
5.2. StreamInformation Category	414
StreamID	415
StreamType	416
5.3. ImageFormatControl Category	417
PixelFormat	418
PixelFormatNamespace	429
PixelFormatSize	430
PixelFormatComponentCount	431
Width	432
Height	433
5.4. TransportLayerControl Category	434
PayloadSize	435
5.5. BufferHandlingControl Category	436
StreamAnnouncedBufferCount	437
StreamBufferHandlingMode	438
StreamAnnounceBufferMinimum	439
StreamAcquisitionModeSelector	440
5.6. PixelProcessing Category	441

UnpackingMode	442
RedBlueSwap	443
ImageScaling	444
JpegQuality	445
5.7. LineScanAcquisitionControl Category	446
StartOfScanTriggerSource	447
EndOfScanTriggerSource	450
ScanLength	453
BufferHeight	454
StartScan	455
StopScan	456
5.8. StreamControl Category	457
StreamReset	458
DmaEngineOptimization	459
TriggerToCameraReadoutTimeout	460
CameraReadoutTimeout	461
LineWidth	462
LinePitch	463
StripeHeight	464
StripePitch	465
BlockHeight	466
StripeOffset	467
StripeArrangement	468
SyncMarker	469
5.9. SyncMarker Category	470
SyncMarkerBusAddress	471
SyncMarkerValue	472
SyncMarkerValueIncrement	473
5.10. Errors Category	474
ErrorSelector	475
ErrorCount	477
ErrorCountReset	478
5.11. LUTControl Category	479
LUTConfiguration	480
LUTLength	481
LUTMaxValue	482
LUTSet	483
LUTIndex	484
LUTValue	485
LUTReadBlockLength	486
LUTEnable	487
5.12. LinearFilter Category	488
LinearFilterControl	489
LinearFilterCoefficientA	490
LinearFilterCoefficientB	491
LinearFilterCoefficientC	492
5.13. Threshold Category	493
ThresholdControl	494
ThresholdLevel	495
5.14. LaserLineExtractor Category	496
Scan3dExtractionMethod	497
Scan3dOutputMode	498
Scan3dSecondLineROIOffsetY	499
5.15. Bayer Category	500

BayerMethod	501
5.16. FlatFieldCorrection Category	502
FfcCoefficientPartitionBase	503
FfcCoefficientPartitionSize	504
FfcControl	505
FfcBypass	506
FfcCoefficientsValid	507
5.17. EventControl Category	508
EventSelector	509
EventNotification	510
EventNotificationContext1	511
EventNotificationContext2	514
EventNotificationContext3	517
EventCount	520
EventCountReset	521
EventNotificationAll	522
EventCountResetAll	523
5.18. StreamStatistics Category	524
StatisticsSamplingSelector	525
StatisticsFrameRate	526
StatisticsLineRate	527
StatisticsDataRate	528
StatisticsStartSampling	529
StatisticsStopSampling	530

1. About This Document

1.1. Document Scope	12
1.2. Document Changes	13

1.1. Document Scope

This reference document lists all the GenICam features publicly exposed by the Coaxlink driver version 12.6.2

Unless specified, the features described in this document are applicable to all the Coaxlink products and their firmware variants supported by the Coaxlink Driver.

1.2. Document Changes

2. System Module

Categorized features list of System module version 12.6.2.74

2.1. Root Category

SystemInformation

Feature Info

Module	Category Path	Type	Access
System	Root	Category	RW

Category Members

See also: "SystemInformation Category " on page 18

InterfaceEnumeration

Feature Info

Module	Category Path	Type	Access
System	Root	Category	RW

Category Members

See also: "InterfaceEnumeration Category " on page 27

2.2. SystemInformation Category

TLVendorName

Feature Info

Module	Category Path	Type	Access
System	Root → SystemInformation	String	Imposed: RO

Short Description

Name of the GenTL Producer vendor.

TLModelName

Feature Info

Module	Category Path	Type	Access
System	Root → SystemInformation	String	Imposed: RO

Short Description

Name of the GenTL Producer.

TLID

Feature Info

Module	Category Path	Type	Access
System	Root → SystemInformation	String	Imposed: RO

Short Description

Unique identifier of the GenTL.

TLVersion

Feature Info

Module	Category Path	Type	Access
System	Root → SystemInformation	String	Imposed: RO

Short Description

Vendor specific version string.

TLPath

Feature Info

Module	Category Path	Type	Access
System	Root → SystemInformation	String	Imposed: RO

Short Description

Full path to the GenTL Producer driver including name and extension.

TLType

Feature Info

Module	Category Path	Type	Access
System	Root → SystemInformation	Enumeration	Imposed: RO

Short Description

Identifies the transport layer technology of the GenTL Producer implementation.

Enumeration Values

- **CXP**: This enumeration value indicates CoaXPress transport layer technology.

GenTLVersionMajor

Feature Info

Module	Category Path	Type	Access
System	Root → SystemInformation	IntReg	RO

Register Port: TLPort

Short Description

Major version number of the GenTL specification the GenTL Producer implementation complies with.

GenTLVersionMinor

Feature Info

Module	Category Path	Type	Access
System	Root → SystemInformation	IntReg	RO

Register Port: TLPort

Short Description

Minor version number of the GenTL specification the GenTL Producer implementation complies with.

2.3. InterfaceEnumeration Category

InterfaceUpdateList

Feature Info

Module	Category Path	Type	Access
System	Root → InterfaceEnumeration	Command	RW

Short Description

Updates the internal interface list.

InterfaceSelector

Feature Info

Module	Category Path	Type	Access
System	Root → InterfaceEnumeration	Integer	RW

Value Info

Minimum value: 0

Short Description

Selector for the different GenTL Producer interfaces.

Selected Features

- ["InterfaceID" on the next page](#)

InterfaceID

Feature Info

Module	Category Path	Type	Access
System	Root → InterfaceEnumeration	String	Imposed: RO

Short Description

GenTL Producer wide unique identifier of the selected interface.

3. Interface Module

Categorized features list of Interface module version 12.6.2.74

3.1. Root Category

InterfaceInformation

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "InterfaceInformation Category " on page 49

DeviceEnumeration

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "DeviceEnumeration Category " on page 59

CoaXPress

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "CoaXPress Category " on page 66

CoaXPressErrorCounters

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "CoaXPressErrorCounters Category " on page 99

CoaXPressAdvanced

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "CoaXPressAdvanced Category " on page 114

DigitalIOControl

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "DigitalIOControl Category " on page 128

IOExtensionModule

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "IOExtensionModule Category " on page 144

UserOutputRegister

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "UserOutputRegister Category " on page 161

IOToolbox

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "IOToolbox Category " on page 173

PCIExpress

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "PCIExpress Category " on page 181

InterfaceControl

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "InterfaceControl Category " on page 196

InterfaceDetails

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "InterfaceDetails Category " on page 212

EventControl

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "EventControl Category " on page 272

OemSafetyKey

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "OemSafetyKey Category " on page 294

CustomLogic

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "CustomLogic Category " on page 300

OnboardMemory

Feature Info

Module	Category Path	Type	Access
Interface	Root	Category	RW

Category Members

See also: "OnboardMemory Category " on page 303

3.2. InterfaceInformation Category

InterfaceID

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceInformation	String	Imposed: RO

Short Description

GenTL Producer wide unique identifier of the selected interface.

InterfaceType

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceInformation	Enumeration	Imposed: RO

Short Description

Identifies the transport layer technology of the interface.

Enumeration Values

- **CXP**: This enumeration value indicates CoaXPress transport layer technology.

ProductCode

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceInformation	String	Imposed: RO

Short Description

Product Code.

SerialNumber

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceInformation	String	Imposed: RO

Short Description

Serial Number.

PartNumber

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceInformation	String	Imposed: RO

Short Description

Part Number.

FirmwareRevision

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceInformation	IntReg	RO

Register Port: InterfacePort

Short Description

Firmware Revision.

FirmwareVariant

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceInformation	IntReg	RO

Register Port: InterfacePort

Short Description

Firmware Variant.

FirmwareStatus

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceInformation	Enumeration	RW

Short Description

Firmware Status.

Enumeration Values

- **OK**: OK.
- **TooRecent**: Firmware is too recent.
- **TooOld**: Firmware is too old.
- **RecoveryMode**: Firmware is in recovery mode.
- **PCleGen1NotSupported**: PCIe gen 1 not supported.

FirmwareRecoverySwitch

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceInformation	Boolean	RW

Short Description

Position of the firmware recovery switch.

3.3. DeviceEnumeration Category

DeviceUpdateList

Feature Info

Module	Category Path	Type	Access
Interface	Root → DeviceEnumeration	Command	RW

Short Description

Updates the internal device list.

DeviceSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → DeviceEnumeration	Integer	RW

Value Info

Minimum value: 0

Short Description

Selector for the different devices on this interface.

Selected Features

- ["DeviceID" on the next page](#)
- ["DeviceVendorName" on page 63](#)
- ["DeviceModelName" on page 64](#)
- ["DeviceAccessStatus" on page 65](#)

DeviceID

Feature Info

Module	Category Path	Type	Access
Interface	Root → DeviceEnumeration	String	Imposed: RO

Short Description

Interface wide unique identifier of the selected device.

DeviceVendorName

Feature Info

Module	Category Path	Type	Access
Interface	Root → DeviceEnumeration	String	Imposed: RO

Short Description

Name of the device vendor.

DeviceModelName

Feature Info

Module	Category Path	Type	Access
Interface	Root → DeviceEnumeration	String	Imposed: RO

Short Description

Name of the device model.

DeviceAccessStatus

Feature Info

Module	Category Path	Type	Access
Interface	Root → DeviceEnumeration	Enumeration	Imposed: RO

Short Description

Gives the device's access status at the moment of the last execution of DeviceUpdateList.

Enumeration Values

- **Unknown**: Unknown access.
- **ReadWrite**: Available to be opened with full access.
- **ReadOnly**: Available to be opened with read-only access.
- **NoAccess**: Not reachable.
- **Busy**: Already opened by another entity.
- **OpenReadWrite**: Opened with read-write access.
- **OpenReadOnly**: Opened with read-only access.

3.4. CoaXPress Category

CxpPoCxpHostConnectionSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Enumeration	RW

Description

Selects one (or a group of) CoaXPress physical Host connection(s) for PoCXP control.

Default value: **All**.

Selected Features

- "CxpPoCxpAuto" on the next page
- "CxpPoCxpDetectionMode" on page 71
- "CxpPoCxpTurnOff" on page 69
- "CxpPoCxpTripReset" on page 70
- "CxpPoCxpConfigurationStatus" on page 72
- "CxpPoCxpStatus" on page 73
- "CxpPoCxpCurrent" on page 74
- "CxpPoCxpVoltage" on page 75

Enumeration Values

- **All**: All CoaXPress physical host connections.
- **A**: CoaXPress physical host connection A.
- **B**: CoaXPress physical host connection B.
- **C**: CoaXPress physical host connection C.
- **D**: CoaXPress physical host connection D.
- **E**: CoaXPress physical host connection E.
- **F**: CoaXPress physical host connection F.
- **G**: CoaXPress physical host connection G.
- **H**: CoaXPress physical host connection H.

CxpPoCxpAuto

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Command	Imposed: WO

Description

Activates automatic control of Power over CoaXPress (PoCXP) on the CoaXPress physical Host connection(s) designated by **CxpPoCxpHostConnectionSelector**.

CxpPoCxpTurnOff

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Command	Imposed: WO

Description

Disables Power over CoaXPress (PoCXP) on the CoaXPress physical Host connection(s) designated by **CxpPoCxpHostConnectionSelector**.

CxpPoCxpTripReset

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Command	Imposed: WO

Description

Resets Power over CoaXPress (PoCXP) after an over-current trip on the CoaXPress physical Host connection(s) designated by **CxpPoCxpHostConnectionSelector**.

CxpPoCxpDetectionMode

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Enumeration	RW

Short Description

Selects the Power over CoaXPress (PoCXP) detection mode.

Enumeration Values

- **Extended**: Extended PoCXP detection mode (default).
- **Standard**: Standard PoCXP detection mode.
- **Compound**: Compound PoCXP detection mode (read-only).

CxpPoCxpConfigurationStatus

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Enumeration	Imposed: RO

Description

Returns the Power over CoaXPress (PoCXP) configuration of the CoaXPress physical Host connection(s) designated by **CxpPoCxpHostConnectionSelector**.

Enumeration Values

- **Off**: PoCXP is forced off.
- **Auto**: Normal automatic PoCXP operation.
- **Unknown**: PoCXP configuration is unknown.
- **Compound**: PoCXP configuration is compound.

CxpPoCxpStatus

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Enumeration	Imposed: RO

Description

Returns the Power over CoaXPress (PoCXP) status on the CoaXPress physical Host connection(s) designated by **CxpPoCxpHostConnectionSelector**.

Enumeration Values

- **Off**: PoCXP is off.
- **On**: PoCXP is on.
- **Tripped**: PoCXP has shut down because of an over-current trip.
- **Compound**: PoCXP status is compound.

CxpPoCxpCurrent

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	SwissKnife	RW

Value Info

Dimension: Current

Unit: A (Ampere)

Description

Returns the current delivered by the PoCXP transmitter unit of the CoaXPress physical Host connection designated by **CxpPoCxpHostConnectionSelector**.

Unit: Ampere.

Value range: from 0.0 up to 1.020 by steps of 0.004.

CxpPoCxpVoltage

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	SwissKnife	RW

Value Info

Dimension: Voltage

Unit: V (Volt)

Description

Returns the output voltage delivered by the PoCXP transmitter unit of the CoaXPress physical Host connection designated by **CxpPoCxpHostConnectionSelector**.

Unit: Volt.

Value range: from 21.0 up to 29.16 by steps of 0.032.

CxpPoCxpPowerInputStatus

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Enumeration	Imposed: RO

Description

Returns the status of the 24 V power converter delivering power to all the PoCXP transmitter units.

Enumeration Values

- **NotOK:** The 24 V Power Converter is not OK.
- **OK:** The 24 V Power Converter is OK.

CxpHostConnectionCount

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	IntReg	RO

Register Port: InterfacePort

Short Description

CoaXPress Host Connection Count.

CxpHostConnectionSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Enumeration	RW

Short Description

Selects the CoaXPress physical connection.

Selected Features

- ["CxpConnectionState" on page 80](#)
- ["CxpDownConnectionSpeed" on page 81](#)
- ["CxpUpConnectionSpeedConfig" on page 123](#)
- ["CxpDeviceConnectionID" on page 82](#)
- ["CxpHostConnectionTestMode" on page 92](#)
- ["CxpHostConnectionTestErrorCount" on page 93](#)
- ["CxpHostConnectionTestPacketCount" on page 94](#)
- ["CxpHostConnectionTestInjectError" on page 95](#)
- ["CxpLinkLockLossCount" on page 100](#)
- ["Cxp8b10bErrorCount" on page 101](#)
- ["CxpDuplicatedCharactersCorrectedErrorCount" on page 102](#)
- ["CxpDuplicatedCharactersUncorrectedErrorCount" on page 103](#)
- ["CxpStreamDataPacketCrcErrorCount" on page 104](#)
- ["CxpControlPacketCrcErrorCount" on page 105](#)
- ["CxpEventPacketCrcErrorCount" on page 106](#)
- ["CxpLinkLockLossCountReset" on page 107](#)
- ["Cxp8b10bErrorCountReset" on page 108](#)
- ["CxpDuplicatedCharactersCorrectedErrorCountReset" on page 109](#)
- ["CxpDuplicatedCharactersUncorrectedErrorCountReset" on page 110](#)
- ["CxpStreamDataPacketCrcErrorCountReset" on page 111](#)

- ["CxpControlPacketCrcErrorCountReset"](#) on page 112
- ["CxpEventPacketCrcErrorCountReset"](#) on page 113

Enumeration Values

- **A**: CoaXPress physical host connection A.
- **B**: CoaXPress physical host connection B.
- **C**: CoaXPress physical host connection C.
- **D**: CoaXPress physical host connection D.
- **E**: CoaXPress physical host connection E.
- **F**: CoaXPress physical host connection F.
- **G**: CoaXPress physical host connection G.
- **H**: CoaXPress physical host connection H.

CxpConnectionState

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Enumeration	Imposed: RO

Description

Returns the CoaXPress connection state of the CoaXPress physical Host connection designated by **CxpHostConnectionSelector**.

Enumeration Values

- **Undetected**: Undetected.
- **Detected**: Detected.

CxpDownConnectionSpeed

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Enumeration	Imposed: RO

Description

Returns the CoaXPress down-connection speed of the CoaXPress physical Host connection designated by `CxpHostConnectionSelector`.

Enumeration Values

- `CXP1`: 1.250 Gbps.
- `CXP2`: 2.500 Gbps.
- `CXP3`: 3.125 Gbps.
- `CXP5`: 5.000 Gbps.
- `CXP6`: 6.250 Gbps.
- `CXP10`: 10.000 Gbps.
- `CXP12`: 12.500 Gbps.

CxpDeviceConnectionID

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Enumeration	Imposed: RO

Description

Returns the CoaXPress connection topology information of the CoaXPress physical Host connection designated by **CxpHostConnectionSelector**.

Enumeration Values

- **CameraW_Master**: Master Connection of Camera W.
- **CameraW_Extension1**: Extension 1 of Camera W.
- **CameraW_Extension2**: Extension 2 of Camera W.
- **CameraW_Extension3**: Extension 3 of Camera W.
- **CameraW_Extension4**: Extension 4 of Camera W.
- **CameraW_Extension5**: Extension 5 of Camera W.
- **CameraW_Extension6**: Extension 6 of Camera W.
- **CameraW_Extension7**: Extension 7 of Camera W.
- **CameraX_Master**: Master Connection of Camera X.
- **CameraX_Extension1**: Extension 1 of Camera X.
- **CameraX_Extension2**: Extension 2 of Camera X.
- **CameraX_Extension3**: Extension 3 of Camera X.
- **CameraX_Extension4**: Extension 4 of Camera X.
- **CameraX_Extension5**: Extension 5 of Camera X.
- **CameraX_Extension6**: Extension 6 of Camera X.
- **CameraX_Extension7**: Extension 7 of Camera X.
- **CameraY_Master**: Master Connection of Camera Y.
- **CameraY_Extension1**: Extension 1 of Camera Y.
- **CameraY_Extension2**: Extension 2 of Camera Y.
- **CameraY_Extension3**: Extension 3 of Camera Y.
- **CameraY_Extension4**: Extension 4 of Camera Y.

- **CameraY_Extension5**: Extension 5 of Camera Y.
- **CameraY_Extension6**: Extension 6 of Camera Y.
- **CameraY_Extension7**: Extension 7 of Camera Y.
- **CameraZ_Master**: Master Connection of Camera Z.
- **CameraZ_Extension1**: Extension 1 of Camera Z.
- **CameraZ_Extension2**: Extension 2 of Camera Z.
- **CameraZ_Extension3**: Extension 3 of Camera Z.
- **CameraZ_Extension4**: Extension 4 of Camera Z.
- **CameraZ_Extension5**: Extension 5 of Camera Z.
- **CameraZ_Extension6**: Extension 6 of Camera Z.
- **CameraZ_Extension7**: Extension 7 of Camera Z.
- **CameraS_Master**: Master Connection of Camera S.
- **CameraS_Extension1**: Extension 1 of Camera S.
- **CameraS_Extension2**: Extension 2 of Camera S.
- **CameraS_Extension3**: Extension 3 of Camera S.
- **CameraS_Extension4**: Extension 4 of Camera S.
- **CameraS_Extension5**: Extension 5 of Camera S.
- **CameraS_Extension6**: Extension 6 of Camera S.
- **CameraS_Extension7**: Extension 7 of Camera S.
- **CameraT_Master**: Master Connection of Camera T.
- **CameraT_Extension1**: Extension 1 of Camera T.
- **CameraT_Extension2**: Extension 2 of Camera T.
- **CameraT_Extension3**: Extension 3 of Camera T.
- **CameraT_Extension4**: Extension 4 of Camera T.
- **CameraT_Extension5**: Extension 5 of Camera T.
- **CameraT_Extension6**: Extension 6 of Camera T.
- **CameraT_Extension7**: Extension 7 of Camera T.
- **CameraU_Master**: Master Connection of Camera U.
- **CameraU_Extension1**: Extension 1 of Camera U.
- **CameraU_Extension2**: Extension 2 of Camera U.
- **CameraU_Extension3**: Extension 3 of Camera U.
- **CameraU_Extension4**: Extension 4 of Camera U.
- **CameraU_Extension5**: Extension 5 of Camera U.

- **CameraU_Extension6**: Extension 6 of Camera U.
- **CameraU_Extension7**: Extension 7 of Camera U.
- **CameraV_Master**: Master Connection of Camera V.
- **CameraV_Extension1**: Extension 1 of Camera V.
- **CameraV_Extension2**: Extension 2 of Camera V.
- **CameraV_Extension3**: Extension 3 of Camera V.
- **CameraV_Extension4**: Extension 4 of Camera V.
- **CameraV_Extension5**: Extension 5 of Camera V.
- **CameraV_Extension6**: Extension 6 of Camera V.
- **CameraV_Extension7**: Extension 7 of Camera V.
- **SubLink_Extension1**: Sub-Link Extension 1.
- **SubLink_Extension2**: Sub-Link Extension 2.
- **SubLink_Extension3**: Sub-Link Extension 3.
- **SubLink_Extension4**: Sub-Link Extension 4.
- **SubLink_Extension5**: Sub-Link Extension 5.
- **SubLink_Extension6**: Sub-Link Extension 6.
- **SubLink_Extension7**: Sub-Link Extension 7.
- **NotReady**: Not Ready.

CXP1Supported

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Boolean	Imposed: RO

Short Description

CXP1Supported.

CXP2Supported

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Boolean	Imposed: RO

Short Description

CXP2Supported.

CXP3Supported

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Boolean	Imposed: RO

Short Description

CXP3Supported.

CXP5Supported

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Boolean	Imposed: RO

Short Description

CXP5Supported.

CXP6Supported

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Boolean	Imposed: RO

Short Description

CXP6Supported.

CXP10Supported

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Boolean	Imposed: RO

Short Description

CXP10Supported.

CXP12Supported

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Boolean	Imposed: RO

Short Description

CXP12Supported.

CxpHostConnectionTestMode

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Enumeration	RW

Description

Controls the Host to Device connection test mode for the CoaXPress physical Host connection designated by **CxpHostConnectionSelector**.

Default value: Off.

Enumeration Values

- **Off**: The test mode is disabled on the selected Host connection.
- **Mode1**: The test mode is one on the selected Host connection.

CxpHostConnectionTestErrorCount

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Integer	RW

Value Info

Minimum value: 0

Maximum value: 4294967295

Short Description

Reports the current connection error count for test packets received by the Host on the selected Host connection.

CxpHostConnectionTestPacketCount

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Integer	RW

Value Info

Minimum value: 0

Maximum value: 4294967295

Description

Returns the current count of test packets received by the CoaXPress physical Host connection designated by **CxpHostConnectionSelector**.

This feature can be read at any time. It can be written to zero to reset the count between tests.

CxpHostConnectionTestInjectError

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Command	RW

Description

Injects a single character error into the Host to Device test packet of the CoaXPress physical Host connection designated by **CxpHostConnectionSelector**.

CxpRevisionSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Enumeration	RW

Description

Selects the CoaXPress Standard Revision for current support.

Default value: CXP_1_0.

Selected Features

- "CxpRevisionSupport" on the next page

Enumeration Values

- CXP_1_0: CoaXPress Standard Version 1.0.
- CXP_1_1: CoaXPress Standard Version 1.1.
- CXP_1_1_1: CoaXPress Standard Version 1.1.1.
- CXP_2_0: CoaXPress Standard Version 2.0.

CxpRevisionSupport

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Enumeration	Imposed: RO

Short Description

Reports the current support of the selected CoaXPress Standard Revision.

Enumeration Values

- **NotSupported**: Not supported.
- **PartiallySupported**: Partially supported.
- **Supported**: Supported.

ShowCoaXPressAdvancedFeatures

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPress	Boolean	RW

Short Description

Show CoaXPress advanced features.

3.5. CoaXPressErrorCounters Category

CxpLinkLockLossCount

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Integer	Imposed: RO

Short Description

Reports the count of connection lock losses on the selected Host connection.

Cxp8b10bErrorCount

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Integer	Imposed: RO

Short Description

Reports the count of encoding errors on the selected Host connection.

CxpDuplicatedCharactersCorrectedErrorCount

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Integer	Imposed: RO

Short Description

Reports the count of errors detected in duplicated characters (P0, P1, P2, P3) that could be decoded on the selected Host connection.

CxpDuplicatedCharactersUncorrectedErrorCount

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Integer	Imposed: RO

Short Description

Reports the count of errors detected in duplicated characters (P0, P1, P2, P3) that could not be decoded on the selected Host connection.

CxpStreamDataPacketCrcErrorCount

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Integer	Imposed: RO

Short Description

Reports the count of CRC errors detected in stream data packets on the selected Host connection.

CxpControlPacketCrcErrorCount

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Integer	Imposed: RO

Short Description

Reports the count of CRC errors detected in control packets on the selected Host connection.

CxpEventPacketCrcErrorCount

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Integer	Imposed: RO

Short Description

Reports the count of CRC errors detected in event packets on the selected Host connection.

CxpLinkLockLossCountReset

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Command	Imposed: WO

Short Description

CoaXPress Link Lock Loss Count Reset.

Cxp8b10bErrorCountReset

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Command	Imposed: WO

Short Description

CoaXPress8b10b Error Count Reset.

CxpDuplicatedCharactersCorrectedErrorCountReset

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Command	Imposed: WO

Short Description

CoaXPress Duplicated Characters Corrected Error Count Reset.

CxpDuplicatedCharactersUncorrectedErrorCountReset

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Command	Imposed: WO

Short Description

CoaXPress Duplicated Characters Uncorrected Error Count Reset.

CxpStreamDataPacketCrcErrorCountReset

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Command	Imposed: WO

Short Description

CoaXPress Stream Data Packet Crc Error Count Reset.

CxpControlPacketCrcErrorCountReset

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Command	Imposed: WO

Short Description

CoaXPress Control Packet Crc Error Count Reset.

CxpEventPacketCrcErrorCountReset

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressErrorCounters	Command	Imposed: WO

Short Description

CoaXPress Event Packet Crc Error Count Reset.

3.6. CoaXPressAdvanced Category

CxpRateMask

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressAdvanced	Integer	RW

Value Info

Minimum value: 0

Short Description

Mask of CoaXPress rates allowed to be used by the host
(CXP1=0x01,CXP2=0x02,CXP3=0x04,CXP5=0x08,CXP6=0x10,CXP10=0x20,CPX12=0x40).

CxpRateMaskCXP1

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressAdvanced	Boolean	RW

Short Description

CoaXPress Rate Mask CXP1.

CxpRateMaskCXP2

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressAdvanced	Boolean	RW

Short Description

CoaXPress Rate Mask CXP2.

CxpRateMaskCXP3

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressAdvanced	Boolean	RW

Short Description

CoaXPress Rate Mask CXP3.

CxpRateMaskCXP5

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressAdvanced	Boolean	RW

Short Description

CoaXPress Rate Mask CXP5.

CxpRateMaskCXP6

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressAdvanced	Boolean	RW

Short Description

CoaXPress Rate Mask CXP6.

CxpRateMaskCXP10

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressAdvanced	Boolean	RW

Short Description

CoaXPress Rate Mask CXP10.

CxpRateMaskCXP12

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressAdvanced	Boolean	RW

Short Description

CoaXPress Rate Mask CXP12.

CxpUpConnectionSpeedConfig

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressAdvanced	Enumeration	Imposed: WO

Short Description

Configure upconnection speed on the selected Host connection.

Enumeration Values

- **Auto**: 41.667 Mbps when downconnection speed is above CXP6, 20.833 Mbps otherwise.
- **Use_20Mbps**: 20.833 Mbps.
- **Use_40Mbps**: 41.667 Mbps.
- **Off**: Disable upconnection.

CxpDiscoveryTimingSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressAdvanced	Enumeration	RW

Short Description

Selects a CoaXPress discovery timing value.

Selected Features

- ["CxpDiscoveryTiming" on the next page](#)

Enumeration Values

- **DiscoveryPeriod**: Period of the discovery link resets on undetected connectors (default: 1100).
- **RecoveryTime**: Recovery time following an error on a connector before restarting the discovery (default: 500).
- **ExtensionSetupMaxTime**: Maximum time for extensions to be discovered by the master (default: 6000).
- **DiscoveryInitialDelay**: Initial delay following a low-level lock before accessing device registers (default: 1000).
- **LinkReconfigMaxTime**: Maximum time for link re-configuration (default: 1100).
- **DeviceLinkReconfigDelay**: Delay to allow the device to complete link re-configuration (default: 200).

CxpDiscoveryTiming

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressAdvanced	Integer	RW

Value Info

Unit: ms (millisecond)

Short Description

Value of the selected CoaXPress discovery timing (millisecond).

CxpControlParameterSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressAdvanced	Enumeration	RW

Short Description

Selects a CoaXPress control parameter.

Selected Features

- ["CxpControlParameter" on the next page](#)

Enumeration Values

- **TransactionTimeout**: Control transaction timeout (millisecond) (default: 300).
- **TransactionMaxResendCount**: Control transaction maximum resend counter (default: 10).
- **ControlPacketSizeMax**: Control packet size max (bytes) (default: 128).
- **CxpVersion20Supported**: CoaXPress version 2.0 supported (boolean) (default: 0).
- **EnableCommunicationWithTag**: Enable control command packets with tag (boolean) (default: 1).
- **ForceCommunicationWithTag**: Force control command packets with tag (boolean) (default: 0).

CxpControlParameter

Feature Info

Module	Category Path	Type	Access
Interface	Root → CoaXPressAdvanced	Integer	RW

Value Info

Minimum value: 0

Maximum value: 2147483647

Short Description

Value of the selected CoaXPress control parameter.

3.7. DigitalIOControl Category

LineSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → DigitalIOControl	Enumeration	RW

Description

Selects one physical GPIO line.

Default value: **DIN11**.

Selected Features

- ["LineFormat" on page 132](#)
- ["LineMode" on page 133](#)
- ["LineInverter" on page 134](#)
- ["LineFilterStrength" on page 135](#)
- ["LineFilterDelay" on page 136](#)
- ["LineStatus" on page 137](#)
- ["LineSource" on page 140](#)

Enumeration Values

- **DIN11**: Differential input 1 of Internal I/O connector 1.
- **DIN12**: Differential input 2 of Internal I/O connector 1.
- **DIN21**: Differential input 1 of Internal I/O connector 2.
- **DIN22**: Differential input 2 of Internal I/O connector 2.
- **IIN11**: Isolated input 1 of Internal I/O connector 1.
- **IIN12**: Isolated input 2 of Internal I/O connector 1.
- **IIN13**: Isolated input 3 of Internal I/O connector 1.
- **IIN14**: Isolated input 4 of Internal I/O connector 1.
- **IIN21**: Isolated input 1 of Internal I/O connector 2.
- **IIN22**: Isolated input 2 of Internal I/O connector 2.

- **IIN23**: Isolated input 3 of Internal I/O connector 2.
- **IIN24**: Isolated input 4 of Internal I/O connector 2.
- **IOUT11**: Isolated output 1 of Internal I/O connector 1.
- **IOUT12**: Isolated output 2 of Internal I/O connector 1.
- **IOUT21**: Isolated output 1 of Internal I/O connector 2.
- **IOUT22**: Isolated output 2 of Internal I/O connector 2.
- **TTLIO11**: TTL input/output 1 of Internal I/O connector 1.
- **TTLIO12**: TTL input/output 2 of Internal I/O connector 1.
- **TTLIO21**: TTL input/output 1 of Internal I/O connector 2.
- **TTLIO22**: TTL input/output 2 of Internal I/O connector 2.
- **MIO1**: Input/output 1 of I/O extension module.
- **MIO2**: Input/output 2 of I/O extension module.
- **MIO3**: Input/output 3 of I/O extension module.
- **MIO4**: Input/output 4 of I/O extension module.
- **MIO5**: Input/output 5 of I/O extension module.
- **MIO6**: Input/output 6 of I/O extension module.
- **MIO7**: Input/output 7 of I/O extension module.
- **MIO8**: Input/output 8 of I/O extension module.
- **MIO9**: Input/output 9 of I/O extension module.
- **MIO10**: Input/output 10 of I/O extension module.
- **MIO11**: Input/output 11 of I/O extension module.
- **MIO12**: Input/output 12 of I/O extension module.
- **MIO13**: Input/output 13 of I/O extension module.
- **MIO14**: Input/output 14 of I/O extension module.
- **MIO15**: Input/output 15 of I/O extension module.
- **MIO16**: Input/output 16 of I/O extension module.
- **MIO17**: Input/output 17 of I/O extension module.
- **MIO18**: Input/output 18 of I/O extension module.
- **MIO19**: Input/output 19 of I/O extension module.
- **MIO20**: Input/output 20 of I/O extension module.
- **MIO21**: Input/output 21 of I/O extension module.
- **MIO22**: Input/output 22 of I/O extension module.
- **MIO23**: Input/output 23 of I/O extension module.

- **MIO24:** Input/output 24 of I/O extension module.
- **MIO25:** Input/output 25 of I/O extension module.
- **MIO26:** Input/output 26 of I/O extension module.
- **MIO27:** Input/output 27 of I/O extension module.
- **MIO28:** Input/output 28 of I/O extension module.
- **MIO29:** Input/output 29 of I/O extension module.
- **MIO30:** Input/output 30 of I/O extension module.
- **MIO31:** Input/output 31 of I/O extension module.
- **MIO32:** Input/output 32 of I/O extension module.
- **MIO33:** Input/output 33 of I/O extension module.
- **MIO34:** Input/output 34 of I/O extension module.
- **MIO35:** Input/output 35 of I/O extension module.
- **MIO36:** Input/output 36 of I/O extension module.
- **MIO37:** Input/output 37 of I/O extension module.
- **MIO38:** Input/output 38 of I/O extension module.
- **MIO39:** Input/output 39 of I/O extension module.
- **MIO40:** Input/output 40 of I/O extension module.

LineFormat

Feature Info

Module	Category Path	Type	Access
Interface	Root → DigitalIOControl	Enumeration	Imposed: RO

Description

Returns the electrical style of the selected physical GPIO line.

Enumeration Values

- **ISO**: The I/O line is opto-coupled.
- **DIFF**: The differential I/O line is RS-422 compliant.
- **TTL**: The singled-ended I/O line is TTL compliant.

LineMode

Feature Info

Module	Category Path	Type	Access
Interface	Root → DigitalIOControl	Enumeration	RW

Description

Direction and line driver mode of the selected physical GPIO line.

Default value: **Input** for the input-capable GPIO lines; **Output** for the output-only GPIO lines.

Enumeration Values

- **Input:** Input line.
- **Output:** Output line.
- **DriveLow:** Open-collector driver capable of driving low only.
- **DriveHigh:** Open-emitter driver capable of driving high only.

LineInverter

Feature Info

Module	Category Path	Type	Access
Interface	Root → DigitalIOControl	Boolean	RW

Description

Signal inversion of the selected input or output line.

When set to **False**, the line signal is not inverted.

When set to **True**, the line signal is inverted.



NOTE

For bidirectional GPIO lines such as the TTL input/output lines, the settings applies equally to the signal input path and the signal output path!

Default value: **False**.

LineFilterStrength

Feature Info

Module	Category Path	Type	Access
Interface	Root → DigitalIOControl	Enumeration	RW

Description

Strength of the glitch removal filter of the selected physical GPIO line.



NOTE

This feature is only available for input-capable GPIO lines.

Default value: **Low**.

Enumeration Values

- **Lowest**: Lowest filter strength.
- **Low**: Low filter strength.
- **Medium**: Medium filter strength.
- **High**: High filter strength.
- **Highest**: Highest filter strength.

LineFilterDelay

Feature Info

Module	Category Path	Type	Access
Interface	Root → DigitalIOControl	SwissKnife	RW

Description

Returns the latency delay, expressed in microseconds, introduced by the glitch removal filter of the selected physical GPIO line.

**NOTE**

This feature is only available for input-capable GPIO lines.

LineStatus

Feature Info

Module	Category Path	Type	Access
Interface	Root → DigitalIOControl	Boolean	RW

Description

Returns the current status of the selected physical GPIO line.

When **False**, the logical state of the selected physical GPIO line is low.

When **True**, The logical state of the selected physical GPIO line is high.



NOTE

For input-capable I/O lines, the reported value is the logical state of the LineInput signal: a node in the input path of the I/O control block that is located after the Input Inverter.



NOTE

For output-only I/O lines, the reported value is the logical state of the LineOutput signal, a node in the output path of the I/O control block that is located before the Output Inverter.

LineStatusAll

Feature Info

Module	Category Path	Type	Access
Interface	Root → DigitalIOControl	Integer	RW

Description

Returns the current state of all available GPIO line signals at time of polling in a single bit field.

Bit values:

- **0**: The logical state of the corresponding GPIO line is low.
- **1**: The logical state of the corresponding GPIO line is high.

Bit assignments:

- Bit 0: DIN11 GPIO line.
- Bit 1: DIN12 GPIO line.
- Bit 2: DIN21 GPIO line.
- Bit 3: DIN22 GPIO line.
- Bit 4: IIN11 GPIO line.
- Bit 5: IIN12 GPIO line.
- Bit 6: IIN13 GPIO line.
- Bit 7: IIN14 GPIO line.
- Bit 8: IIN21 GPIO line.
- Bit 9: IIN22 GPIO line.
- Bit 10: IIN23GPIO line.
- Bit 11: IIN24 GPIO line.
- Bit 12: IOUT11 GPIO line.
- Bit 13: IOUT12 GPIO line.
- Bit 14: IOUT21 GPIO line.
- Bit 15: IOUT22 GPIO line.
- Bit 16: TTLIO11 GPIO line.
- Bit 17: TTLIO12 GPIO line.
- Bit 18: TTLIO21 GPIO line.

- Bit 19: TTLIO22 GPIO line.
- Bit 20 ... Bit 59 : MIO1 ... MIO40 GPIO lines.

LineSource

Feature Info

Module	Category Path	Type	Access
Interface	Root → DigitalIOControl	Enumeration	RW

Description

Select the internal signal sourcing the output of the selected physical GPIO line.

**NOTE**

This feature is only available for output-capable GPIO lines.

Enumeration Values

- **UserOutput0**: Bit 0 of user output register.
- **UserOutput1**: Bit 1 of user output register.
- **UserOutput2**: Bit 2 of user output register.
- **UserOutput3**: Bit 3 of user output register.
- **UserOutput4**: Bit 4 of user output register.
- **UserOutput5**: Bit 5 of user output register.
- **UserOutput6**: Bit 6 of user output register.
- **UserOutput7**: Bit 7 of user output register.
- **Device0Strobe**: Strobe output of device 0.
- **Device1Strobe**: Strobe output of device 1.
- **Device2Strobe**: Strobe output of device 2.
- **Device3Strobe**: Strobe output of device 3.
- **Device4Strobe**: Strobe output of device 4.
- **Device5Strobe**: Strobe output of device 5.
- **Device6Strobe**: Strobe output of device 6.
- **Device7Strobe**: Strobe output of device 7.
- **Device0CameraTrigger**: Camera trigger output of device 0.
- **Device1CameraTrigger**: Camera trigger output of device 1.
- **Device2CameraTrigger**: Camera trigger output of device 2.

- **Device3CameraTrigger**: Camera trigger output of device 3.
- **Device4CameraTrigger**: Camera trigger output of device 4.
- **Device5CameraTrigger**: Camera trigger output of device 5.
- **Device6CameraTrigger**: Camera trigger output of device 6.
- **Device7CameraTrigger**: Camera trigger output of device 7.
- **Device0Stream0StartOfCameraReadout**: Start of camera readout on stream 0 of device 0.
- **Device0Stream1StartOfCameraReadout**: Start of camera readout on stream 1 of device 0.
- **Device0Stream2StartOfCameraReadout**: Start of camera readout on stream 2 of device 0.
- **Device0Stream3StartOfCameraReadout**: Start of camera readout on stream 3 of device 0.
- **Device0Stream4StartOfCameraReadout**: Start of camera readout on stream 4 of device 0.
- **Device0Stream5StartOfCameraReadout**: Start of camera readout on stream 5 of device 0.
- **Device0Stream6StartOfCameraReadout**: Start of camera readout on stream 6 of device 0.
- **Device0Stream7StartOfCameraReadout**: Start of camera readout on stream 7 of device 0.
- **Device1Stream0StartOfCameraReadout**: Start of camera readout on stream 0 of device 1.
- **Device1Stream1StartOfCameraReadout**: Start of camera readout on stream 1 of device 1.
- **Device1Stream2StartOfCameraReadout**: Start of camera readout on stream 2 of device 1.
- **Device1Stream3StartOfCameraReadout**: Start of camera readout on stream 3 of device 1.
- **Device1Stream4StartOfCameraReadout**: Start of camera readout on stream 4 of device 1.
- **Device1Stream5StartOfCameraReadout**: Start of camera readout on stream 5 of device 1.
- **Device1Stream6StartOfCameraReadout**: Start of camera readout on stream 6 of device 1.
- **Device1Stream7StartOfCameraReadout**: Start of camera readout on stream 7 of device 1.
- **Device2Stream0StartOfCameraReadout**: Start of camera readout on stream 0 of device 2.
- **Device2Stream1StartOfCameraReadout**: Start of camera readout on stream 1 of device 2.
- **Device2Stream2StartOfCameraReadout**: Start of camera readout on stream 2 of device 2.
- **Device2Stream3StartOfCameraReadout**: Start of camera readout on stream 3 of device 2.
- **Device2Stream4StartOfCameraReadout**: Start of camera readout on stream 4 of device 2.
- **Device2Stream5StartOfCameraReadout**: Start of camera readout on stream 5 of device 2.
- **Device2Stream6StartOfCameraReadout**: Start of camera readout on stream 6 of device 2.
- **Device2Stream7StartOfCameraReadout**: Start of camera readout on stream 7 of device 2.
- **Device3Stream0StartOfCameraReadout**: Start of camera readout on stream 0 of device 3.
- **Device3Stream1StartOfCameraReadout**: Start of camera readout on stream 1 of device 3.
- **Device3Stream2StartOfCameraReadout**: Start of camera readout on stream 2 of device 3.
- **Device3Stream3StartOfCameraReadout**: Start of camera readout on stream 3 of device 3.

- [illegible]

- **Device7Stream5StartOfCameraReadout**: Start of camera readout on stream 5 of device 7.
- **Device7Stream6StartOfCameraReadout**: Start of camera readout on stream 6 of device 7.
- **Device7Stream7StartOfCameraReadout**: Start of camera readout on stream 7 of device 7.
- **Low**: Low.
- **High**: high.

3.8. IOExtensionModule Category

IOExtensionModuleConfiguration

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOExtensionModule	Enumeration	Imposed: WO

Description

This feature selects the I/O extension module configuration action.



NOTE

Committing a new configuration is only possible when no conflict is detected in the current configuration (i.e. when `IOExtensionModuleErrorCount = 0`)

Enumeration Values

- **Begin**: Enter configuration mode.
- **Commit**: Commit current configuration.
- **Abort**: Cancel current configuration.

IOExtensionModuleLineSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOExtensionModule	Enumeration	RW

Short Description

Selects an extension module I/O line to configure.

Selected Features

- ["IOExtensionModuleLineFormat" on page 148](#)
- ["IOExtensionModuleLineMode" on page 149](#)
- ["IOExtensionModuleLineStatus" on page 150](#)

Enumeration Values

- **MIO1**: Input/output 1 of I/O extension module.
- **MIO2**: Input/output 2 of I/O extension module.
- **MIO3**: Input/output 3 of I/O extension module.
- **MIO4**: Input/output 4 of I/O extension module.
- **MIO5**: Input/output 5 of I/O extension module.
- **MIO6**: Input/output 6 of I/O extension module.
- **MIO7**: Input/output 7 of I/O extension module.
- **MIO8**: Input/output 8 of I/O extension module.
- **MIO9**: Input/output 9 of I/O extension module.
- **MIO10**: Input/output 10 of I/O extension module.
- **MIO11**: Input/output 11 of I/O extension module.
- **MIO12**: Input/output 12 of I/O extension module.
- **MIO13**: Input/output 13 of I/O extension module.
- **MIO14**: Input/output 14 of I/O extension module.
- **MIO15**: Input/output 15 of I/O extension module.

- **MIO16:** Input/output 16 of I/O extension module.
- **MIO17:** Input/output 17 of I/O extension module.
- **MIO18:** Input/output 18 of I/O extension module.
- **MIO19:** Input/output 19 of I/O extension module.
- **MIO20:** Input/output 20 of I/O extension module.
- **MIO21:** Input/output 21 of I/O extension module.
- **MIO22:** Input/output 22 of I/O extension module.
- **MIO23:** Input/output 23 of I/O extension module.
- **MIO24:** Input/output 24 of I/O extension module.
- **MIO25:** Input/output 25 of I/O extension module.
- **MIO26:** Input/output 26 of I/O extension module.
- **MIO27:** Input/output 27 of I/O extension module.
- **MIO28:** Input/output 28 of I/O extension module.
- **MIO29:** Input/output 29 of I/O extension module.
- **MIO30:** Input/output 30 of I/O extension module.
- **MIO31:** Input/output 31 of I/O extension module.
- **MIO32:** Input/output 32 of I/O extension module.
- **MIO33:** Input/output 33 of I/O extension module.
- **MIO34:** Input/output 34 of I/O extension module.
- **MIO35:** Input/output 35 of I/O extension module.
- **MIO36:** Input/output 36 of I/O extension module.
- **MIO37:** Input/output 37 of I/O extension module.
- **MIO38:** Input/output 38 of I/O extension module.
- **MIO39:** Input/output 39 of I/O extension module.
- **MIO40:** Input/output 40 of I/O extension module.

IOExtensionModuleLineFormat

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOExtensionModule	Enumeration	RW

Short Description

Electrical style of the selected I/O line.

Enumeration Values

- **DIFF**: RS-422 compliant.
- **TTL**: TTL compliant.

IOExtensionModuleLineMode

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOExtensionModule	Enumeration	RW

Short Description

Direction of the selected I/O line.

Enumeration Values

- **Input:** Input line.
- **Output:** Output line.

IOExtensionModuleLineStatus

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOExtensionModule	Boolean	RW

Short Description

Default status of the selected output line at power up (or after leaving the configuration mode).

IOExtensionModuleLineToRepair

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOExtensionModule	Enumeration	RW

Description

This feature helps the user to solve a I/O module configuration conflict by indicating the first I/O line requiring attention.



NOTE

This feature is not available unless configuration conflicts are detected in the current configuration (i.e. when `IOExtensionModuleErrorCount > 0`)

Enumeration Values

- **MIO1**: Input/output 1 of I/O extension module.
- **MIO2**: Input/output 2 of I/O extension module.
- **MIO3**: Input/output 3 of I/O extension module.
- **MIO4**: Input/output 4 of I/O extension module.
- **MIO5**: Input/output 5 of I/O extension module.
- **MIO6**: Input/output 6 of I/O extension module.
- **MIO7**: Input/output 7 of I/O extension module.
- **MIO8**: Input/output 8 of I/O extension module.
- **MIO9**: Input/output 9 of I/O extension module.
- **MIO10**: Input/output 10 of I/O extension module.
- **MIO11**: Input/output 11 of I/O extension module.
- **MIO12**: Input/output 12 of I/O extension module.
- **MIO13**: Input/output 13 of I/O extension module.
- **MIO14**: Input/output 14 of I/O extension module.
- **MIO15**: Input/output 15 of I/O extension module.
- **MIO16**: Input/output 16 of I/O extension module.
- **MIO17**: Input/output 17 of I/O extension module.

- **MIO18:** Input/output 18 of I/O extension module.
- **MIO19:** Input/output 19 of I/O extension module.
- **MIO20:** Input/output 20 of I/O extension module.
- **MIO21:** Input/output 21 of I/O extension module.
- **MIO22:** Input/output 22 of I/O extension module.
- **MIO23:** Input/output 23 of I/O extension module.
- **MIO24:** Input/output 24 of I/O extension module.
- **MIO25:** Input/output 25 of I/O extension module.
- **MIO26:** Input/output 26 of I/O extension module.
- **MIO27:** Input/output 27 of I/O extension module.
- **MIO28:** Input/output 28 of I/O extension module.
- **MIO29:** Input/output 29 of I/O extension module.
- **MIO30:** Input/output 30 of I/O extension module.
- **MIO31:** Input/output 31 of I/O extension module.
- **MIO32:** Input/output 32 of I/O extension module.
- **MIO33:** Input/output 33 of I/O extension module.
- **MIO34:** Input/output 34 of I/O extension module.
- **MIO35:** Input/output 35 of I/O extension module.
- **MIO36:** Input/output 36 of I/O extension module.
- **MIO37:** Input/output 37 of I/O extension module.
- **MIO38:** Input/output 38 of I/O extension module.
- **MIO39:** Input/output 39 of I/O extension module.
- **MIO40:** Input/output 40 of I/O extension module.

IOExtensionModuleErrorCount

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOExtensionModule	Integer	Imposed: RO

Short Description

Number of I/O line configuration errors.

IOExtensionModuleInformation

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOExtensionModule	Category	RW

Category Members

See also: "IOExtensionModuleInformation Category " on the next page

3.9. IOExtensionModuleInformation Category

IOExtensionModuleProductCode

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOExtensionModule → IOExtensionModuleInformation	String	Imposed: RO

Short Description

I/O Extension Module Product Code.

IOExtensionModuleSerialNumber

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOExtensionModule → IOExtensionModuleInformation	String	Imposed: RO

Short Description

I/O Extension Module Serial Number.

IOExtensionModulePartNumber

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOExtensionModule → IOExtensionModuleInformation	String	Imposed: RO

Short Description

I/O Extension Module Part Number.

IOExtensionModuleRevision

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOExtensionModule → IOExtensionModuleInformation	IntReg	RO

Register Port: InterfacePort

Short Description

I/O Extension Module Revision.

IOExtensionModuleVariant

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOExtensionModule → IOExtensionModuleInformation	IntReg	RO

Register Port: InterfacePort

Short Description

I/O Extension Module Variant.

3.10. UserOutputRegister Category

UserOutputValueAll

Feature Info

Module	Category Path	Type	Access
Interface	Root → UserOutputRegister	Integer	RW

Value Info

Minimum value: 0

Maximum value: 255

Description

Value of all User Output Register bits as a bit-field in a single data word.

Bit values:

- 0: The value of the corresponding User Output Register bit is low.
- 1: The value of the corresponding User Output Register bit is high.

Bit assignments:

- Bit 0: Value for bit 0 of the user output register.
- Bit 1: Value for bit 1 of the user output register.
- Bit 2: Value for bit 2 of the user output register.
- Bit 3: Value for bit 3 of the user output register.
- Bit 4: Value for bit 4 of the user output register.
- Bit 5: Value for bit 5 of the user output register.
- Bit 6: Value for bit 6 of the user output register.
- Bit 7: Value for bit 7 of the user output register.

UserActions

Feature Info

Module	Category Path	Type	Access
Interface	Root → UserOutputRegister	Integer	RW

Value Info

Minimum value: 0

Maximum value: 2147483647

Description

Current set of user actions (built with [AddUserAction](#)) that can be executed immediately (c.f. [ExecuteUserActions](#)) or scheduled for execution at a specific time/position (c.f. [ScheduleUserActions](#)).

AddUserAction

Feature Info

Module	Category Path	Type	Access
Interface	Root → UserOutputRegister	Enumeration	Imposed: WO

Description

Add an action to the current set of user actions (**UserActions**).

Enumeration Values

- **UserEvent1**: User Event 1.
- **UserEvent2**: User Event 2.
- **UserEvent3**: User Event 3.
- **UserEvent4**: User Event 4.
- **UserOutput0_High**: Set User Output Register bit 0 high.
- **UserOutput0_Low**: Set User Output Register bit 0 low.
- **UserOutput0_Toggle**: Toggle User Output Register bit 0.
- **UserOutput1_High**: Set User Output Register bit 1 high.
- **UserOutput1_Low**: Set User Output Register bit 1 low.
- **UserOutput1_Toggle**: Toggle User Output Register bit 1.
- **UserOutput2_High**: Set User Output Register bit 2 high.
- **UserOutput2_Low**: Set User Output Register bit 2 low.
- **UserOutput2_Toggle**: Toggle User Output Register bit 2.
- **UserOutput3_High**: Set User Output Register bit 3 high.
- **UserOutput3_Low**: Set User Output Register bit 3 low.
- **UserOutput3_Toggle**: Toggle User Output Register bit 3.
- **UserOutput4_High**: Set User Output Register bit 4 high.
- **UserOutput4_Low**: Set User Output Register bit 4 low.
- **UserOutput4_Toggle**: Toggle User Output Register bit 4.
- **UserOutput5_High**: Set User Output Register bit 5 high.
- **UserOutput5_Low**: Set User Output Register bit 5 low.

- **UserOutput5_Toggle**: Toggle User Output Register bit 5.
- **UserOutput6_High**: Set User Output Register bit 6 high.
- **UserOutput6_Low**: Set User Output Register bit 6 low.
- **UserOutput6_Toggle**: Toggle User Output Register bit 6.
- **UserOutput7_High**: Set User Output Register bit 7 high.
- **UserOutput7_Low**: Set User Output Register bit 7 low.
- **UserOutput7_Toggle**: Toggle User Output Register bit 7.

ClearUserActions

Feature Info

Module	Category Path	Type	Access
Interface	Root → UserOutputRegister	Command	Imposed: WO

Description

Clear the current set of user actions (**UserActions**).

ExecuteUserActions

Feature Info

Module	Category Path	Type	Access
Interface	Root → UserOutputRegister	Command	Imposed: WO

Description

Immediately execute the current set of user actions (**UserActions**).

ScheduleUserActions

Feature Info

Module	Category Path	Type	Access
Interface	Root → UserOutputRegister	Integer	Imposed: WO

Value Info

Minimum value: 0

Maximum value: 4294967295

Description

Schedule the current set of user actions (**UserActions**) for execution at given time/position.

UserActionsSchedulerReference

Feature Info

Module	Category Path	Type	Access
Interface	Root → UserOutputRegister	Enumeration	RW

Description

Defines the reference used by the user action scheduler; can only be changed when `ScheduledUserActionsPoolStatus` is **Empty**.

Enumeration Values

- **InternalTime**: Coaxlink card internal time.
- **QDC1Position**: Quadrature Decoder Tool 1 Position.
- **QDC2Position**: Quadrature Decoder Tool 2 Position.
- **QDC3Position**: Quadrature Decoder Tool 3 Position.
- **QDC4Position**: Quadrature Decoder Tool 4 Position.

ScheduledUserActionsPoolStatus

Feature Info

Module	Category Path	Type	Access
Interface	Root → UserOutputRegister	Enumeration	RW

Description

Reports the status of the pool of scheduled user actions.

Enumeration Values

- **Empty**: The pool of scheduled user actions is empty.
- **PartiallyFilled**: The pool of scheduled user actions is partially filled.
- **AlmostFull**: The pool of scheduled user actions almost full.

DiscardScheduledUserActions

Feature Info

Module	Category Path	Type	Access
Interface	Root → UserOutputRegister	Command	Imposed: WO

Short Description

Discard all scheduled user actions.

InternalTime

Feature Info

Module	Category Path	Type	Access
Interface	Root → UserOutputRegister	IntReg	RO

Register Port: InterfacePort

Short Description

Reports the Coaxlink card internal time.

3.11. IOToolbox Category

LineInputTool

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox	Category	RW

Category Members

See also: "LineInputTool Category " on page 223

MultiplierDividerTool

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox	Category	RW

Category Members

See also: "MultiplierDividerTool Category " on page 229

QuadratureDecoderTool

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox	Category	RW

Category Members

See also: "QuadratureDecoderTool Category " on page 238

DividerTool

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox	Category	RW

Category Members

See also: "DividerTool Category " on page 247

DelayTool

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox	Category	RW

Category Members

See also: "DelayTool Category " on page 254

EventInputTool

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox	Category	RW

Category Members

See also: "EventInputTool Category " on page 262

C2CLinkSynchronizationTool

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox	Category	RW

Category Members

See also: "C2CLinkSynchronizationTool Category " on page 266

3.12. PCIeExpress Category

PCleMaxPayloadSizeSupported

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIExpress	IntReg	RO

Register Port: InterfacePort

Description

Maximum payload size of PCIe TLPs (Transaction Layer Packets) that this interface can support (cf. PCIe Capability Structure offset 04h (Device Capabilities) bits 2:0).



NOTE

PCleMaxPayloadSizeSupported is the max packet payload size supported by Coaxlink for data in the direction frame grabber to PC memory.

PCleMaxPayloadSize

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIExpress	IntReg	RO

Register Port: InterfacePort

Description

Maximum payload size of PCIe TLPs (Transaction Layer Packets) that this interface is allowed to generate (cf. PCIe Capability Structure offset 08h (Device Control) bits 7:5).



NOTE

PCleMaxPayloadSize is the max packet payload size supported by the PC for data in the direction frame grabber to PC memory.

PCleMaxReadRequestSize

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIeExpress	IntReg	RO

Register Port: InterfacePort

Description

Maximum size of PCIe read requests that this interface is allowed to generate (cf. PCIe Capability Structure offset 08h (Device Control) bits 14:12).

PCleMaxLinkSpeed

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIeExpress	Enumeration	Imposed: RO

Short Description

Maximum PCIe transfer rate supported by this interface (cf. PCIe Capability Structure offset 0Ch (Link Capabilities) bits 3:0).

Enumeration Values

- **NotAvailable**: Not available.
- **PCleLinkSpeed2500MTps**: 2.5 GT/s (PCIe Gen 1).
- **PCleLinkSpeed5000MTps**: 5.0 GT/s (PCIe Gen 2).
- **PCleLinkSpeed8000MTps**: 8.0 GT/s (PCIe Gen 3).

PCleCurrentLinkSpeed

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIeExpress	Enumeration	Imposed: RO

Short Description

Negotiated PCIe transfer rate (cf. PCIe Capability Structure offset 12h (Link Status) bits 3:0).

Enumeration Values

- **NotAvailable:** Not available.
- **PCleLinkSpeed2500MTps:** 2.5 GT/s (PCIe Gen 1).
- **PCleLinkSpeed5000MTps:** 5.0 GT/s (PCIe Gen 2).
- **PCleLinkSpeed8000MTps:** 8.0 GT/s (PCIe Gen 3).

PCleMaximumLinkWidth

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIeExpress	Enumeration	Imposed: RO

Short Description

Maximum PCIe link width supported by this interface (cf. PCIe Capability Structure offset 0Ch (Link Capabilities) bits 9:4).

Enumeration Values

- **NotAvailable**: Not available.
- **x1**: 1 Lane.
- **x2**: 2 Lanes.
- **x4**: 4 Lanes.
- **x8**: 8 Lanes.
- **x12**: 12 Lanes.
- **x16**: 16 Lanes.
- **x32**: 32 Lanes.

PCleNegotiatedLinkWidth

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIExpress	Enumeration	Imposed: RO

Short Description

Negotiated PCIe link width (cf. PCIe Capability Structure offset 12h (Link Status) bits 9:4).

Enumeration Values

- **NotAvailable**: Not available.
- **x1**: 1 Lane.
- **x2**: 2 Lanes.
- **x4**: 4 Lanes.
- **x8**: 8 Lanes.
- **x12**: 12 Lanes.
- **x16**: 16 Lanes.
- **x32**: 32 Lanes.

PCleLinkSpeed2500MTpsSupported

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIeExpress	Boolean	RW

Short Description

Reports whether this interface supports PCIe Gen 1 transfer rate (2.5 GT/s).

PCleLinkSpeed5000MTpsSupported

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIeExpress	Boolean	RW

Short Description

Reports whether this interface supports PCIe Gen 2 transfer rate (5.0 GT/s).

PCleLinkSpeed8000MTpsSupported

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIeExpress	Boolean	RW

Short Description

Reports whether this interface supports PCIe Gen 3 transfer rate (8.0 GT/s).

PCIBus

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIExpress	IntSwissKnife	Imposed: RO

Short Description

PCI bus number.

PCIDevice

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIExpress	IntSwissKnife	Imposed: RO

Short Description

PCI device number.

PCIFunction

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIExpress	IntSwissKnife	Imposed: RO

Short Description

PCI function number.

PCISlot

Feature Info

Module	Category Path	Type	Access
Interface	Root → PCIExpress	IntSwissKnife	Imposed: RO

Short Description

PCI slot identification.

3.13. InterfaceControl Category

FanStatus

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Enumeration	Imposed: RO

Short Description

Fan Status.

Enumeration Values

- **OK**: Fan speed is OK.
- **NotOK**: Fan speed is not OK.

TemperatureSensorSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Enumeration	RW

Short Description

Temperature Sensor Selector.

Selected Features

- "Temperature" on the next page

Enumeration Values

- **Grabber**: Grabber Temperature Sensor.

Temperature

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	SwissKnife	RW

Description

Returns the temperature, expressed in °C measured by the selected temperature sensor.

AuxiliaryPowerInput

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Enumeration	Imposed: RO

Description

Auxiliary power input cable connection status.



NOTE

This status is valid only if a PEG-compliant power supply is attached to the Coaxlink auxiliary power input connector through a PEG-compliant power cable.

Enumeration Values

- **Unconnected:** There is no PEG-compliant power cable connected to the auxiliary power input.
- **Connected:** A PEG-compliant power cable is connected to the auxiliary power input.

AuxiliaryPower12VInput

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Enumeration	Imposed: RO

Short Description

Return the status of the 12 V Auxiliary Power Input.

Enumeration Values

- **NotOK:** The 12 V auxiliary power input is NOK.
- **OK:** The 12 V auxiliary power input is OK.

LampMode

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Enumeration	RW

Short Description

Selects the lamp mode.

Enumeration Values

- **Standard**: CoaXPress Standard bracket lamps behavior (default).
- **Dark**: All bracket lamps are turned off.
- **Error**: All bracket lamps are turned off unless error conditions are detected.
- **Custom**: Bracket lamps are controlled by LampCustomValue (bitfield), each lamp can be individually switched on (orange) or off.

LampCustomValue

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Integer	RW

Value Info

Minimum value: 0

Maximum value: 255

Short Description

Controls the bracket lamps with a bitfield value
(LedA=0x01,LedB=0x02,LedC=0x04,LedD=0x08,LedE=0x10,LedF=0x20,LedG=0x40,LedH=0x80).

LampCustomLedA

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Boolean	RW

Short Description

Lamp Custom Led A.

LampCustomLedB

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Boolean	RW

Short Description

Lamp Custom Led B.

LampCustomLedC

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Boolean	RW

Short Description

Lamp Custom Led C.

LampCustomLedD

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Boolean	RW

Short Description

Lamp Custom Led D.

LampCustomLedE

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Boolean	RW

Short Description

Lamp Custom Led E.

LampCustomLedF

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Boolean	RW

Short Description

Lamp Custom Led F.

LampCustomLedG

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Boolean	RW

Short Description

Lamp Custom Led G.

LampCustomLedH

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceControl	Boolean	RW

Short Description

Lamp Custom Led H.

3.14. InterfaceDetails Category

BoardCapabilities

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceDetails	StringReg	RO

Short Description

Board Capabilities.

FirmwareBoardID

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceDetails	IntReg	RO

Register Port: InterfacePort

Short Description

Firmware Board ID.

CPLDRevision

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceDetails	Integer	RW

Short Description

CPLD Revision.

PreviousBootBank

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceDetails	IntSwissKnife	RW

Short Description

Flash bank used during the previous power on.

NextBootBank

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceDetails	IntSwissKnife	RW

Short Description

Flash bank that will be used during the next power on.

CurrentBankSelect

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceDetails	IntSwissKnife	RW

Short Description

Current Bank Select.

CurrentBankSelectReadback

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceDetails	IntSwissKnife	RW

Short Description

Current Bank Select Readback.

NextBankSelect

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceDetails	IntSwissKnife	RW

Short Description

Next Bank Select.

SpiBankStatus

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceDetails	IntReg	RO

Register Port: InterfacePort

Short Description

Spi Bank Status.

PotBankStatus

Feature Info

Module	Category Path	Type	Access
Interface	Root → InterfaceDetails	IntReg	RO

Register Port: InterfacePort

Short Description

Pot Bank Status.

3.15. LineInputTool Category

LineInputToolSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → LineInputTool	Enumeration	RW

Short Description

Selects a Line Input Tool.

Selected Features

- ["LineInputToolSource" on the next page](#)
- ["LineInputToolActivation" on page 228](#)

Enumeration Values

- **LIN1**: Line Input Tool 1.
- **LIN2**: Line Input Tool 2.
- **LIN3**: Line Input Tool 3.
- **LIN4**: Line Input Tool 4.
- **LIN5**: Line Input Tool 5.
- **LIN6**: Line Input Tool 6.
- **LIN7**: Line Input Tool 7.
- **LIN8**: Line Input Tool 8.

LineInputToolSource

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → LineInputTool	Enumeration	RW

Description

Physical GPIO line used as input for the selected Line Input Tool.

Default value: DIN11.

Enumeration Values

- **DIN11:** Differential input 1 of Internal I/O connector 1.
- **DIN12:** Differential input 2 of Internal I/O connector 1.
- **DIN21:** Differential input 1 of Internal I/O connector 2.
- **DIN22:** Differential input 2 of Internal I/O connector 2.
- **IIN11:** Isolated input 1 of Internal I/O connector 1.
- **IIN12:** Isolated input 2 of Internal I/O connector 1.
- **IIN13:** Isolated input 3 of Internal I/O connector 1.
- **IIN14:** Isolated input 4 of Internal I/O connector 1.
- **IIN21:** Isolated input 1 of Internal I/O connector 2.
- **IIN22:** Isolated input 2 of Internal I/O connector 2.
- **IIN23:** Isolated input 3 of Internal I/O connector 2.
- **IIN24:** Isolated input 4 of Internal I/O connector 2.
- **IOUT11:** Isolated output 1 of Internal I/O connector 1.
- **IOUT12:** Isolated output 2 of Internal I/O connector 1.
- **IOUT21:** Isolated output 1 of Internal I/O connector 2.
- **IOUT22:** Isolated output 2 of Internal I/O connector 2.
- **TTLIO11:** TTL input/output 1 of Internal I/O connector 1.
- **TTLIO12:** TTL input/output 2 of Internal I/O connector 1.
- **TTLIO21:** TTL input/output 1 of Internal I/O connector 2.
- **TTLIO22:** TTL input/output 2 of Internal I/O connector 2.

- **MIO1:** Input/output 1 of I/O extension module.
- **MIO2:** Input/output 2 of I/O extension module.
- **MIO3:** Input/output 3 of I/O extension module.
- **MIO4:** Input/output 4 of I/O extension module.
- **MIO5:** Input/output 5 of I/O extension module.
- **MIO6:** Input/output 6 of I/O extension module.
- **MIO7:** Input/output 7 of I/O extension module.
- **MIO8:** Input/output 8 of I/O extension module.
- **MIO9:** Input/output 9 of I/O extension module.
- **MIO10:** Input/output 10 of I/O extension module.
- **MIO11:** Input/output 11 of I/O extension module.
- **MIO12:** Input/output 12 of I/O extension module.
- **MIO13:** Input/output 13 of I/O extension module.
- **MIO14:** Input/output 14 of I/O extension module.
- **MIO15:** Input/output 15 of I/O extension module.
- **MIO16:** Input/output 16 of I/O extension module.
- **MIO17:** Input/output 17 of I/O extension module.
- **MIO18:** Input/output 18 of I/O extension module.
- **MIO19:** Input/output 19 of I/O extension module.
- **MIO20:** Input/output 20 of I/O extension module.
- **MIO21:** Input/output 21 of I/O extension module.
- **MIO22:** Input/output 22 of I/O extension module.
- **MIO23:** Input/output 23 of I/O extension module.
- **MIO24:** Input/output 24 of I/O extension module.
- **MIO25:** Input/output 25 of I/O extension module.
- **MIO26:** Input/output 26 of I/O extension module.
- **MIO27:** Input/output 27 of I/O extension module.
- **MIO28:** Input/output 28 of I/O extension module.
- **MIO29:** Input/output 29 of I/O extension module.
- **MIO30:** Input/output 30 of I/O extension module.
- **MIO31:** Input/output 31 of I/O extension module.
- **MIO32:** Input/output 32 of I/O extension module.
- **MIO33:** Input/output 33 of I/O extension module.

- **MIO34:** Input/output 34 of I/O extension module.
- **MIO35:** Input/output 35 of I/O extension module.
- **MIO36:** Input/output 36 of I/O extension module.
- **MIO37:** Input/output 37 of I/O extension module.
- **MIO38:** Input/output 38 of I/O extension module.
- **MIO39:** Input/output 39 of I/O extension module.
- **MIO40:** Input/output 40 of I/O extension module.

LineInputToolActivation

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → LineInputTool	Enumeration	RW

Short Description

Edge activating the output of the selected Line Input Tool.

Enumeration Values

- **RisingEdge**: Activate the output on the rising edge only.
- **FallingEdge**: Activate the output on the falling edge only.
- **AllEdges**: Activate the output on all edges.

3.16. MultiplierDividerTool Category

MultiplierDividerToolSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → MultiplierDividerTool	Enumeration	RW

Short Description

Selects a Multiplier/Divider Tool.

Selected Features

- ["MultiplierDividerToolSource" on the next page](#)
- ["MultiplierDividerToolOutputControl" on page 233](#)
- ["MultiplierDividerToolMultiplicationFactor" on page 234](#)
- ["MultiplierDividerToolDivisionFactor" on page 235](#)
- ["MultiplierDividerToolEffectiveMultiplicationFactor" on page 236](#)
- ["MultiplierDividerToolEffectiveDivisionFactor" on page 237](#)

Enumeration Values

- **MDV1**: Multiplier/Divider Tool 1.
- **MDV2**: Multiplier/Divider Tool 2.
- **MDV3**: Multiplier/Divider Tool 3.
- **MDV4**: Multiplier/Divider Tool 4.

MultiplierDividerToolSource

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → MultiplierDividerTool	Enumeration	RW

Short Description

I/O Toolbox event stream used as input for the selected Multiplier/Divider Tool.

Enumeration Values

- **NONE**: No event stream.
- **LIN1**: When an event occurs on Line Input Tool 1.
- **LIN2**: When an event occurs on Line Input Tool 2.
- **LIN3**: When an event occurs on Line Input Tool 3.
- **LIN4**: When an event occurs on Line Input Tool 4.
- **LIN5**: When an event occurs on Line Input Tool 5.
- **LIN6**: When an event occurs on Line Input Tool 6.
- **LIN7**: When an event occurs on Line Input Tool 7.
- **LIN8**: When an event occurs on Line Input Tool 8.
- **QDC1**: When an event occurs on Quadrature Decoder Tool 1.
- **QDC2**: When an event occurs on Quadrature Decoder Tool 2.
- **QDC3**: When an event occurs on Quadrature Decoder Tool 3.
- **QDC4**: When an event occurs on Quadrature Decoder Tool 4.
- **MDV1**: When an event occurs on Multiplier/Divider Tool 1.
- **MDV2**: When an event occurs on Multiplier/Divider Tool 2.
- **MDV3**: When an event occurs on Multiplier/Divider Tool 3.
- **MDV4**: When an event occurs on Multiplier/Divider Tool 4.
- **DIV1**: When an event occurs on Divider Tool 1.
- **DIV2**: When an event occurs on Divider Tool 2.
- **DIV3**: When an event occurs on Divider Tool 3.
- **DIV4**: When an event occurs on Divider Tool 4.

- **DEL1_1**: When an event occurs on Delay Tool 1 Output 1.
- **DEL1_2**: When an event occurs on Delay Tool 1 Output 2.
- **DEL2_1**: When an event occurs on Delay Tool 2 Output 1.
- **DEL2_2**: When an event occurs on Delay Tool 2 Output 2.
- **DEL3_1**: When an event occurs on Delay Tool 3 Output 1.
- **DEL3_2**: When an event occurs on Delay Tool 3 Output 2.
- **DEL4_1**: When an event occurs on Delay Tool 4 Output 1.
- **DEL4_2**: When an event occurs on Delay Tool 4 Output 2.
- **EIN1**: When an event occurs on Event Input Tool 1.
- **EIN2**: When an event occurs on Event Input Tool 2.
- **UserEvent1**: When an event occurs on User Event 1.
- **UserEvent2**: When an event occurs on User Event 2.
- **UserEvent3**: When an event occurs on User Event 3.
- **UserEvent4**: When an event occurs on User Event 4.
- **C2C1**: When an event occurs on C2C-Link Synchronization Tool 1.
- **C2C2**: When an event occurs on C2C-Link Synchronization Tool 2.
- **C2C3**: When an event occurs on C2C-Link Synchronization Tool 3.

MultiplierDividerToolOutputControl

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → MultiplierDividerTool	Enumeration	RW

Short Description

Output control of the selected Multiplier/Divider Tool.

Enumeration Values

- **Enable**: Output enabled.
- **Disable**: Output disabled.

MultiplierDividerToolMultiplicationFactor

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → MultiplierDividerTool	Float	RW

Value Info

Minimum value: 0.001

Maximum value: 1000

Description

Multiplication factor of the selected Multiplier/Divider Tool.

This feature is the **numerator** of the fraction defining the Rate Conversion Ratio (RCR) of the Multiplier/Divider Tool.

$RCR = M/D$ where:

- $M = \text{MultiplierDividerToolMultiplicationFactor}$
- $D = \text{MultiplierDividerToolDivisionFactor}$

The Multiplier/Divider Tools allows defining any RCR values in the range 0.001 to 1000.0.



NOTE

The user may define RCR using any of the following methods:

- A ratio of 2 integer numbers by assigning integer values to both the numerator and the denominator.
- A single non-integer number greater or smaller than 1 assigned to the numerator leaving the denominator to the default value (1.0).
- A single non-integer number greater or smaller than 1 assigned to the denominator leaving the numerator to the default value (1.0).

Default value: 1.0.

MultiplierDividerToolDivisionFactor

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → MultiplierDividerTool	Float	RW

Value Info

Minimum value: 0.001

Maximum value: 1000

Description

Division factor of the selected Multiplier/Divider Tool.

This feature is the **denominator** of the fraction defining the Rate Conversion Ratio (RCR) of the Multiplier/Divider Tool.

$RCR = M/D$ where:

- $M = \text{MultiplierDividerToolMultiplicationFactor}$
- $D = \text{MultiplierDividerToolDivisionFactor}$

The Multiplier/Divider Tools allows defining any RCR values in the range 0.001 to 1000.0.



NOTE

The user may define RCR using any of the following methods:

- A ratio of 2 integer numbers by assigning integer values to both the numerator and the denominator.
- A single non-integer number greater or smaller than 1 assigned to the numerator leaving the denominator to the default value (1.0).
- A single non-integer number greater or smaller than 1 assigned to the denominator leaving the numerator to the default value (1.0).

Default value: 1.0.

MultiplierDividerToolEffectiveMultiplicationFactor

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → MultiplierDividerTool	Integer	RW

Description

Effective multiplication factor of the selected Multiplier/Divider Tool.

This feature is the **numerator** of the fraction defining the Effective Rate Conversion Ratio (Effective RCR) of the Multiplier/Divider Tool.

Effective RCR = Effective M/Effective D where:

- Effective M = **MultiplierDividerToolEffectiveMultiplicationFactor**
- Effective D = **MultiplierDividerToolEffectiveDivisionFactor**

MultiplierDividerToolEffectiveDivisionFactor

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → MultiplierDividerTool	Integer	RW

Description

Effective division factor of the selected Multiplier/Divider Tool.

This feature is the **denominator** of the fraction defining the Effective Rate Conversion Ratio (Effective RCR) of the Multiplier/Divider Tool.

Effective RCR = Effective M/Effective D where:

- Effective M = **MultiplierDividerToolEffectiveMultiplicationFactor**
- Effective D = **MultiplierDividerToolEffectiveDivisionFactor**

3.17. QuadratureDecoderTool Category

QuadratureDecoderToolSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → QuadratureDecoderTool	Enumeration	RW

Short Description

Selects a Quadrature Decoder Tool.

Selected Features

- ["QuadratureDecoderToolSources" on the next page](#)
- ["QuadratureDecoderToolActivation" on page 241](#)
- ["QuadratureDecoderToolForwardDirection" on page 242](#)
- ["QuadratureDecoderToolOutputMode" on page 243](#)
- ["QuadratureDecoderToolPosition" on page 244](#)
- ["QuadratureDecoderToolDirection" on page 245](#)
- ["QuadratureDecoderToolPositionReset" on page 246](#)

Enumeration Values

- **QDC1**: Quadrature Decoder Tool 1.
- **QDC2**: Quadrature Decoder Tool 2.
- **QDC3**: Quadrature Decoder Tool 3.
- **QDC4**: Quadrature Decoder Tool 4.

QuadratureDecoderToolSources

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → QuadratureDecoderTool	Enumeration	RW

Description

Selects the pair of physical GPIO lines used as A/B inputs for the selected Quadrature Decoder Tool.

Enumeration Values

- **DIN11_DIN12**: Differential inputs 1 and 2 of Internal I/O connector 1.
- **DIN21_DIN22**: Differential inputs 1 and 2 of Internal I/O connector 2.
- **IIN11_IIN12**: Isolated inputs 1 and 2 of Internal I/O connector 1.
- **IIN13_IIN14**: Isolated inputs 3 and 4 of Internal I/O connector 1.
- **IIN21_IIN22**: Isolated inputs 1 and 2 of Internal I/O connector 2.
- **IIN23_IIN24**: Isolated inputs 3 and 4 of Internal I/O connector 2.
- **TTLIO11_TTLIO12**: TTL inputs 1 and 2 of Internal I/O connector 1.
- **TTLIO21_TTLIO22**: TTL inputs 1 and 2 of Internal I/O connector 2.
- **MIO1_MIO3**: Inputs 1 and 3 of I/O extension module.
- **MIO5_MIO7**: Inputs 5 and 7 of I/O extension module.
- **MIO9_MIO11**: Inputs 9 and 11 of I/O extension module.
- **MIO13_MIO15**: Inputs 13 and 15 of I/O extension module.
- **MIO17_MIO19**: Inputs 17 and 19 of I/O extension module.
- **MIO21_MIO23**: Inputs 21 and 23 of I/O extension module.
- **MIO25_MIO27**: Inputs 25 and 27 of I/O extension module.
- **MIO29_MIO31**: Inputs 29 and 31 of I/O extension module.
- **MIO33_MIO35**: Inputs 33 and 35 of I/O extension module.
- **MIO37_MIO39**: Inputs 37 and 39 of I/O extension module.

QuadratureDecoderToolActivation

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → QuadratureDecoderTool	Enumeration	RW

Description

Edge activating the output of the selected Quadrature Decoder Tool.



NOTE

The A output of the quadrature encoder device connects to the first physical GPIO line of the designated pair, e.g. DIN11.



NOTE

The B output of the quadrature encoder device connects to the second physical GPIO line of the designated pair, e.g. DIN12.

Enumeration Values

- **RisingEdgeA**: The event is activated on the rising edge of the A signal.
- **FallingEdgeA**: The event is activated on the falling edge of the A signal.
- **AllEdgesA**: The event is activated on both edges of the A signal.
- **AllEdgesAB**: The event is activated on both edges of all signals.
- **None**: The event is not activated.

QuadratureDecoderToolForwardDirection

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → QuadratureDecoderTool	Enumeration	RW

Short Description

Selects the A/B phase relationship corresponding to the forward direction.

Enumeration Values

- **A_Leads_B**: A leads B.
- **B_Leads_A**: B leads A.

QuadratureDecoderToolOutputMode

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → QuadratureDecoderTool	Enumeration	RW

Short Description

Selects the filtering mode of the backward motion compensator.

Enumeration Values

- **Unfiltered**: All the quadrature decoder events are delivered.
- **ForwardOnly**: Only the events corresponding to the forward motion are delivered.
- **FirstPassForwardOnly**: Only the events corresponding to the first pass in the forward direction are delivered.

QuadratureDecoderToolPosition

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → QuadratureDecoderTool	IntReg	RO

Register Port: InterfacePort

Description

Position counter value of the selected Quadrature Decoder Tool.

The position counter is a 32-bit up/down counter that increments by 1 for any event corresponding to the forward direction and decrements by 1 for the backward direction.

Unit: encoder events as defined by [QuadratureDecoderToolActivation](#).

Value range: from [-2,147,483,648](#) up to [2,147,483,647](#).

QuadratureDecoderToolDirection

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → QuadratureDecoderTool	Enumeration	RW

Short Description

Current direction of the selected Quadrature Decoder Tool.

Enumeration Values

- **Forward**: Forward.
- **Backward**: Backward.

QuadratureDecoderToolPositionReset

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → QuadratureDecoderTool	Command	Imposed: WO

Short Description

Reset Position counter of the selected Quadrature Decoder Tool.

3.18. DividerTool Category

DividerToolSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → DividerTool	Enumeration	RW

Short Description

Selects a Divider Tool.

Selected Features

- ["DividerToolSource" on the next page](#)
- ["DividerToolEnableControl" on page 251](#)
- ["DividerToolDivisionFactor" on page 252](#)
- ["DividerToolInitialOffset" on page 253](#)

Enumeration Values

- **DIV1**: Divider Tool 1.
- **DIV2**: Divider Tool 2.
- **DIV3**: Divider Tool 3.
- **DIV4**: Divider Tool 4.

DividerToolSource

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → DividerTool	Enumeration	RW

Short Description

I/O Toolbox event stream used as input for the selected Divider Tool.

Enumeration Values

- **NONE**: No event stream.
- **LIN1**: When an event occurs on Line Input Tool 1.
- **LIN2**: When an event occurs on Line Input Tool 2.
- **LIN3**: When an event occurs on Line Input Tool 3.
- **LIN4**: When an event occurs on Line Input Tool 4.
- **LIN5**: When an event occurs on Line Input Tool 5.
- **LIN6**: When an event occurs on Line Input Tool 6.
- **LIN7**: When an event occurs on Line Input Tool 7.
- **LIN8**: When an event occurs on Line Input Tool 8.
- **QDC1**: When an event occurs on Quadrature Decoder Tool 1.
- **QDC2**: When an event occurs on Quadrature Decoder Tool 2.
- **QDC3**: When an event occurs on Quadrature Decoder Tool 3.
- **QDC4**: When an event occurs on Quadrature Decoder Tool 4.
- **MDV1**: When an event occurs on Multiplier/Divider Tool 1.
- **MDV2**: When an event occurs on Multiplier/Divider Tool 2.
- **MDV3**: When an event occurs on Multiplier/Divider Tool 3.
- **MDV4**: When an event occurs on Multiplier/Divider Tool 4.
- **DIV1**: When an event occurs on Divider Tool 1.
- **DIV2**: When an event occurs on Divider Tool 2.
- **DIV3**: When an event occurs on Divider Tool 3.
- **DIV4**: When an event occurs on Divider Tool 4.

- **DEL1_1**: When an event occurs on Delay Tool 1 Output 1.
- **DEL1_2**: When an event occurs on Delay Tool 1 Output 2.
- **DEL2_1**: When an event occurs on Delay Tool 2 Output 1.
- **DEL2_2**: When an event occurs on Delay Tool 2 Output 2.
- **DEL3_1**: When an event occurs on Delay Tool 3 Output 1.
- **DEL3_2**: When an event occurs on Delay Tool 3 Output 2.
- **DEL4_1**: When an event occurs on Delay Tool 4 Output 1.
- **DEL4_2**: When an event occurs on Delay Tool 4 Output 2.
- **EIN1**: When an event occurs on Event Input Tool 1.
- **EIN2**: When an event occurs on Event Input Tool 2.
- **UserEvent1**: When an event occurs on User Event 1.
- **UserEvent2**: When an event occurs on User Event 2.
- **UserEvent3**: When an event occurs on User Event 3.
- **UserEvent4**: When an event occurs on User Event 4.
- **C2C1**: When an event occurs on C2C-Link Synchronization Tool 1.
- **C2C2**: When an event occurs on C2C-Link Synchronization Tool 2.
- **C2C3**: When an event occurs on C2C-Link Synchronization Tool 3.

DividerToolEnableControl

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → DividerTool	Enumeration	RW

Short Description

Output control of the selected Divider Tool.

Enumeration Values

- **Enable**: Output enabled.
- **Disable**: Output disabled.

DividerToolDivisionFactor

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → DividerTool	Integer	RW

Value Info

Minimum value: 1

Maximum value: 65535

Default value: 2

Description

Division factor of the selected Divider Tool.

This feature is the **denominator** of the fraction defining the Rate Conversion Ratio (RCR) of the Divider Tool.

$RCR = 1/D$ where:

- $D = \text{DividerToolDivisionFactor}$

DividerToolInitialOffset

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → DividerTool	Integer	RW

Value Info

Minimum value: 0

Maximum value: 65535

Description

Initial offset of the selected Divider Tool.

This feature defines the number of skipped input events after enabling the Divider tool.

3.19. DelayTool Category

DelayToolSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → DelayTool	Enumeration	RW

Short Description

Selects a Delay Tool.

Selected Features

- ["DelayToolSource1" on the next page](#)
- ["DelayToolSource2" on page 258](#)
- ["DelayToolClockSource" on page 260](#)
- ["DelayToolDelayValue" on page 261](#)

Enumeration Values

- **DEL1**: Delay Tool 1.
- **DEL2**: Delay Tool 2.
- **DEL3**: Delay Tool 3.
- **DEL4**: Delay Tool 4.

DelayToolSource1

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → DelayTool	Enumeration	RW

Short Description

I/O Toolbox event stream used as input 1 for the selected Delay Tool.

Enumeration Values

- **NONE**: No event stream.
- **LIN1**: When an event occurs on Line Input Tool 1.
- **LIN2**: When an event occurs on Line Input Tool 2.
- **LIN3**: When an event occurs on Line Input Tool 3.
- **LIN4**: When an event occurs on Line Input Tool 4.
- **LIN5**: When an event occurs on Line Input Tool 5.
- **LIN6**: When an event occurs on Line Input Tool 6.
- **LIN7**: When an event occurs on Line Input Tool 7.
- **LIN8**: When an event occurs on Line Input Tool 8.
- **QDC1**: When an event occurs on Quadrature Decoder Tool 1.
- **QDC2**: When an event occurs on Quadrature Decoder Tool 2.
- **QDC3**: When an event occurs on Quadrature Decoder Tool 3.
- **QDC4**: When an event occurs on Quadrature Decoder Tool 4.
- **MDV1**: When an event occurs on Multiplier/Divider Tool 1.
- **MDV2**: When an event occurs on Multiplier/Divider Tool 2.
- **MDV3**: When an event occurs on Multiplier/Divider Tool 3.
- **MDV4**: When an event occurs on Multiplier/Divider Tool 4.
- **DIV1**: When an event occurs on Divider Tool 1.
- **DIV2**: When an event occurs on Divider Tool 2.
- **DIV3**: When an event occurs on Divider Tool 3.
- **DIV4**: When an event occurs on Divider Tool 4.

- **DEL1_1**: When an event occurs on Delay Tool 1 Output 1.
- **DEL1_2**: When an event occurs on Delay Tool 1 Output 2.
- **DEL2_1**: When an event occurs on Delay Tool 2 Output 1.
- **DEL2_2**: When an event occurs on Delay Tool 2 Output 2.
- **DEL3_1**: When an event occurs on Delay Tool 3 Output 1.
- **DEL3_2**: When an event occurs on Delay Tool 3 Output 2.
- **DEL4_1**: When an event occurs on Delay Tool 4 Output 1.
- **DEL4_2**: When an event occurs on Delay Tool 4 Output 2.
- **EIN1**: When an event occurs on Event Input Tool 1.
- **EIN2**: When an event occurs on Event Input Tool 2.
- **UserEvent1**: When an event occurs on User Event 1.
- **UserEvent2**: When an event occurs on User Event 2.
- **UserEvent3**: When an event occurs on User Event 3.
- **UserEvent4**: When an event occurs on User Event 4.
- **C2C1**: When an event occurs on C2C-Link Synchronization Tool 1.
- **C2C2**: When an event occurs on C2C-Link Synchronization Tool 2.
- **C2C3**: When an event occurs on C2C-Link Synchronization Tool 3.

DelayToolSource2

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → DelayTool	Enumeration	RW

Short Description

I/O Toolbox event stream used as input 2 for the selected Delay Tool.

Enumeration Values

- **NONE**: No event stream.
- **LIN1**: When an event occurs on Line Input Tool 1.
- **LIN2**: When an event occurs on Line Input Tool 2.
- **LIN3**: When an event occurs on Line Input Tool 3.
- **LIN4**: When an event occurs on Line Input Tool 4.
- **LIN5**: When an event occurs on Line Input Tool 5.
- **LIN6**: When an event occurs on Line Input Tool 6.
- **LIN7**: When an event occurs on Line Input Tool 7.
- **LIN8**: When an event occurs on Line Input Tool 8.
- **QDC1**: When an event occurs on Quadrature Decoder Tool 1.
- **QDC2**: When an event occurs on Quadrature Decoder Tool 2.
- **QDC3**: When an event occurs on Quadrature Decoder Tool 3.
- **QDC4**: When an event occurs on Quadrature Decoder Tool 4.
- **MDV1**: When an event occurs on Multiplier/Divider Tool 1.
- **MDV2**: When an event occurs on Multiplier/Divider Tool 2.
- **MDV3**: When an event occurs on Multiplier/Divider Tool 3.
- **MDV4**: When an event occurs on Multiplier/Divider Tool 4.
- **DIV1**: When an event occurs on Divider Tool 1.
- **DIV2**: When an event occurs on Divider Tool 2.
- **DIV3**: When an event occurs on Divider Tool 3.
- **DIV4**: When an event occurs on Divider Tool 4.

- **DEL1_1**: When an event occurs on Delay Tool 1 Output 1.
- **DEL1_2**: When an event occurs on Delay Tool 1 Output 2.
- **DEL2_1**: When an event occurs on Delay Tool 2 Output 1.
- **DEL2_2**: When an event occurs on Delay Tool 2 Output 2.
- **DEL3_1**: When an event occurs on Delay Tool 3 Output 1.
- **DEL3_2**: When an event occurs on Delay Tool 3 Output 2.
- **DEL4_1**: When an event occurs on Delay Tool 4 Output 1.
- **DEL4_2**: When an event occurs on Delay Tool 4 Output 2.
- **EIN1**: When an event occurs on Event Input Tool 1.
- **EIN2**: When an event occurs on Event Input Tool 2.
- **UserEvent1**: When an event occurs on User Event 1.
- **UserEvent2**: When an event occurs on User Event 2.
- **UserEvent3**: When an event occurs on User Event 3.
- **UserEvent4**: When an event occurs on User Event 4.
- **C2C1**: When an event occurs on C2C-Link Synchronization Tool 1.
- **C2C2**: When an event occurs on C2C-Link Synchronization Tool 2.
- **C2C3**: When an event occurs on C2C-Link Synchronization Tool 3.

DelayToolClockSource

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → DelayTool	Enumeration	RW

Short Description

I/O Toolbox event stream used as clock.

Enumeration Values

- **NONE**: No event stream.
- **TIME8NS**: Clock input 8 nanoseconds time base.
- **TIME200NS**: Clock input 200 nanoseconds time base.
- **TIME1US**: Clock input 1 microsecond time base.
- **LIN1**: When an event occurs on Line Input Tool 1.
- **LIN2**: When an event occurs on Line Input Tool 2.
- **LIN3**: When an event occurs on Line Input Tool 3.
- **LIN4**: When an event occurs on Line Input Tool 4.
- **LIN5**: When an event occurs on Line Input Tool 5.
- **LIN6**: When an event occurs on Line Input Tool 6.
- **LIN7**: When an event occurs on Line Input Tool 7.
- **LIN8**: When an event occurs on Line Input Tool 8.
- **QDC1**: When an event occurs on Quadrature Decoder Tool 1.
- **QDC2**: When an event occurs on Quadrature Decoder Tool 2.
- **QDC3**: When an event occurs on Quadrature Decoder Tool 3.
- **QDC4**: When an event occurs on Quadrature Decoder Tool 4.

DelayToolDelayValue

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → DelayTool	Integer	RW

Value Info

Maximum value: 16777215

Description

Delay value of the selected Delay Tool.

Minimum value:

- 5 when DelayToolClockSource is TIME8NS
- 1 in other cases

Unit: time or event according to DelayToolClockSource.

3.20. EventInputTool Category

EventInputToolSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → EventInputTool	Enumeration	RW

Short Description

Selects an Event Input Tool.

Selected Features

- "EventInputToolSource" on the next page
- "EventInputToolActivation" on page 265

Enumeration Values

- **EIN1**: Event Input Tool 1.
- **EIN2**: Event Input Tool 2.

EventInputToolSource

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → EventInputTool	Enumeration	RW

Short Description

CoaXPress connector used as input for the selected Event Input Tool.

Enumeration Values

- **A:** CoaXPress physical host connection A..

EventInputToolActivation

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → EventInputTool	Enumeration	RW

Short Description

Signal activating the output of the selected Event Input Tool.

Enumeration Values

- **StartOfScan**: Receipt of start of scan signal.
- **EndOfScan**: Receipt of end of scan signal.

3.21. C2CLinkSynchronizationTool Category

C2CLinkSynchronizationToolSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → C2CLinkSynchronizationTool	Enumeration	RW

Short Description

Selects a C2C-Link Synchronization Tool.

Selected Features

- ["C2CLinkSynchronizationToolSource" on the next page](#)
- ["C2CLinkSynchronizationToolClock" on page 270](#)
- ["C2CLinkSynchronizationToolDiscardPendingEvent" on page 271](#)

Enumeration Values

- **C2C1**: C2C-Link Synchronization Tool 1.
- **C2C2**: C2C-Link Synchronization Tool 2.
- **C2C3**: C2C-Link Synchronization Tool 3.

C2CLinkSynchronizationToolSource

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → C2CLinkSynchronizationTool	Enumeration	RW

Short Description

I/O Toolbox event stream used as input for the selected C2C-Link Synchronization Tool.

Enumeration Values

- **CycleTrigger**: C2C-Link cycle trigger.
- **NONE**: No event stream.
- **LIN1**: When an event occurs on Line Input Tool 1.
- **LIN2**: When an event occurs on Line Input Tool 2.
- **LIN3**: When an event occurs on Line Input Tool 3.
- **LIN4**: When an event occurs on Line Input Tool 4.
- **LIN5**: When an event occurs on Line Input Tool 5.
- **LIN6**: When an event occurs on Line Input Tool 6.
- **LIN7**: When an event occurs on Line Input Tool 7.
- **LIN8**: When an event occurs on Line Input Tool 8.
- **QDC1**: When an event occurs on Quadrature Decoder Tool 1.
- **QDC2**: When an event occurs on Quadrature Decoder Tool 2.
- **QDC3**: When an event occurs on Quadrature Decoder Tool 3.
- **QDC4**: When an event occurs on Quadrature Decoder Tool 4.
- **MDV1**: When an event occurs on Multiplier/Divider Tool 1.
- **MDV2**: When an event occurs on Multiplier/Divider Tool 2.
- **MDV3**: When an event occurs on Multiplier/Divider Tool 3.
- **MDV4**: When an event occurs on Multiplier/Divider Tool 4.
- **DIV1**: When an event occurs on Divider Tool 1.
- **DIV2**: When an event occurs on Divider Tool 2.
- **DIV3**: When an event occurs on Divider Tool 3.

- **DIV4**: When an event occurs on Divider Tool 4.
- **DEL1_1**: When an event occurs on Delay Tool 1 Output 1.
- **DEL1_2**: When an event occurs on Delay Tool 1 Output 2.
- **DEL2_1**: When an event occurs on Delay Tool 2 Output 1.
- **DEL2_2**: When an event occurs on Delay Tool 2 Output 2.
- **DEL3_1**: When an event occurs on Delay Tool 3 Output 1.
- **DEL3_2**: When an event occurs on Delay Tool 3 Output 2.
- **DEL4_1**: When an event occurs on Delay Tool 4 Output 1.
- **DEL4_2**: When an event occurs on Delay Tool 4 Output 2.
- **EIN1**: When an event occurs on Event Input Tool 1.
- **EIN2**: When an event occurs on Event Input Tool 2.
- **UserEvent1**: When an event occurs on User Event 1.
- **UserEvent2**: When an event occurs on User Event 2.
- **UserEvent3**: When an event occurs on User Event 3.
- **UserEvent4**: When an event occurs on User Event 4.
- **C2C1**: When an event occurs on C2C-Link Synchronization Tool 1.
- **C2C2**: When an event occurs on C2C-Link Synchronization Tool 2.
- **C2C3**: When an event occurs on C2C-Link Synchronization Tool 3.

C2CLinkSynchronizationToolClock

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → C2CLinkSynchronizationTool	Enumeration	RW

Short Description

Event used as clock for the selected C2C-Link Synchronization Tool.

Enumeration Values

- **Immediate**: Event is forwarded on the selected C2C-Link Synchronization Tool immediately.
- **CycleTrigger**: Event is forwarded on the selected C2C-Link Synchronization Tool upon the following C2C-Link cycle trigger event.
- **StartOfCameraReadout**: Event is forwarded on the selected C2C-Link Synchronization Tool upon the following start of camera readout event.

C2CLinkSynchronizationToolDiscardPendingEvent

Feature Info

Module	Category Path	Type	Access
Interface	Root → IOToolbox → C2CLinkSynchronizationTool	Command	Imposed: WO

Short Description

Discard an event that has been received but that has not been forwarded yet on the selected C2C-Link Synchronization Tool. This can be useful when C2CLinkSynchronizationToolClock is not set to Immediate.

3.22. EventControl Category

EventSelector

Feature Info

Module	Category Path	Type	Access
Interface	Root → EventControl	Enumeration	RW

Short Description

Select an event.

Selected Features

- ["EventNotification" on page 277](#)
- ["EventNotificationContext1" on page 278](#)
- ["EventNotificationContext2" on page 282](#)
- ["EventNotificationContext3" on page 286](#)
- ["EventCount" on page 290](#)
- ["EventCountReset" on page 291](#)

Enumeration Values

- **LIN1**: Line Input Tool 1.
- **LIN2**: Line Input Tool 2.
- **LIN3**: Line Input Tool 3.
- **LIN4**: Line Input Tool 4.
- **LIN5**: Line Input Tool 5.
- **LIN6**: Line Input Tool 6.
- **LIN7**: Line Input Tool 7.
- **LIN8**: Line Input Tool 8.
- **QDC1**: Quadrature Decoder Tool 1.
- **QDC1Dir**: Quadrature Decoder Tool 1 Changed Direction.
- **QDC2**: Quadrature Decoder Tool 2.
- **QDC2Dir**: Quadrature Decoder Tool 2 Changed Direction.

- **QDC3**: Quadrature Decoder Tool 3.
- **QDC3Dir**: Quadrature Decoder Tool 3 Changed Direction.
- **QDC4**: Quadrature Decoder Tool 4.
- **QDC4Dir**: Quadrature Decoder Tool 4 Changed Direction.
- **DIV1**: Divider Tool 1.
- **DIV2**: Divider Tool 2.
- **DIV3**: Divider Tool 3.
- **DIV4**: Divider Tool 4.
- **MDV1**: Multiplier/Divider Tool 1.
- **MDV2**: Multiplier/Divider Tool 2.
- **MDV3**: Multiplier/Divider Tool 3.
- **MDV4**: Multiplier/Divider Tool 4.
- **DEL11**: Delay Tool 1 Output 1.
- **DEL12**: Delay Tool 1 Output 2.
- **DEL21**: Delay Tool 2 Output 1.
- **DEL22**: Delay Tool 2 Output 2.
- **DEL31**: Delay Tool 3 Output 1.
- **DEL32**: Delay Tool 3 Output 2.
- **DEL41**: Delay Tool 4 Output 1.
- **DEL42**: Delay Tool 4 Output 2.
- **UserEvent1**: User Event 1.
- **UserEvent2**: User Event 2.
- **UserEvent3**: User Event 3.
- **UserEvent4**: User Event 4.
- **C2C1**: C2C-Link Synchronization Tool 1.
- **C2C2**: C2C-Link Synchronization Tool 2.
- **C2C3**: C2C-Link Synchronization Tool 3.
- **EIN1**: Event Input Tool 1.
- **EIN2**: Event Input Tool 2.
- **CrcErrorCxpA**: Detected CRC error on CXP connector A.
- **CrcErrorCxpB**: Detected CRC error on CXP connector B.
- **CrcErrorCxpC**: Detected CRC error on CXP connector C.
- **CrcErrorCxpD**: Detected CRC error on CXP connector D.

- **CrcErrorCxpE**: Detected CRC error on CXP connector E.
- **CrcErrorCxpF**: Detected CRC error on CXP connector F.
- **CrcErrorCxpG**: Detected CRC error on CXP connector G.
- **CrcErrorCxpH**: Detected CRC error on CXP connector H.
- **ConnectionDetectedCxpA**: Low level connection lock achieved on CXP connector A.
- **ConnectionDetectedCxpB**: Low level connection lock achieved on CXP connector B.
- **ConnectionDetectedCxpC**: Low level connection lock achieved on CXP connector C.
- **ConnectionDetectedCxpD**: Low level connection lock achieved on CXP connector D.
- **ConnectionDetectedCxpE**: Low level connection lock achieved on CXP connector E.
- **ConnectionDetectedCxpF**: Low level connection lock achieved on CXP connector F.
- **ConnectionDetectedCxpG**: Low level connection lock achieved on CXP connector G.
- **ConnectionDetectedCxpH**: Low level connection lock achieved on CXP connector H.
- **ConnectionUndetectedCxpA**: Low level connection lock lost on CXP connector A.
- **ConnectionUndetectedCxpB**: Low level connection lock lost on CXP connector B.
- **ConnectionUndetectedCxpC**: Low level connection lock lost on CXP connector C.
- **ConnectionUndetectedCxpD**: Low level connection lock lost on CXP connector D.
- **ConnectionUndetectedCxpE**: Low level connection lock lost on CXP connector E.
- **ConnectionUndetectedCxpF**: Low level connection lock lost on CXP connector F.
- **ConnectionUndetectedCxpG**: Low level connection lock lost on CXP connector G.
- **ConnectionUndetectedCxpH**: Low level connection lock lost on CXP connector H.
- **Device0Ready**: CoaXPress link configuration done for Device 0.
- **Device1Ready**: CoaXPress link configuration done for Device 1.
- **Device2Ready**: CoaXPress link configuration done for Device 2.
- **Device3Ready**: CoaXPress link configuration done for Device 3.
- **Device4Ready**: CoaXPress link configuration done for Device 4.
- **Device5Ready**: CoaXPress link configuration done for Device 5.
- **Device6Ready**: CoaXPress link configuration done for Device 6.
- **Device7Ready**: CoaXPress link configuration done for Device 7.
- **Device0Lost**: Device 0 disconnected.
- **Device1Lost**: Device 1 disconnected.
- **Device2Lost**: Device 2 disconnected.
- **Device3Lost**: Device 3 disconnected.
- **Device4Lost**: Device 4 disconnected.

- **Device5Lost:** Device 5 disconnected.
- **Device6Lost:** Device 6 disconnected.
- **Device7Lost:** Device 7 disconnected.

EventNotification

Feature Info

Module	Category Path	Type	Access
Interface	Root → EventControl	Boolean	RW

Short Description

Activate or deactivate the notification to the host application of the occurrence of the selected event.

EventNotificationContext1

Feature Info

Module	Category Path	Type	Access
Interface	Root → EventControl	Enumeration	RW

Short Description

Select context information reported in EVENT_DATA_CUSTOM_CONTEXT_1.

Enumeration Values

- **EventSpecific**: Event-specific context information.
- **LineStatusAll**: Low 32-bit part of LineStatusAll.
- **LineStatusAllHi**: High 32-bit part of LineStatusAll.
- **QDC1Position**: Position of Quadrature Decoder Tool 1.
- **QDC2Position**: Position of Quadrature Decoder Tool 2.
- **QDC3Position**: Position of Quadrature Decoder Tool 3.
- **QDC4Position**: Position of Quadrature Decoder Tool 4.
- **LIN1EventCount**: Number of LIN1 events.
- **LIN2EventCount**: Number of LIN2 events.
- **LIN3EventCount**: Number of LIN3 events.
- **LIN4EventCount**: Number of LIN4 events.
- **LIN5EventCount**: Number of LIN5 events.
- **LIN6EventCount**: Number of LIN6 events.
- **LIN7EventCount**: Number of LIN7 events.
- **LIN8EventCount**: Number of LIN8 events.
- **QDC1EventCount**: Number of QDC1 events.
- **QDC1DirEventCount**: Number of QDC1Dir events.
- **QDC2EventCount**: Number of QDC2 events.
- **QDC2DirEventCount**: Number of QDC2Dir events.
- **QDC3EventCount**: Number of QDC3 events.
- **QDC3DirEventCount**: Number of QDC3Dir events.

- **QDC4EventCount**: Number of QDC4 events.
- **QDC4DirEventCount**: Number of QDC4Dir events.
- **DIV1EventCount**: Number of DIV1 events.
- **DIV2EventCount**: Number of DIV2 events.
- **DIV3EventCount**: Number of DIV3 events.
- **DIV4EventCount**: Number of DIV4 events.
- **MDV1EventCount**: Number of MDV1 events.
- **MDV2EventCount**: Number of MDV2 events.
- **MDV3EventCount**: Number of MDV3 events.
- **MDV4EventCount**: Number of MDV4 events.
- **DEL11EventCount**: Number of DEL11 events.
- **DEL12EventCount**: Number of DEL12 events.
- **DEL21EventCount**: Number of DEL21 events.
- **DEL22EventCount**: Number of DEL22 events.
- **DEL31EventCount**: Number of DEL31 events.
- **DEL32EventCount**: Number of DEL32 events.
- **DEL41EventCount**: Number of DEL41 events.
- **DEL42EventCount**: Number of DEL42 events.
- **UserEvent1EventCount**: Number of UserEvent1 events.
- **UserEvent2EventCount**: Number of UserEvent2 events.
- **UserEvent3EventCount**: Number of UserEvent3 events.
- **UserEvent4EventCount**: Number of UserEvent4 events.
- **C2C1EventCount**: Number of C2C1 events.
- **C2C2EventCount**: Number of C2C2 events.
- **C2C3EventCount**: Number of C2C3 events.
- **EIN1EventCount**: Number of EIN1 events.
- **EIN2EventCount**: Number of EIN2 events.
- **CrcErrorCxpAEventCount**: Number of CrcErrorCxpA events.
- **CrcErrorCxpBEventCount**: Number of CrcErrorCxpB events.
- **CrcErrorCxpCEventCount**: Number of CrcErrorCxpC events.
- **CrcErrorCxpDEventCount**: Number of CrcErrorCxpD events.
- **CrcErrorCxpEEventCount**: Number of CrcErrorCxpE events.
- **CrcErrorCxpFEventCount**: Number of CrcErrorCxpF events.

- **CrcErrorCxpGEventCount**: Number of CrcErrorCxpG events.
- **CrcErrorCxpHEventCount**: Number of CrcErrorCxpH events.
- **ConnectionDetectedCxpAEventCount**: Number of ConnectionDetectedCxpA events.
- **ConnectionDetectedCxpBEventCount**: Number of ConnectionDetectedCxpB events.
- **ConnectionDetectedCxpCEventCount**: Number of ConnectionDetectedCxpC events.
- **ConnectionDetectedCxpDEventCount**: Number of ConnectionDetectedCxpD events.
- **ConnectionDetectedCxpEEventCount**: Number of ConnectionDetectedCxpE events.
- **ConnectionDetectedCxpFEventCount**: Number of ConnectionDetectedCxpF events.
- **ConnectionDetectedCxpGEventCount**: Number of ConnectionDetectedCxpG events.
- **ConnectionDetectedCxpHEventCount**: Number of ConnectionDetectedCxpH events.
- **ConnectionUndetectedCxpAEventCount**: Number of ConnectionUndetectedCxpA events.
- **ConnectionUndetectedCxpBEventCount**: Number of ConnectionUndetectedCxpB events.
- **ConnectionUndetectedCxpCEventCount**: Number of ConnectionUndetectedCxpC events.
- **ConnectionUndetectedCxpDEventCount**: Number of ConnectionUndetectedCxpD events.
- **ConnectionUndetectedCxpEEventCount**: Number of ConnectionUndetectedCxpE events.
- **ConnectionUndetectedCxpFEventCount**: Number of ConnectionUndetectedCxpF events.
- **ConnectionUndetectedCxpGEventCount**: Number of ConnectionUndetectedCxpG events.
- **ConnectionUndetectedCxpHEventCount**: Number of ConnectionUndetectedCxpH events.
- **Device0ReadyEventCount**: Number of Device0Ready events.
- **Device1ReadyEventCount**: Number of Device1Ready events.
- **Device2ReadyEventCount**: Number of Device2Ready events.
- **Device3ReadyEventCount**: Number of Device3Ready events.
- **Device4ReadyEventCount**: Number of Device4Ready events.
- **Device5ReadyEventCount**: Number of Device5Ready events.
- **Device6ReadyEventCount**: Number of Device6Ready events.
- **Device7ReadyEventCount**: Number of Device7Ready events.
- **Device0LostEventCount**: Number of Device0Lost events.
- **Device1LostEventCount**: Number of Device1Lost events.
- **Device2LostEventCount**: Number of Device2Lost events.
- **Device3LostEventCount**: Number of Device3Lost events.
- **Device4LostEventCount**: Number of Device4Lost events.
- **Device5LostEventCount**: Number of Device5Lost events.
- **Device6LostEventCount**: Number of Device6Lost events.

- **Device7LostEventCount**: Number of Device7Lost events.

EventNotificationContext2

Feature Info

Module	Category Path	Type	Access
Interface	Root → EventControl	Enumeration	RW

Short Description

Select context information reported in EVENT_DATA_CUSTOM_CONTEXT_2.

Enumeration Values

- **EventSpecific**: Event-specific context information.
- **LineStatusAll**: Low 32-bit part of LineStatusAll.
- **LineStatusAllHi**: High 32-bit part of LineStatusAll.
- **QDC1Position**: Position of Quadrature Decoder Tool 1.
- **QDC2Position**: Position of Quadrature Decoder Tool 2.
- **QDC3Position**: Position of Quadrature Decoder Tool 3.
- **QDC4Position**: Position of Quadrature Decoder Tool 4.
- **LIN1EventCount**: Number of LIN1 events.
- **LIN2EventCount**: Number of LIN2 events.
- **LIN3EventCount**: Number of LIN3 events.
- **LIN4EventCount**: Number of LIN4 events.
- **LIN5EventCount**: Number of LIN5 events.
- **LIN6EventCount**: Number of LIN6 events.
- **LIN7EventCount**: Number of LIN7 events.
- **LIN8EventCount**: Number of LIN8 events.
- **QDC1EventCount**: Number of QDC1 events.
- **QDC1DirEventCount**: Number of QDC1Dir events.
- **QDC2EventCount**: Number of QDC2 events.
- **QDC2DirEventCount**: Number of QDC2Dir events.
- **QDC3EventCount**: Number of QDC3 events.
- **QDC3DirEventCount**: Number of QDC3Dir events.

- **QDC4EventCount**: Number of QDC4 events.
- **QDC4DirEventCount**: Number of QDC4Dir events.
- **DIV1EventCount**: Number of DIV1 events.
- **DIV2EventCount**: Number of DIV2 events.
- **DIV3EventCount**: Number of DIV3 events.
- **DIV4EventCount**: Number of DIV4 events.
- **MDV1EventCount**: Number of MDV1 events.
- **MDV2EventCount**: Number of MDV2 events.
- **MDV3EventCount**: Number of MDV3 events.
- **MDV4EventCount**: Number of MDV4 events.
- **DEL11EventCount**: Number of DEL11 events.
- **DEL12EventCount**: Number of DEL12 events.
- **DEL21EventCount**: Number of DEL21 events.
- **DEL22EventCount**: Number of DEL22 events.
- **DEL31EventCount**: Number of DEL31 events.
- **DEL32EventCount**: Number of DEL32 events.
- **DEL41EventCount**: Number of DEL41 events.
- **DEL42EventCount**: Number of DEL42 events.
- **UserEvent1EventCount**: Number of UserEvent1 events.
- **UserEvent2EventCount**: Number of UserEvent2 events.
- **UserEvent3EventCount**: Number of UserEvent3 events.
- **UserEvent4EventCount**: Number of UserEvent4 events.
- **C2C1EventCount**: Number of C2C1 events.
- **C2C2EventCount**: Number of C2C2 events.
- **C2C3EventCount**: Number of C2C3 events.
- **EIN1EventCount**: Number of EIN1 events.
- **EIN2EventCount**: Number of EIN2 events.
- **CrcErrorCxpAEventCount**: Number of CrcErrorCxpA events.
- **CrcErrorCxpBEventCount**: Number of CrcErrorCxpB events.
- **CrcErrorCxpCEventCount**: Number of CrcErrorCxpC events.
- **CrcErrorCxpDEventCount**: Number of CrcErrorCxpD events.
- **CrcErrorCxpEEventCount**: Number of CrcErrorCxpE events.
- **CrcErrorCxpFEventCount**: Number of CrcErrorCxpF events.

- **CrcErrorCxpGEventCount**: Number of CrcErrorCxpG events.
- **CrcErrorCxpHEventCount**: Number of CrcErrorCxpH events.
- **ConnectionDetectedCxpAEventCount**: Number of ConnectionDetectedCxpA events.
- **ConnectionDetectedCxpBEventCount**: Number of ConnectionDetectedCxpB events.
- **ConnectionDetectedCxpCEventCount**: Number of ConnectionDetectedCxpC events.
- **ConnectionDetectedCxpDEventCount**: Number of ConnectionDetectedCxpD events.
- **ConnectionDetectedCxpEEventCount**: Number of ConnectionDetectedCxpE events.
- **ConnectionDetectedCxpFEventCount**: Number of ConnectionDetectedCxpF events.
- **ConnectionDetectedCxpGEventCount**: Number of ConnectionDetectedCxpG events.
- **ConnectionDetectedCxpHEventCount**: Number of ConnectionDetectedCxpH events.
- **ConnectionUndetectedCxpAEventCount**: Number of ConnectionUndetectedCxpA events.
- **ConnectionUndetectedCxpBEventCount**: Number of ConnectionUndetectedCxpB events.
- **ConnectionUndetectedCxpCEventCount**: Number of ConnectionUndetectedCxpC events.
- **ConnectionUndetectedCxpDEventCount**: Number of ConnectionUndetectedCxpD events.
- **ConnectionUndetectedCxpEEventCount**: Number of ConnectionUndetectedCxpE events.
- **ConnectionUndetectedCxpFEventCount**: Number of ConnectionUndetectedCxpF events.
- **ConnectionUndetectedCxpGEventCount**: Number of ConnectionUndetectedCxpG events.
- **ConnectionUndetectedCxpHEventCount**: Number of ConnectionUndetectedCxpH events.
- **Device0ReadyEventCount**: Number of Device0Ready events.
- **Device1ReadyEventCount**: Number of Device1Ready events.
- **Device2ReadyEventCount**: Number of Device2Ready events.
- **Device3ReadyEventCount**: Number of Device3Ready events.
- **Device4ReadyEventCount**: Number of Device4Ready events.
- **Device5ReadyEventCount**: Number of Device5Ready events.
- **Device6ReadyEventCount**: Number of Device6Ready events.
- **Device7ReadyEventCount**: Number of Device7Ready events.
- **Device0LostEventCount**: Number of Device0Lost events.
- **Device1LostEventCount**: Number of Device1Lost events.
- **Device2LostEventCount**: Number of Device2Lost events.
- **Device3LostEventCount**: Number of Device3Lost events.
- **Device4LostEventCount**: Number of Device4Lost events.
- **Device5LostEventCount**: Number of Device5Lost events.
- **Device6LostEventCount**: Number of Device6Lost events.

- **Device7LostEventCount**: Number of Device7Lost events.

EventNotificationContext3

Feature Info

Module	Category Path	Type	Access
Interface	Root → EventControl	Enumeration	RW

Short Description

Select context information reported in EVENT_DATA_CUSTOM_CONTEXT_3.

Enumeration Values

- **EventSpecific**: Event-specific context information.
- **LineStatusAll**: Low 32-bit part of LineStatusAll.
- **LineStatusAllHi**: High 32-bit part of LineStatusAll.
- **QDC1Position**: Position of Quadrature Decoder Tool 1.
- **QDC2Position**: Position of Quadrature Decoder Tool 2.
- **QDC3Position**: Position of Quadrature Decoder Tool 3.
- **QDC4Position**: Position of Quadrature Decoder Tool 4.
- **LIN1EventCount**: Number of LIN1 events.
- **LIN2EventCount**: Number of LIN2 events.
- **LIN3EventCount**: Number of LIN3 events.
- **LIN4EventCount**: Number of LIN4 events.
- **LIN5EventCount**: Number of LIN5 events.
- **LIN6EventCount**: Number of LIN6 events.
- **LIN7EventCount**: Number of LIN7 events.
- **LIN8EventCount**: Number of LIN8 events.
- **QDC1EventCount**: Number of QDC1 events.
- **QDC1DirEventCount**: Number of QDC1Dir events.
- **QDC2EventCount**: Number of QDC2 events.
- **QDC2DirEventCount**: Number of QDC2Dir events.
- **QDC3EventCount**: Number of QDC3 events.
- **QDC3DirEventCount**: Number of QDC3Dir events.

- **QDC4EventCount**: Number of QDC4 events.
- **QDC4DirEventCount**: Number of QDC4Dir events.
- **DIV1EventCount**: Number of DIV1 events.
- **DIV2EventCount**: Number of DIV2 events.
- **DIV3EventCount**: Number of DIV3 events.
- **DIV4EventCount**: Number of DIV4 events.
- **MDV1EventCount**: Number of MDV1 events.
- **MDV2EventCount**: Number of MDV2 events.
- **MDV3EventCount**: Number of MDV3 events.
- **MDV4EventCount**: Number of MDV4 events.
- **DEL11EventCount**: Number of DEL11 events.
- **DEL12EventCount**: Number of DEL12 events.
- **DEL21EventCount**: Number of DEL21 events.
- **DEL22EventCount**: Number of DEL22 events.
- **DEL31EventCount**: Number of DEL31 events.
- **DEL32EventCount**: Number of DEL32 events.
- **DEL41EventCount**: Number of DEL41 events.
- **DEL42EventCount**: Number of DEL42 events.
- **UserEvent1EventCount**: Number of UserEvent1 events.
- **UserEvent2EventCount**: Number of UserEvent2 events.
- **UserEvent3EventCount**: Number of UserEvent3 events.
- **UserEvent4EventCount**: Number of UserEvent4 events.
- **C2C1EventCount**: Number of C2C1 events.
- **C2C2EventCount**: Number of C2C2 events.
- **C2C3EventCount**: Number of C2C3 events.
- **EIN1EventCount**: Number of EIN1 events.
- **EIN2EventCount**: Number of EIN2 events.
- **CrcErrorCxpAEventCount**: Number of CrcErrorCxpA events.
- **CrcErrorCxpBEventCount**: Number of CrcErrorCxpB events.
- **CrcErrorCxpCEventCount**: Number of CrcErrorCxpC events.
- **CrcErrorCxpDEventCount**: Number of CrcErrorCxpD events.
- **CrcErrorCxpEEventCount**: Number of CrcErrorCxpE events.
- **CrcErrorCxpFEventCount**: Number of CrcErrorCxpF events.

- **CrcErrorCxpGEventCount**: Number of CrcErrorCxpG events.
- **CrcErrorCxpHEventCount**: Number of CrcErrorCxpH events.
- **ConnectionDetectedCxpAEventCount**: Number of ConnectionDetectedCxpA events.
- **ConnectionDetectedCxpBEventCount**: Number of ConnectionDetectedCxpB events.
- **ConnectionDetectedCxpCEventCount**: Number of ConnectionDetectedCxpC events.
- **ConnectionDetectedCxpDEventCount**: Number of ConnectionDetectedCxpD events.
- **ConnectionDetectedCxpEEventCount**: Number of ConnectionDetectedCxpE events.
- **ConnectionDetectedCxpFEventCount**: Number of ConnectionDetectedCxpF events.
- **ConnectionDetectedCxpGEventCount**: Number of ConnectionDetectedCxpG events.
- **ConnectionDetectedCxpHEventCount**: Number of ConnectionDetectedCxpH events.
- **ConnectionUndetectedCxpAEventCount**: Number of ConnectionUndetectedCxpA events.
- **ConnectionUndetectedCxpBEventCount**: Number of ConnectionUndetectedCxpB events.
- **ConnectionUndetectedCxpCEventCount**: Number of ConnectionUndetectedCxpC events.
- **ConnectionUndetectedCxpDEventCount**: Number of ConnectionUndetectedCxpD events.
- **ConnectionUndetectedCxpEEventCount**: Number of ConnectionUndetectedCxpE events.
- **ConnectionUndetectedCxpFEventCount**: Number of ConnectionUndetectedCxpF events.
- **ConnectionUndetectedCxpGEventCount**: Number of ConnectionUndetectedCxpG events.
- **ConnectionUndetectedCxpHEventCount**: Number of ConnectionUndetectedCxpH events.
- **Device0ReadyEventCount**: Number of Device0Ready events.
- **Device1ReadyEventCount**: Number of Device1Ready events.
- **Device2ReadyEventCount**: Number of Device2Ready events.
- **Device3ReadyEventCount**: Number of Device3Ready events.
- **Device4ReadyEventCount**: Number of Device4Ready events.
- **Device5ReadyEventCount**: Number of Device5Ready events.
- **Device6ReadyEventCount**: Number of Device6Ready events.
- **Device7ReadyEventCount**: Number of Device7Ready events.
- **Device0LostEventCount**: Number of Device0Lost events.
- **Device1LostEventCount**: Number of Device1Lost events.
- **Device2LostEventCount**: Number of Device2Lost events.
- **Device3LostEventCount**: Number of Device3Lost events.
- **Device4LostEventCount**: Number of Device4Lost events.
- **Device5LostEventCount**: Number of Device5Lost events.
- **Device6LostEventCount**: Number of Device6Lost events.

- **Device7LostEventCount**: Number of Device7Lost events.

EventCount

Feature Info

Module	Category Path	Type	Access
Interface	Root → EventControl	IntReg	RO

Register Port: InterfacePort

Short Description

Number of occurrences of the selected event (32-bit counter).

EventCountReset

Feature Info

Module	Category Path	Type	Access
Interface	Root → EventControl	Command	Imposed: WO

Short Description

Reset the selected EventCount.

EventNotificationAll

Feature Info

Module	Category Path	Type	Access
Interface	Root → EventControl	Boolean	Imposed: WO

Short Description

Activate or deactivate the notification of all events.

EventCountResetAll

Feature Info

Module	Category Path	Type	Access
Interface	Root → EventControl	Command	Imposed: WO

Short Description

Reset all EventCount.

3.23. OemSafetyKey Category

OemSafetyKeyVerification

Feature Info

Module	Category Path	Type	Access
Interface	Root → OemSafetyKey	Enumeration	RW

Description

Defines which key can be compared with the programmed OEM safety key.

Acts as a selector for `CheckOemSafetyKey`.

Recommended value: `EncryptedKey`.

Default value: `ProgrammingKeyOrEncryptedKey`.

Selected Features

- ["CheckOemSafetyKey" on the next page](#)

Enumeration Values

- `ProgrammingKey`: Only the key written to `ProgramOemSafetyKey` can be used to verify the OEM safety key.
- `EncryptedKey`: Only the key read from `EncryptedOemSafetyKey` can be used to verify the OEM safety key (recommended).
- `ProgrammingKeyOrEncryptedKey`: Both the key written to `ProgramOemSafetyKey` and the key read from `EncryptedOemSafetyKey` can be used to verify the OEM safety key.

CheckOemSafetyKey

Feature Info

Module	Category Path	Type	Access
Interface	Root → OemSafetyKey	String	Imposed: WO

Description

Write-only string to use for comparing a key (the key written to **ProgramOemSafetyKey** or the key read from **EncryptedOemSafetyKey**) and the programmed OEM safety key.

ProgramOemSafetyKey

Feature Info

Module	Category Path	Type	Access
Interface	Root → OemSafetyKey	String	Imposed: WO

Short Description

Write-only string to use for programming the non-volatile OEM safety key.

EncryptedOemSafetyKey

Feature Info

Module	Category Path	Type	Access
Interface	Root → OemSafetyKey	String	Imposed: RO

Description

Read-only string that contains the encrypted version of the OEM safety key just programmed with **ProgramOemSafetyKey**.

MaximumOemKeyLength

Feature Info

Module	Category Path	Type	Access
Interface	Root → OemSafetyKey	Integer	RW

Value Info

Minimum value: 40

Maximum value: 2147483647

Description

The length of ProgramOemSafetyKey and CheckOemSafetyKey is limited by MaximumOemKeyLength.

Default value: 4096.

3.24. CustomLogic Category

CustomLogicControlAddress

Feature Info

Module	Category Path	Type	Access
Interface	Root → CustomLogic	Integer	RW

Value Info

Minimum value: 0

Maximum value: 65535

Short Description

Custom Logic Control Address.

Selected Features

- "CustomLogicControlData" on the next page

CustomLogicControlData

Feature Info

Module	Category Path	Type	Access
Interface	Root → CustomLogic	Integer	RW

Value Info

Minimum value: 0

Maximum value: 4294967295

Short Description

Custom Logic Control Data.

3.25. OnboardMemory Category

OnboardMemoryBase

Feature Info

Module	Category Path	Type	Access
Interface	Root → OnboardMemory	Integer	Imposed: RO

Short Description

Base address of the onboard memory.

OnboardMemorySize

Feature Info

Module	Category Path	Type	Access
Interface	Root → OnboardMemory	IntReg	RO

Register Port: InterfacePort

Short Description

Available size in bytes of the onboard memory.

4. Device Module

Categorized features list of Device module version 12.6.2.74

4.1. Root Category

DeviceInformation

Feature Info

Module	Category Path	Type	Access
Device	Root	Category	RW

Category Members

See also: "DeviceInformation Category " on page 314

StreamEnumeration

Feature Info

Module	Category Path	Type	Access
Device	Root	Category	RW

Category Members

See also: "StreamEnumeration Category " on page 320

CameraAndIlluminationControl

Feature Info

Module	Category Path	Type	Access
Device	Root	Category	RW

Description

Set of features related to the Camera and Illumination Controller (CIC).

Category Members

See also: "CameraAndIlluminationControl Category " on page 335

CoaXPress

Feature Info

Module	Category Path	Type	Access
Device	Root	Category	RW

Category Members

See also: "CoaXPress Category " on page 323

EventControl

Feature Info

Module	Category Path	Type	Access
Device	Root	Category	RW

Category Members

See also: "EventControl Category " on page 374

Errors

Feature Info

Module	Category Path	Type	Access
Device	Root	Category	RW

Category Members

See also: "Errors Category " on page 391

4.2. DeviceInformation Category

DeviceID

Feature Info

Module	Category Path	Type	Access
Device	Root → DeviceInformation	String	Imposed: RO

Short Description

Interface wide unique identifier of this device.

DeviceVendorName

Feature Info

Module	Category Path	Type	Access
Device	Root → DeviceInformation	String	Imposed: RO

Short Description

Name of the device vendor.

DeviceModelName

Feature Info

Module	Category Path	Type	Access
Device	Root → DeviceInformation	String	Imposed: RO

Short Description

Name of the device model.

DeviceAccessStatus

Feature Info

Module	Category Path	Type	Access
Device	Root → DeviceInformation	Enumeration	Imposed: RO

Short Description

Gives the device's access status at the moment of the last execution of DeviceUpdateList.

Enumeration Values

- **Unknown**: Unknown access.
- **ReadWrite**: Available to be opened with full access.
- **ReadOnly**: Available to be opened with read-only access.
- **NoAccess**: Not reachable.
- **Busy**: Already opened by another entity.
- **OpenReadWrite**: Opened with read-write access.
- **OpenReadOnly**: Opened with read-only access.

DeviceType

Feature Info

Module	Category Path	Type	Access
Device	Root → DeviceInformation	Enumeration	Imposed: RO

Short Description

Identifies the transport layer technology of the interface.

Enumeration Values

- **CXP**: This enumeration value indicates CoaXPress transport layer technology.

4.3. StreamEnumeration Category

StreamSelector

Feature Info

Module	Category Path	Type	Access
Device	Root → StreamEnumeration	Integer	RW

Value Info

Minimum value: 0

Short Description

Selector for the different stream channels.

Selected Features

- ["StreamID" on the next page](#)

StreamID

Feature Info

Module	Category Path	Type	Access
Device	Root → StreamEnumeration	String	Imposed: RO

Short Description

Device unique ID for the stream.

4.4. CoaXPress Category

CxpLinkConfiguration

Feature Info

Module	Category Path	Type	Access
Device	Root → CoaXPress	Enumeration	RW

Description

Set/report the CoaXPress Link configuration.

Enumeration Values

- **CXP1_X1**: 1 connection @1.250 Gbps.
- **CXP2_X1**: 1 connection @2.500 Gbps.
- **CXP3_X1**: 1 connection @3.125 Gbps.
- **CXP5_X1**: 1 connection @5.000 Gbps.
- **CXP6_X1**: 1 connection @6.250 Gbps.
- **CXP10_X1**: 1 connection @10.000 Gbps.
- **CXP12_X1**: 1 connection @12.500 Gbps.
- **CXP1_X2**: 2 connections @1.250 Gbps.
- **CXP2_X2**: 2 connections @2.500 Gbps.
- **CXP3_X2**: 2 connections @3.125 Gbps.
- **CXP5_X2**: 2 connections @5.000 Gbps.
- **CXP6_X2**: 2 connections @6.250 Gbps.
- **CXP10_X2**: 2 connections @10.000 Gbps.
- **CXP12_X2**: 2 connections @12.500 Gbps.
- **CXP1_X3**: 3 connections @1.250 Gbps.
- **CXP2_X3**: 3 connections @2.500 Gbps.
- **CXP3_X3**: 3 connections @3.125 Gbps.
- **CXP5_X3**: 3 connections @5.000 Gbps.
- **CXP6_X3**: 3 connections @6.250 Gbps.
- **CXP10_X3**: 3 connections @10.000 Gbps.
- **CXP12_X3**: 3 connections @12.500 Gbps.

- **CXP1_X4**: 4 connections @1.250 Gbps.
- **CXP2_X4**: 4 connections @2.500 Gbps.
- **CXP3_X4**: 4 connections @3.125 Gbps.
- **CXP5_X4**: 4 connections @5.000 Gbps.
- **CXP6_X4**: 4 connections @6.250 Gbps.
- **CXP10_X4**: 4 connections @10.000 Gbps.
- **CXP12_X4**: 4 connections @12.500 Gbps.
- **CXP1_X8**: 8 connections @1.250 Gbps.
- **CXP2_X8**: 8 connections @2.500 Gbps.
- **CXP3_X8**: 8 connections @3.125 Gbps.
- **CXP5_X8**: 8 connections @5.000 Gbps.
- **CXP6_X8**: 8 connections @6.250 Gbps.
- **CXP10_X8**: 8 connections @10.000 Gbps.
- **CXP12_X8**: 8 connections @12.500 Gbps.
- **Preferred**: Camera Preferred Configuration adapted to the capabilities of the frame grabber.

CxpLinkConfigurationOption

Feature Info

Module	Category Path	Type	Access
Device	Root → CoaXPress	Enumeration	RW

Short Description

CxpLinkConfigurationOption defines how the ConnectionConfig bootstrap register of the CoaXPress device can be changed by writing to CxpLinkConfiguration. Changing the ConnectionConfig bootstrap register of the CoaXPress device by writing to the CxpLinkConfiguration of the device module is discouraged. It is recommended to use the equivalent feature of the remote device module instead.

Selected Features

- ["CxpLinkConfiguration" on page 324](#)

Enumeration Values

- **AlwaysWrite**: Always write to the ConnectionConfig bootstrap register of the CoaXPress device.
- **WritelfDifferent**: Write to the ConnectionConfig bootstrap register of the CoaXPress device only if it is different from the current configuration.
- **NeverWrite**: Never write to the ConnectionConfig bootstrap register of the CoaXPress device.

CxpHostConnectionBase

Feature Info

Module	Category Path	Type	Access
Device	Root → CoaXPress	Enumeration	RW

Short Description

Returns the base CoaXPress physical connection of this device.

Enumeration Values

- **A:** CoaXPress physical host connection A.
- **B:** CoaXPress physical host connection B.
- **C:** CoaXPress physical host connection C.
- **D:** CoaXPress physical host connection D.
- **E:** CoaXPress physical host connection E.
- **F:** CoaXPress physical host connection F.
- **G:** CoaXPress physical host connection G.
- **H:** CoaXPress physical host connection H.

CxpHostConnectionCount

Feature Info

Module	Category Path	Type	Access
Device	Root → CoaXPress	IntReg	RO

Register Port: DevicePort

Short Description

Returns the number of CoaXPress physical connections of this device.

CxpTriggerMessageFormat

Feature Info

Module	Category Path	Type	Access
Device	Root → CoaXPress	Enumeration	RW

Description

Sets/gets the CoaXPress Host to Device Trigger Message Format.

When set to **Pulse**, every Camera Trigger requires two transactions on the Host to Device I/O Channel: one **rising edge trigger packet** and one **falling edge trigger packet**. This is the standard behaviour.

When set to **RisingEdge**, every Camera Trigger requires a single transaction on the Host to Device I/O Channel: one **rising edge trigger packet**.

When set to **Toggle**, every Camera Trigger generates a single message transaction on the Host to Device I/O Channel alternating rising edge or falling edge trigger messages.

Default value: **Pulse**.

Enumeration Values

- **Pulse**: Rising edge and falling edge CoaXPress trigger messages.
- **RisingEdge**: Rising edge CoaXPress trigger message.
- **Toggle**: Alternating rising edge or falling edge CoaXPress trigger message.

CxpTriggerLevel

Feature Info

Module	Category Path	Type	Access
Device	Root → CoaXPress	Enumeration	RW

Description

This feature allows to set or get the logical state of the CoaXPress Host to Device Trigger signal.

Setting the logical state is only allowed when `CxpTriggerMessageFormat` is set to `Toggle`.

Getting the logical state is allowed for any value of `CxpTriggerMessageFormat`.

Enumeration Values

- **Low**: Next trigger message format will be rising edge CoaXPress trigger message.
- **High**: Next trigger message format will be falling edge CoaXPress trigger message.

CxpTriggerAckTimeout

Feature Info

Module	Category Path	Type	Access
Device	Root → CoaXPress	Float	RW

Value Info

Minimum value: 0

Maximum value: 2097.15

Description

Acknowledge timeout value of the CoaXPress Host to Device trigger message .

Default value: 20.0 (20 microseconds).

CxpTriggerMaxResendCount

Feature Info

Module	Category Path	Type	Access
Device	Root → CoaXPress	Integer	RW

Value Info

Minimum value: 0

Maximum value: 7

Description

Sets/gets the maximum resend count of the CoaXPress Host to Device Trigger Message.

Default value: 3.

CxpPacketArbiterReset

Feature Info

Module	Category Path	Type	Access
Device	Root → CoaXPress	Command	RW

Description

CoaXPress Data Packet Arbiter Reset.

Reset the CoaXPress Data Packet Arbiter to Connection 0.



NOTE

This command is only useful for multi-connection cameras that unduly reset the round-Robin connection sequence order.

CxpPortAlignment

Feature Info

Module	Category Path	Type	Access
Device	Root → CoaXPress	Integer	RW

Value Info

Minimum value: 1

Maximum value: 8

Unit: B (byte)

Short Description

When accessing the GenTL remote port, the driver adapts the GenTL remote port address (and size) to meet the alignment constraint. By default the alignment is set to 4 bytes; in this case if an application reads 2 bytes at 0x6009, the driver accesses 3 bytes at 0x6008 (or 4 bytes at 0x6008 if the camera refuses the 3-byte read) and only returns the requested bytes. If CxpPortAlignment is set to 1, the driver does not adapt any GenTL remote port address (or size) when accessing the port.

4.5. CameraAndIlluminationControl Category

CameraModel

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl	Category	RW

Description

Set of features describing the behavioral model of a grabber-controlled camera.

**NOTE**

These features defines the operating limits of the camera and are used to configure the trigger-overrun protection mechanism of the CIC.

**NOTE**

An incorrectly set behavioral model may prevent reaching the highest achievable camera cycle rate or, reversely, allow the grabber to assert triggers too quickly.

Category Members

See also: "CameraModel Category " on page 342

CycleTiming

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl	Category	RW

Description

Set of features describing the CIC Cycle timing properties.

Category Members

See also: "CycleTiming Category " on page 350

CycleControl

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl	Category	RW

Description

Set of features describing the CIC cycle control properties.

Category Members

See also: "CycleControl Category " on page 354

SequenceControl

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl	Category	RW

Description

Set of features describing the CIC cycle sequence control properties.

Default value: **True**.

Category Members

See also: "SequenceControl Category " on page 363

DeviceReset

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl	Command	RW

Description

Reset the CIC.

CameraAndIlluminationControllerStream

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl	Enumeration	RW

Short Description

Defines which data stream the CIC uses to check whether a new cycle can be started.

Enumeration Values

- **Stream0**: CIC uses camera readout and frame buffer status from Stream0.
- **Stream1**: CIC uses camera readout and frame buffer status from Stream1.
- **Stream2**: CIC uses camera readout and frame buffer status from Stream2.
- **Stream3**: CIC uses camera readout and frame buffer status from Stream3.

4.6. CameraModel Category

CameraControlMethod

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CameraModel	Enumeration	RW

Description

Camera control method.

The **NC** camera control method is to be used with free-run or asynchronous reset cameras not controlled by the frame grabber.

The **RC** camera control method is to be used with asynchronous reset cameras having the camera cycle start controlled by the grabber CIC and the exposure time controlled by the camera.

The **RG** camera control method is to be used with asynchronous reset cameras having the camera cycle start and the exposure duration controlled by the grabber CIC.

The **EXTERNAL** camera control method is to be used with asynchronous reset cameras having the camera cycle start and the exposure duration controlled by a hardware signal applied by an external controller to any GPIO input port of the grabber.



NOTE

The NC and the EXTERNAL camera control methods doesn't use the CIC.

Enumeration Values

- **NC**: Not Controlled.
- **RC**: Grabber-controlled cycle start, Camera-controlled exposure time.
- **RG**: Grabber-controlled cycle start and exposure time.
- **EXTERNAL**: Externally-controlled cycle start and exposure time.

C2CLinkConfiguration

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CameraModel	Enumeration	RW

Description

Sets/gets the C2C-Link configuration.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**).

Default value: **Disconnected**.

Enumeration Values

- **Disconnected**: Disconnected from the C2C-Link.
- **Master**: Connected to the C2C-Link as the C2C-Link Master Device.
- **Slave**: Connected to the C2C-Link as a C2C-Link Slave Device.

ExposureReadoutOverlap

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CameraModel	Boolean	RW

Description

Declares the exposure overlapping capability of the camera.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**).

When set to true, it indicates that the camera allows overlapping. The exposure phase of a new camera cycle is allowed to begin during the readout phase.

When set to false, it indicates that the camera doesn't allow overlapping. The exposure phase of a new camera cycle is not allowed to begin before the completion of the readout phase.

ExposureRecoveryTime

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CameraModel	Float	RW

Value Info

Minimum value: 0

Maximum value: 1.71799e+07

Dimension: Time

Unit: μs

Increment: 0.008 μs (8 ns)

Description

Minimum time interval between two consecutive exposure phases.

When **CameraControlMethod** is **RG**, the CIC ensure that the time interval between two consecutive camera trigger pulses is not lower than the specified value in case of large exposure time (exposure time > readout time).

Directive

Only when **CameraControlMethod** is **RG**, set this value to the minimum time interval allowed by the camera.



WARNING

A too small value may cause missed triggers.



WARNING

An excessive value prevents reaching the highest achievable camera cycle rate.

ExposureTimeMin

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CameraModel	Float	RW

Value Info

Minimum value: 3.36

Dimension: Time

Unit: μs

Increment: 0.008 μs (8 ns)

Description

Minimum exposure time.

When **CameraControlMethod** is **RG**, the CIC ensure that the camera trigger pulse width is not lower than the specified value.

Directive

Only when **CameraControlMethod** is **RG**, set this value to the minimum exposure time allowed by the camera.



WARNING

A too small value may cause missed triggers.

ExposureTimeMax

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CameraModel	Float	RW

Value Info

Maximum value: 5.6295e+11

Dimension: Time

Unit: μs

Increment: 0.008 μs (8 ns)

Description

Maximum exposure time.

When **CameraControlMethod** is **RG**, the CIC ensure that the camera trigger pulse width is not larger than the specified value.

Directive

Only when **CameraControlMethod** is **RG**, set this value to the maximum exposure time allowed by the camera.



WARNING

An excessive value may cause missed triggers.

CycleMinimumPeriod

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CameraModel	Float	RW

Value Info

Minimum value: 3.36

Maximum value: 5.6295e+11

Dimension: Time

Unit: μs

Increment: 0.008 μs (8 ns)

Description

Minimum camera cycle period.

When **CameraControlMethod** is **RC** or **RG**, the CIC ensure that the camera cycle period is not smaller than the specified value.



NOTE

was named **CycleTargetPeriod** in Coaxlink driver versions prior to 9.4



NOTE

was named **CyclePeriodTarget** in Coaxlink driver versions prior to 4.1

Directive

Only when **CameraControlMethod** is **RC** or **RG**, set this value to the minimum cycle period allowed by the camera.



WARNING

A too small value may cause missed triggers.

4.7. CycleTiming Category

ExposureTime

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CycleTiming	Float	RW

Value Info

Dimension: Time

Unit: μs

Increment: 0.008 μs (8 ns)

Description

Sets/gets the exposure time.

Applies only when **CameraControlMethod** is **RG**.



NOTE

Avoid using exposure time settings outside the exposure time range of the camera.



NOTE

The upper limit is very high: > 150 hours!

Default value: 1,000.0 (1 millisecond).

StrobeDelay

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CycleTiming	Float	RW

Value Info

Minimum value: -8.58993e+06

Maximum value: 8.58993e+06

Dimension: Time

Unit: μs

Increment: 0.008 μs (8 ns)

Description

Sets/gets the strobe pulse delay.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**).

Default value: 0.

StrobeDuration

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CycleTiming	Float	RW

Value Info

Minimum value: 0

Maximum value: 5.6295e+11

Dimension: Time

Unit: μs

Increment: 0.008 μs (8 ns)

Description

Sets/gets the strobe pulse duration.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**).



NOTE

The upper limit is very high: > 150 hours!

Default value: 1,000.0 (1 millisecond).

4.8. CycleControl Category

CycleTriggerSource

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CycleControl	Enumeration	RW

Description

Sets/gets the start-of-camera-cycle trigger conditions and selects a hardware or software trigger source.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**).

Default value: **CyclePeriodTarget**.

Enumeration Values

- **Immediate**: Immediately after the start of the sequence and then repeatedly every **CycleMinimumPeriod** period.
- **StartCycle**: On execution of the StartCycle command.
- **C2C**: Synchronized with the C2C-Link master device. This value is enforced when **C2CLinkConfiguration** = Slave.
- **LIN1**: When an event occurs on Line Input Tool 1 or on execution of the StartCycle command.
- **LIN2**: When an event occurs on Line Input Tool 2 or on execution of the StartCycle command.
- **LIN3**: When an event occurs on Line Input Tool 3 or on execution of the StartCycle command.
- **LIN4**: When an event occurs on Line Input Tool 4 or on execution of the StartCycle command.
- **LIN5**: When an event occurs on Line Input Tool 5 or on execution of the StartCycle command.
- **LIN6**: When an event occurs on Line Input Tool 6 or on execution of the StartCycle command.
- **LIN7**: When an event occurs on Line Input Tool 7 or on execution of the StartCycle command.
- **LIN8**: When an event occurs on Line Input Tool 8 or on execution of the StartCycle command.
- **QDC1**: When an event occurs on Quadrature Decoder Tool 1 or on execution of the StartCycle command.
- **QDC2**: When an event occurs on Quadrature Decoder Tool 2 or on execution of the StartCycle command.
- **QDC3**: When an event occurs on Quadrature Decoder Tool 3 or on execution of the StartCycle command.

- **QDC4**: When an event occurs on Quadrature Decoder Tool 4 or on execution of the StartCycle command.
- **MDV1**: When an event occurs on Multiplier/Divider Tool 1 or on execution of the StartCycle command.
- **MDV2**: When an event occurs on Multiplier/Divider Tool 2 or on execution of the StartCycle command.
- **MDV3**: When an event occurs on Multiplier/Divider Tool 3 or on execution of the StartCycle command.
- **MDV4**: When an event occurs on Multiplier/Divider Tool 4 or on execution of the StartCycle command.
- **DIV1**: When an event occurs on Divider Tool 1 or on execution of the StartCycle command.
- **DIV2**: When an event occurs on Divider Tool 2 or on execution of the StartCycle command.
- **DIV3**: When an event occurs on Divider Tool 3 or on execution of the StartCycle command.
- **DIV4**: When an event occurs on Divider Tool 4 or on execution of the StartCycle command.
- **DEL1_1**: When an event occurs on Delay Tool 1 Output 1 or on execution of the StartCycle command.
- **DEL1_2**: When an event occurs on Delay Tool 1 Output 2 or on execution of the StartCycle command.
- **DEL2_1**: When an event occurs on Delay Tool 2 Output 1 or on execution of the StartCycle command.
- **DEL2_2**: When an event occurs on Delay Tool 2 Output 2 or on execution of the StartCycle command.
- **DEL3_1**: When an event occurs on Delay Tool 3 Output 1 or on execution of the StartCycle command.
- **DEL3_2**: When an event occurs on Delay Tool 3 Output 2 or on execution of the StartCycle command.
- **DEL4_1**: When an event occurs on Delay Tool 4 Output 1 or on execution of the StartCycle command.
- **DEL4_2**: When an event occurs on Delay Tool 4 Output 2 or on execution of the StartCycle command.
- **EIN1**: When an event occurs on Event Input Tool 1 or on execution of the StartCycle command.
- **EIN2**: When an event occurs on Event Input Tool 2 or on execution of the StartCycle command.
- **UserEvent1**: When an event occurs on User Event 1 or on execution of the StartCycle command.
- **UserEvent2**: When an event occurs on User Event 2 or on execution of the StartCycle command.

- **UserEvent3**: When an event occurs on User Event 3 or on execution of the StartCycle command.
- **UserEvent4**: When an event occurs on User Event 4 or on execution of the StartCycle command.
- **C2C1**: When an event occurs on C2C-Link Synchronization Tool 1 or on execution of the StartCycle command.
- **C2C2**: When an event occurs on C2C-Link Synchronization Tool 2 or on execution of the StartCycle command.
- **C2C3**: When an event occurs on C2C-Link Synchronization Tool 3 or on execution of the StartCycle command.

StartCycle

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CycleControl	Command	RW

Description

Starts a camera cycle.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**).

**NOTE**

was named **CycleSoftwareTrigger** in Coaxlink driver versions prior to 4.1.

CycleMaxPendingTriggerCount

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CycleControl	Integer	RW

Value Info

Minimum value: 0

Maximum value: 7

Description

The Camera and Illumination Controller is fitted with a trigger latching mechanism capable of recording triggers that cannot be served immediately and postponing their execution.

This feature determines the capacity of the latch :

- When 0, the trigger latch mechanism is disabled. Any cycle trigger that cannot be served immediately is rejected and increments **CycleLostTriggerCount**.
- When set to any value ranging from 1 to 7, the trigger latch mechanism is enabled. Providing that **CyclePendingTriggerCount** is below **CycleMaxPendingTriggerCount**, any cycle trigger that cannot be served immediately is latched and increments **CyclePendingTriggerCount**.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**).

Default value: 0 (Disabled)

CyclePendingTriggerCount

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CycleControl	IntReg	RO

Register Port: DevicePort

Description

Returns the count of pending CIC cycle trigger events.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**).

CycleLostTriggerCount

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CycleControl	IntReg	RO

Register Port: DevicePort

Description

Returns the count of lost CIC cycle trigger events.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**).

Value range: from 0 up to 4,294,967,295.

CycleLostTriggerCountReset

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → CycleControl	Command	RW

Description

Resets the count of lost CIC cycle trigger events.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**).

4.9. SequenceControl Category

StartOfSequenceTriggerSource

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → SequenceControl	Enumeration	RW

Description

Sets/gets the start-of-sequence trigger conditions and selects a hardware or software trigger source.

- When set to **Immediate**, the sequence starts immediately.
- When set to **StartSequence**, the sequence starts only on execution of the `StartSequence` command.
- When set to <any-event-source>, the sequence starts on the next occurrence of an event on the specified event source or on execution of the `StartSequence` command. Possible event sources include any available LIN*, QDC*, MDV*, DIV*, DEL*, EIN*, User Event* event source.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**).

Enumeration Values

- **Immediate**: Immediate.
- **StartSequence**: `StartSequence` command.
- **LIN1**: When an event occurs on Line Input Tool 1 or on execution of the `StartSequence` command.
- **LIN2**: When an event occurs on Line Input Tool 2 or on execution of the `StartSequence` command.
- **LIN3**: When an event occurs on Line Input Tool 3 or on execution of the `StartSequence` command.
- **LIN4**: When an event occurs on Line Input Tool 4 or on execution of the `StartSequence` command.
- **LIN5**: When an event occurs on Line Input Tool 5 or on execution of the `StartSequence` command.
- **LIN6**: When an event occurs on Line Input Tool 6 or on execution of the `StartSequence` command.
- **LIN7**: When an event occurs on Line Input Tool 7 or on execution of the `StartSequence` command.

- **LIN8**: When an event occurs on Line Input Tool 8 or on execution of the StartSequence command.
- **QDC1**: When an event occurs on Quadrature Decoder Tool 1 or on execution of the StartSequence command.
- **QDC2**: When an event occurs on Quadrature Decoder Tool 2 or on execution of the StartSequence command.
- **QDC3**: When an event occurs on Quadrature Decoder Tool 3 or on execution of the StartSequence command.
- **QDC4**: When an event occurs on Quadrature Decoder Tool 4 or on execution of the StartSequence command.
- **MDV1**: When an event occurs on Multiplier/Divider Tool 1 or on execution of the StartSequence command.
- **MDV2**: When an event occurs on Multiplier/Divider Tool 2 or on execution of the StartSequence command.
- **MDV3**: When an event occurs on Multiplier/Divider Tool 3 or on execution of the StartSequence command.
- **MDV4**: When an event occurs on Multiplier/Divider Tool 4 or on execution of the StartSequence command.
- **DIV1**: When an event occurs on Divider Tool 1 or on execution of the StartSequence command.
- **DIV2**: When an event occurs on Divider Tool 2 or on execution of the StartSequence command.
- **DIV3**: When an event occurs on Divider Tool 3 or on execution of the StartSequence command.
- **DIV4**: When an event occurs on Divider Tool 4 or on execution of the StartSequence command.
- **DEL1_1**: When an event occurs on Delay Tool 1 Output 1 or on execution of the StartSequence command.
- **DEL1_2**: When an event occurs on Delay Tool 1 Output 2 or on execution of the StartSequence command.
- **DEL2_1**: When an event occurs on Delay Tool 2 Output 1 or on execution of the StartSequence command.
- **DEL2_2**: When an event occurs on Delay Tool 2 Output 2 or on execution of the StartSequence command.
- **DEL3_1**: When an event occurs on Delay Tool 3 Output 1 or on execution of the StartSequence command.
- **DEL3_2**: When an event occurs on Delay Tool 3 Output 2 or on execution of the StartSequence command.

- **DEL4_1**: When an event occurs on Delay Tool 4 Output 1 or on execution of the StartSequence command.
- **DEL4_2**: When an event occurs on Delay Tool 4 Output 2 or on execution of the StartSequence command.
- **EIN1**: When an event occurs on Event Input Tool 1 or on execution of the StartSequence command.
- **EIN2**: When an event occurs on Event Input Tool 2 or on execution of the StartSequence command.
- **UserEvent1**: When an event occurs on User Event 1 or on execution of the StartSequence command.
- **UserEvent2**: When an event occurs on User Event 2 or on execution of the StartSequence command.
- **UserEvent3**: When an event occurs on User Event 3 or on execution of the StartSequence command.
- **UserEvent4**: When an event occurs on User Event 4 or on execution of the StartSequence command.
- **C2C1**: When an event occurs on C2C-Link Synchronization Tool 1 or on execution of the StartSequence command.
- **C2C2**: When an event occurs on C2C-Link Synchronization Tool 2 or on execution of the StartSequence command.
- **C2C3**: When an event occurs on C2C-Link Synchronization Tool 3 or on execution of the StartSequence command.

EndOfSequenceTriggerSource

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → SequenceControl	Enumeration	RW

Description

Sets/gets the end-of-sequence trigger conditions and selects a hardware or software trigger source.

- When set to **SequenceLength**, the sequence stops automatically after having executed a number of camera cycles specified by **SequenceLength**. The sequence can be stopped anticipatively on execution of the **StopSequence** command.
- When set to **StopSequence**, the sequence stops only on execution of the **StopSequence** command.
- When set to <any-event-source>, the sequence stops on the next occurrence of an event on the specified event source or on execution of the **StopSequence** command. Possible event sources include any available LIN*, QDC*, MDV*, DIV*, DEL*, EIN*, User Event* event source.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**).

Enumeration Values

- **SequenceLength**: SequenceLength.
- **StopSequence**: StopSequence command.
- **LIN1**: When an event occurs on Line Input Tool 1 or on execution of the StopSequence command.
- **LIN2**: When an event occurs on Line Input Tool 2 or on execution of the StopSequence command.
- **LIN3**: When an event occurs on Line Input Tool 3 or on execution of the StopSequence command.
- **LIN4**: When an event occurs on Line Input Tool 4 or on execution of the StopSequence command.
- **LIN5**: When an event occurs on Line Input Tool 5 or on execution of the StopSequence command.
- **LIN6**: When an event occurs on Line Input Tool 6 or on execution of the StopSequence command.

- **LIN7**: When an event occurs on Line Input Tool 7 or on execution of the StopSequence command.
- **LIN8**: When an event occurs on Line Input Tool 8 or on execution of the StopSequence command.
- **QDC1**: When an event occurs on Quadrature Decoder Tool 1 or on execution of the StopSequence command.
- **QDC2**: When an event occurs on Quadrature Decoder Tool 2 or on execution of the StopSequence command.
- **QDC3**: When an event occurs on Quadrature Decoder Tool 3 or on execution of the StopSequence command.
- **QDC4**: When an event occurs on Quadrature Decoder Tool 4 or on execution of the StopSequence command.
- **MDV1**: When an event occurs on Multiplier/Divider Tool 1 or on execution of the StopSequence command.
- **MDV2**: When an event occurs on Multiplier/Divider Tool 2 or on execution of the StopSequence command.
- **MDV3**: When an event occurs on Multiplier/Divider Tool 3 or on execution of the StopSequence command.
- **MDV4**: When an event occurs on Multiplier/Divider Tool 4 or on execution of the StopSequence command.
- **DIV1**: When an event occurs on Divider Tool 1 or on execution of the StopSequence command.
- **DIV2**: When an event occurs on Divider Tool 2 or on execution of the StopSequence command.
- **DIV3**: When an event occurs on Divider Tool 3 or on execution of the StopSequence command.
- **DIV4**: When an event occurs on Divider Tool 4 or on execution of the StopSequence command.
- **DEL1_1**: When an event occurs on Delay Tool 1 Output 1 or on execution of the StopSequence command.
- **DEL1_2**: When an event occurs on Delay Tool 1 Output 2 or on execution of the StopSequence command.
- **DEL2_1**: When an event occurs on Delay Tool 2 Output 1 or on execution of the StopSequence command.
- **DEL2_2**: When an event occurs on Delay Tool 2 Output 2 or on execution of the StopSequence command.
- **DEL3_1**: When an event occurs on Delay Tool 3 Output 1 or on execution of the StopSequence command.

- **DEL3_2**: When an event occurs on Delay Tool 3 Output 2 or on execution of the StopSequence command.
- **DEL4_1**: When an event occurs on Delay Tool 4 Output 1 or on execution of the StopSequence command.
- **DEL4_2**: When an event occurs on Delay Tool 4 Output 2 or on execution of the StopSequence command.
- **EIN1**: When an event occurs on Event Input Tool 1 or on execution of the StopSequence command.
- **EIN2**: When an event occurs on Event Input Tool 2 or on execution of the StopSequence command.
- **UserEvent1**: When an event occurs on User Event 1 or on execution of the StopSequence command.
- **UserEvent2**: When an event occurs on User Event 2 or on execution of the StopSequence command.
- **UserEvent3**: When an event occurs on User Event 3 or on execution of the StopSequence command.
- **UserEvent4**: When an event occurs on User Event 4 or on execution of the StopSequence command.
- **C2C1**: When an event occurs on C2C-Link Synchronization Tool 1 or on execution of the StopSequence command.
- **C2C2**: When an event occurs on C2C-Link Synchronization Tool 2 or on execution of the StopSequence command.
- **C2C3**: When an event occurs on C2C-Link Synchronization Tool 3 or on execution of the StopSequence command.

SequenceLength

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → SequenceControl	Integer	RW

Value Info

Minimum value: 1

Maximum value: 16777215

Short Description

Sequence Length.

StartSequence

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → SequenceControl	Command	RW

Description

Starts a CIC sequence.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**) and **StartOfSequenceTriggerSource** is not set to **Immediate**.

StopSequence

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → SequenceControl	Command	RW

Description

Stops a CIC sequence.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**).

AbortSequence

Feature Info

Module	Category Path	Type	Access
Device	Root → CameraAndIlluminationControl → SequenceControl	Command	RW

Description

Abort a CIC sequence.

Applies only when the CIC is used (i.e., when **CameraControlMethod** is **RC** or **RG**) and **StartOfSequenceTriggerSource** is not set to **Immediate**.

4.10. EventControl Category

EventSelector

Feature Info

Module	Category Path	Type	Access
Device	Root → EventControl	Enumeration	RW

Short Description

Select an event.

Selected Features

- ["EventNotification" on page 377](#)
- ["EventNotificationContext1" on page 378](#)
- ["EventNotificationContext2" on page 381](#)
- ["EventNotificationContext3" on page 384](#)
- ["EventCount" on page 387](#)
- ["EventCountReset" on page 388](#)

Enumeration Values

- **CameraTriggerRisingEdge**: Start of camera trigger.
- **CameraTriggerFallingEdge**: End of camera trigger.
- **StrobeRisingEdge**: Start of light strobe.
- **StrobeFallingEdge**: End of light strobe.
- **AllowNextCycle**: CIC is ready for next camera cycle.
- **DiscardedCicTrigger**: Ignored CIC trigger because CIC is not ready for next camera cycle.
- **PendingCicTrigger**: Delayed CIC trigger until CIC is ready for next camera cycle.
- **CxpTriggerAck**: Received acknowledgement for previous CXP trigger message.
- **CxpTriggerResend**: Resent CXP trigger message (acknowledgement to previous CXP trigger message not received).
- **Trigger**: CIC trigger.
- **LinkTrigger**: LinkTrigger<N> received from CoaXPress device.
- **StreamPacketSizeError**: Stream packet size error.

- **StreamPacketFifoOverflow**: Stream packet FIFO overflow.
- **CameraTriggerOverrun**: New trigger sent to remote device even though readout of previous frame has not started yet.
- **DidNotReceiveTriggerAck**: Trigger ignored because ACK to previous trigger has not been received yet.
- **TriggerPacketRetryError**: Trigger packet resend not successful.
- **InputStreamFifoHalfFull**: Input stream FIFO half full.
- **InputStreamFifoFull**: Input stream FIFO full.
- **ImageHeaderError**: Image header error.
- **MigAxiWriteError**: MIG AXI write error.
- **MigAxiReadError**: MIG AXI read error.
- **PacketWithUnexpectedTag**: Received a CXP packet with unexpected tag.
- **FillLevelAboveIosRejected**: Start of scan skipped (caused by internal exception: frame store almost full).
- **FillLevelAboveAfeEarlyEos**: End of scan (caused by internal exception: frame store almost full).
- **ExternalTriggerReqsTooClose**: External trigger requests too close together.

EventNotification

Feature Info

Module	Category Path	Type	Access
Device	Root → EventControl	Boolean	RW

Description

Activate or deactivate the notification to the host application of the occurrence of the selected event.

When true, activate the notification.

When false, deactivate the notification.

Default value: False.

EventNotificationContext1

Feature Info

Module	Category Path	Type	Access
Device	Root → EventControl	Enumeration	RW

Short Description

Select context information reported in EVENT_DATA_CUSTOM_CONTEXT_1.

Enumeration Values

- **EventSpecific**: Event-specific context information.
- **LineStatusAll**: Low 32-bit part of LineStatusAll.
- **LineStatusAllHi**: High 32-bit part of LineStatusAll.
- **QDC1Position**: Position of Quadrature Decoder Tool 1.
- **QDC2Position**: Position of Quadrature Decoder Tool 2.
- **QDC3Position**: Position of Quadrature Decoder Tool 3.
- **QDC4Position**: Position of Quadrature Decoder Tool 4.
- **PendingCicTriggerCount**: Number of currently pending CIC triggers.
- **LIN1EventCount**: Number of LIN1 events.
- **LIN2EventCount**: Number of LIN2 events.
- **LIN3EventCount**: Number of LIN3 events.
- **LIN4EventCount**: Number of LIN4 events.
- **LIN5EventCount**: Number of LIN5 events.
- **LIN6EventCount**: Number of LIN6 events.
- **LIN7EventCount**: Number of LIN7 events.
- **LIN8EventCount**: Number of LIN8 events.
- **QDC1EventCount**: Number of QDC1 events.
- **QDC1DirEventCount**: Number of QDC1Dir events.
- **QDC2EventCount**: Number of QDC2 events.
- **QDC2DirEventCount**: Number of QDC2Dir events.
- **QDC3EventCount**: Number of QDC3 events.

- **QDC3DirEventCount**: Number of QDC3Dir events.
- **QDC4EventCount**: Number of QDC4 events.
- **QDC4DirEventCount**: Number of QDC4Dir events.
- **DIV1EventCount**: Number of DIV1 events.
- **DIV2EventCount**: Number of DIV2 events.
- **DIV3EventCount**: Number of DIV3 events.
- **DIV4EventCount**: Number of DIV4 events.
- **MDV1EventCount**: Number of MDV1 events.
- **MDV2EventCount**: Number of MDV2 events.
- **MDV3EventCount**: Number of MDV3 events.
- **MDV4EventCount**: Number of MDV4 events.
- **DEL11EventCount**: Number of DEL11 events.
- **DEL12EventCount**: Number of DEL12 events.
- **DEL21EventCount**: Number of DEL21 events.
- **DEL22EventCount**: Number of DEL22 events.
- **DEL31EventCount**: Number of DEL31 events.
- **DEL32EventCount**: Number of DEL32 events.
- **DEL41EventCount**: Number of DEL41 events.
- **DEL42EventCount**: Number of DEL42 events.
- **UserEvent1EventCount**: Number of UserEvent1 events.
- **UserEvent2EventCount**: Number of UserEvent2 events.
- **UserEvent3EventCount**: Number of UserEvent3 events.
- **UserEvent4EventCount**: Number of UserEvent4 events.
- **C2C1EventCount**: Number of C2C1 events.
- **C2C2EventCount**: Number of C2C2 events.
- **C2C3EventCount**: Number of C2C3 events.
- **EIN1EventCount**: Number of EIN1 events.
- **EIN2EventCount**: Number of EIN2 events.
- **CrcErrorCxpAEventCount**: Number of CrcErrorCxpA events.
- **CrcErrorCxpBEventCount**: Number of CrcErrorCxpB events.
- **CrcErrorCxpCEventCount**: Number of CrcErrorCxpC events.
- **CrcErrorCxpDEventCount**: Number of CrcErrorCxpD events.
- **CrcErrorCxpEEventCount**: Number of CrcErrorCxpE events.

- **CrcErrorCxpFEventCount**: Number of CrcErrorCxpF events.
- **CrcErrorCxpGEventCount**: Number of CrcErrorCxpG events.
- **CrcErrorCxpHEventCount**: Number of CrcErrorCxpH events.
- **CameraTriggerRisingEdgeEventCount**: Number of CameraTriggerRisingEdge events.
- **CameraTriggerFallingEdgeEventCount**: Number of CameraTriggerFallingEdge events.
- **StrobeRisingEdgeEventCount**: Number of StrobeRisingEdge events.
- **StrobeFallingEdgeEventCount**: Number of StrobeFallingEdge events.
- **AllowNextCycleEventCount**: Number of AllowNextCycle events.
- **DiscardedCicTriggerEventCount**: Number of DiscardedCicTrigger events.
- **PendingCicTriggerEventCount**: Number of PendingCicTrigger events.
- **CxpTriggerAckEventCount**: Number of CxpTriggerAck events.
- **CxpTriggerResendEventCount**: Number of CxpTriggerResend events.
- **TriggerEventCount**: Number of Trigger events.
- **LinkTriggerEventCount**: Number of LinkTrigger events.
- **StreamPacketSizeErrorEventCount**: Number of StreamPacketSizeError events.
- **StreamPacketFifoOverflowEventCount**: Number of StreamPacketFifoOverflow events.
- **CameraTriggerOverrunEventCount**: Number of CameraTriggerOverrun events.
- **DidNotReceiveTriggerAckEventCount**: Number of DidNotReceiveTriggerAck events.
- **TriggerPacketRetryErrorEventCount**: Number of TriggerPacketRetryError events.
- **InputStreamFifoHalfFullEventCount**: Number of InputStreamFifoHalfFull events.
- **InputStreamFifoFullEventCount**: Number of InputStreamFifoFull events.
- **ImageHeaderErrorEventCount**: Number of ImageHeaderError events.
- **MigAxiWriteErrorEventCount**: Number of MigAxiWriteError events.
- **MigAxiReadErrorEventCount**: Number of MigAxiReadError events.
- **PacketWithUnexpectedTagEventCount**: Number of PacketWithUnexpectedTag events.
- **FillLevelAboveIIsosRejectedEventCount**: Number of FillLevelAboveIIsosRejected events.
- **FillLevelAboveAfEarlyEosEventCount**: Number of FillLevelAboveAfEarlyEos events.
- **ExternalTriggerReqsTooCloseEventCount**: Number of ExternalTriggerReqsTooClose events.

EventNotificationContext2

Feature Info

Module	Category Path	Type	Access
Device	Root → EventControl	Enumeration	RW

Short Description

Select context information reported in EVENT_DATA_CUSTOM_CONTEXT_2.

Enumeration Values

- **EventSpecific**: Event-specific context information.
- **LineStatusAll**: Low 32-bit part of LineStatusAll.
- **LineStatusAllHi**: High 32-bit part of LineStatusAll.
- **QDC1Position**: Position of Quadrature Decoder Tool 1.
- **QDC2Position**: Position of Quadrature Decoder Tool 2.
- **QDC3Position**: Position of Quadrature Decoder Tool 3.
- **QDC4Position**: Position of Quadrature Decoder Tool 4.
- **PendingCicTriggerCount**: Number of currently pending CIC triggers.
- **LIN1EventCount**: Number of LIN1 events.
- **LIN2EventCount**: Number of LIN2 events.
- **LIN3EventCount**: Number of LIN3 events.
- **LIN4EventCount**: Number of LIN4 events.
- **LIN5EventCount**: Number of LIN5 events.
- **LIN6EventCount**: Number of LIN6 events.
- **LIN7EventCount**: Number of LIN7 events.
- **LIN8EventCount**: Number of LIN8 events.
- **QDC1EventCount**: Number of QDC1 events.
- **QDC1DirEventCount**: Number of QDC1Dir events.
- **QDC2EventCount**: Number of QDC2 events.
- **QDC2DirEventCount**: Number of QDC2Dir events.
- **QDC3EventCount**: Number of QDC3 events.

- **QDC3DirEventCount**: Number of QDC3Dir events.
- **QDC4EventCount**: Number of QDC4 events.
- **QDC4DirEventCount**: Number of QDC4Dir events.
- **DIV1EventCount**: Number of DIV1 events.
- **DIV2EventCount**: Number of DIV2 events.
- **DIV3EventCount**: Number of DIV3 events.
- **DIV4EventCount**: Number of DIV4 events.
- **MDV1EventCount**: Number of MDV1 events.
- **MDV2EventCount**: Number of MDV2 events.
- **MDV3EventCount**: Number of MDV3 events.
- **MDV4EventCount**: Number of MDV4 events.
- **DEL11EventCount**: Number of DEL11 events.
- **DEL12EventCount**: Number of DEL12 events.
- **DEL21EventCount**: Number of DEL21 events.
- **DEL22EventCount**: Number of DEL22 events.
- **DEL31EventCount**: Number of DEL31 events.
- **DEL32EventCount**: Number of DEL32 events.
- **DEL41EventCount**: Number of DEL41 events.
- **DEL42EventCount**: Number of DEL42 events.
- **UserEvent1EventCount**: Number of UserEvent1 events.
- **UserEvent2EventCount**: Number of UserEvent2 events.
- **UserEvent3EventCount**: Number of UserEvent3 events.
- **UserEvent4EventCount**: Number of UserEvent4 events.
- **C2C1EventCount**: Number of C2C1 events.
- **C2C2EventCount**: Number of C2C2 events.
- **C2C3EventCount**: Number of C2C3 events.
- **EIN1EventCount**: Number of EIN1 events.
- **EIN2EventCount**: Number of EIN2 events.
- **CrcErrorCxpAEventCount**: Number of CrcErrorCxpA events.
- **CrcErrorCxpBEventCount**: Number of CrcErrorCxpB events.
- **CrcErrorCxpCEventCount**: Number of CrcErrorCxpC events.
- **CrcErrorCxpDEventCount**: Number of CrcErrorCxpD events.
- **CrcErrorCxpEEventCount**: Number of CrcErrorCxpE events.

- **CrcErrorCxpFEventCount**: Number of CrcErrorCxpF events.
- **CrcErrorCxpGEventCount**: Number of CrcErrorCxpG events.
- **CrcErrorCxpHEventCount**: Number of CrcErrorCxpH events.
- **CameraTriggerRisingEdgeEventCount**: Number of CameraTriggerRisingEdge events.
- **CameraTriggerFallingEdgeEventCount**: Number of CameraTriggerFallingEdge events.
- **StrobeRisingEdgeEventCount**: Number of StrobeRisingEdge events.
- **StrobeFallingEdgeEventCount**: Number of StrobeFallingEdge events.
- **AllowNextCycleEventCount**: Number of AllowNextCycle events.
- **DiscardedCicTriggerEventCount**: Number of DiscardedCicTrigger events.
- **PendingCicTriggerEventCount**: Number of PendingCicTrigger events.
- **CxpTriggerAckEventCount**: Number of CxpTriggerAck events.
- **CxpTriggerResendEventCount**: Number of CxpTriggerResend events.
- **TriggerEventCount**: Number of Trigger events.
- **LinkTriggerEventCount**: Number of LinkTrigger events.
- **StreamPacketSizeErrorEventCount**: Number of StreamPacketSizeError events.
- **StreamPacketFifoOverflowEventCount**: Number of StreamPacketFifoOverflow events.
- **CameraTriggerOverrunEventCount**: Number of CameraTriggerOverrun events.
- **DidNotReceiveTriggerAckEventCount**: Number of DidNotReceiveTriggerAck events.
- **TriggerPacketRetryErrorEventCount**: Number of TriggerPacketRetryError events.
- **InputStreamFifoHalfFullEventCount**: Number of InputStreamFifoHalfFull events.
- **InputStreamFifoFullEventCount**: Number of InputStreamFifoFull events.
- **ImageHeaderErrorEventCount**: Number of ImageHeaderError events.
- **MigAxiWriteErrorEventCount**: Number of MigAxiWriteError events.
- **MigAxiReadErrorEventCount**: Number of MigAxiReadError events.
- **PacketWithUnexpectedTagEventCount**: Number of PacketWithUnexpectedTag events.
- **FillLevelAboveIIsosRejectedEventCount**: Number of FillLevelAboveIIsosRejected events.
- **FillLevelAboveAfEarlyEosEventCount**: Number of FillLevelAboveAfEarlyEos events.
- **ExternalTriggerReqsTooCloseEventCount**: Number of ExternalTriggerReqsTooClose events.

EventNotificationContext3

Feature Info

Module	Category Path	Type	Access
Device	Root → EventControl	Enumeration	RW

Short Description

Select context information reported in EVENT_DATA_CUSTOM_CONTEXT_3.

Enumeration Values

- **EventSpecific**: Event-specific context information.
- **LineStatusAll**: Low 32-bit part of LineStatusAll.
- **LineStatusAllHi**: High 32-bit part of LineStatusAll.
- **QDC1Position**: Position of Quadrature Decoder Tool 1.
- **QDC2Position**: Position of Quadrature Decoder Tool 2.
- **QDC3Position**: Position of Quadrature Decoder Tool 3.
- **QDC4Position**: Position of Quadrature Decoder Tool 4.
- **PendingCicTriggerCount**: Number of currently pending CIC triggers.
- **LIN1EventCount**: Number of LIN1 events.
- **LIN2EventCount**: Number of LIN2 events.
- **LIN3EventCount**: Number of LIN3 events.
- **LIN4EventCount**: Number of LIN4 events.
- **LIN5EventCount**: Number of LIN5 events.
- **LIN6EventCount**: Number of LIN6 events.
- **LIN7EventCount**: Number of LIN7 events.
- **LIN8EventCount**: Number of LIN8 events.
- **QDC1EventCount**: Number of QDC1 events.
- **QDC1DirEventCount**: Number of QDC1Dir events.
- **QDC2EventCount**: Number of QDC2 events.
- **QDC2DirEventCount**: Number of QDC2Dir events.
- **QDC3EventCount**: Number of QDC3 events.

- **QDC3DirEventCount**: Number of QDC3Dir events.
- **QDC4EventCount**: Number of QDC4 events.
- **QDC4DirEventCount**: Number of QDC4Dir events.
- **DIV1EventCount**: Number of DIV1 events.
- **DIV2EventCount**: Number of DIV2 events.
- **DIV3EventCount**: Number of DIV3 events.
- **DIV4EventCount**: Number of DIV4 events.
- **MDV1EventCount**: Number of MDV1 events.
- **MDV2EventCount**: Number of MDV2 events.
- **MDV3EventCount**: Number of MDV3 events.
- **MDV4EventCount**: Number of MDV4 events.
- **DEL11EventCount**: Number of DEL11 events.
- **DEL12EventCount**: Number of DEL12 events.
- **DEL21EventCount**: Number of DEL21 events.
- **DEL22EventCount**: Number of DEL22 events.
- **DEL31EventCount**: Number of DEL31 events.
- **DEL32EventCount**: Number of DEL32 events.
- **DEL41EventCount**: Number of DEL41 events.
- **DEL42EventCount**: Number of DEL42 events.
- **UserEvent1EventCount**: Number of UserEvent1 events.
- **UserEvent2EventCount**: Number of UserEvent2 events.
- **UserEvent3EventCount**: Number of UserEvent3 events.
- **UserEvent4EventCount**: Number of UserEvent4 events.
- **C2C1EventCount**: Number of C2C1 events.
- **C2C2EventCount**: Number of C2C2 events.
- **C2C3EventCount**: Number of C2C3 events.
- **EIN1EventCount**: Number of EIN1 events.
- **EIN2EventCount**: Number of EIN2 events.
- **CrcErrorCxpAEventCount**: Number of CrcErrorCxpA events.
- **CrcErrorCxpBEventCount**: Number of CrcErrorCxpB events.
- **CrcErrorCxpCEventCount**: Number of CrcErrorCxpC events.
- **CrcErrorCxpDEventCount**: Number of CrcErrorCxpD events.
- **CrcErrorCxpEEventCount**: Number of CrcErrorCxpE events.

- **CrcErrorCxpFEventCount**: Number of CrcErrorCxpF events.
- **CrcErrorCxpGEventCount**: Number of CrcErrorCxpG events.
- **CrcErrorCxpHEventCount**: Number of CrcErrorCxpH events.
- **CameraTriggerRisingEdgeEventCount**: Number of CameraTriggerRisingEdge events.
- **CameraTriggerFallingEdgeEventCount**: Number of CameraTriggerFallingEdge events.
- **StrobeRisingEdgeEventCount**: Number of StrobeRisingEdge events.
- **StrobeFallingEdgeEventCount**: Number of StrobeFallingEdge events.
- **AllowNextCycleEventCount**: Number of AllowNextCycle events.
- **DiscardedCicTriggerEventCount**: Number of DiscardedCicTrigger events.
- **PendingCicTriggerEventCount**: Number of PendingCicTrigger events.
- **CxpTriggerAckEventCount**: Number of CxpTriggerAck events.
- **CxpTriggerResendEventCount**: Number of CxpTriggerResend events.
- **TriggerEventCount**: Number of Trigger events.
- **LinkTriggerEventCount**: Number of LinkTrigger events.
- **StreamPacketSizeErrorEventCount**: Number of StreamPacketSizeError events.
- **StreamPacketFifoOverflowEventCount**: Number of StreamPacketFifoOverflow events.
- **CameraTriggerOverrunEventCount**: Number of CameraTriggerOverrun events.
- **DidNotReceiveTriggerAckEventCount**: Number of DidNotReceiveTriggerAck events.
- **TriggerPacketRetryErrorEventCount**: Number of TriggerPacketRetryError events.
- **InputStreamFifoHalfFullEventCount**: Number of InputStreamFifoHalfFull events.
- **InputStreamFifoFullEventCount**: Number of InputStreamFifoFull events.
- **ImageHeaderErrorEventCount**: Number of ImageHeaderError events.
- **MigAxiWriteErrorEventCount**: Number of MigAxiWriteError events.
- **MigAxiReadErrorEventCount**: Number of MigAxiReadError events.
- **PacketWithUnexpectedTagEventCount**: Number of PacketWithUnexpectedTag events.
- **FillLevelAboveIIsosRejectedEventCount**: Number of FillLevelAboveIIsosRejected events.
- **FillLevelAboveAfEarlyEosEventCount**: Number of FillLevelAboveAfEarlyEos events.
- **ExternalTriggerReqsTooCloseEventCount**: Number of ExternalTriggerReqsTooClose events.

EventCount

Feature Info

Module	Category Path	Type	Access
Device	Root → EventControl	IntReg	RO

Register Port: DevicePort

Short Description

Number of occurrences of the selected event (32-bit counter).

EventCountReset

Feature Info

Module	Category Path	Type	Access
Device	Root → EventControl	Command	Imposed: WO

Short Description

Reset the selected EventCount.

EventNotificationAll

Feature Info

Module	Category Path	Type	Access
Device	Root → EventControl	Boolean	Imposed: WO

Short Description

Activate or deactivate the notification of all events.

EventCountResetAll

Feature Info

Module	Category Path	Type	Access
Device	Root → EventControl	Command	Imposed: WO

Short Description

Reset all EventCount.

4.11. Errors Category

ErrorSelector

Feature Info

Module	Category Path	Type	Access
Device	Root → Errors	Enumeration	RW

Short Description

Error Selector.

Selected Features

- ["ErrorCount" on page 394](#)
- ["ErrorCountReset" on page 395](#)

Enumeration Values

- **All**: All errors.
- **StreamPacketSizeError**: Stream packet size error.
- **StreamPacketFifoOverflow**: Stream packet FIFO overflow.
- **CameraTriggerOverrun**: New trigger sent to remote device even though readout of previous frame has not started yet.
- **DidNotReceiveTriggerAck**: Trigger ignored because ACK to previous trigger has not been received yet.
- **TriggerPacketRetryError**: Trigger packet resend not successful.
- **InputStreamFifoHalfFull**: Input stream FIFO half full.
- **InputStreamFifoFull**: Input stream FIFO full.
- **ImageHeaderError**: Image header error.
- **MigAxiWriteError**: MIG AXI write error.
- **MigAxiReadError**: MIG AXI read error.
- **PacketWithUnexpectedTag**: Received a CXP packet with unexpected tag.
- **StreamPacketCrcError0**: Stream packet CRC error on connector A.
- **StreamPacketCrcError1**: Stream packet CRC error on connector B.
- **StreamPacketCrcError2**: Stream packet CRC error on connector C.

- **StreamPacketCrcError3**: Stream packet CRC error on connector D.
- **StreamPacketCrcError4**: Stream packet CRC error on connector E.
- **StreamPacketCrcError5**: Stream packet CRC error on connector F.
- **StreamPacketCrcError6**: Stream packet CRC error on connector G.
- **StreamPacketCrcError7**: Stream packet CRC error on connector H.
- **StartOfScanSkipped**: Start of scan skipped (caused by internal exception: frame store almost full).
- **PrematureEndOfScan**: End of scan (caused by internal exception: frame store almost full).
- **ExternalTriggerReqsTooClose**: External trigger requests too close together.
- **Unknown**: Unknown errors.

ErrorCount

Feature Info

Module	Category Path	Type	Access
Device	Root → Errors	IntReg	RO

Register Port: DevicePort

Short Description

Error Count.

ErrorCountReset

Feature Info

Module	Category Path	Type	Access
Device	Root → Errors	Command	Imposed: WO

Short Description

Reset the selected ErrorCount.

5. Data Stream Module

Categorized features list of Data Stream module version 12.6.2.74

5.1. Root Category

StreamInformation

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "StreamInformation Category " on page 414

ImageFormatControl

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "ImageFormatControl Category " on page 417

TransportLayerControl

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "TransportLayerControl Category " on page 434

BufferHandlingControl

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "BufferHandlingControl Category " on page 436

PixelProcessing

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "PixelProcessing Category " on page 441

LineScanAcquisitionControl

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "LineScanAcquisitionControl Category " on page 446

StreamControl

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "StreamControl Category " on page 457

Errors

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "Errors Category " on page 474

LUTControl

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "LUTControl Category " on page 479

LinearFilter

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "LinearFilter Category " on page 488

Threshold

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "Threshold Category " on page 493

LaserLineExtractor

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "LaserLineExtractor Category " on page 496

Bayer

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "Bayer Category " on page 500

FlatFieldCorrection

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "FlatFieldCorrection Category " on page 502

EventControl

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "EventControl Category " on page 508

StreamStatistics

Feature Info

Module	Category Path	Type	Access
Data Stream	Root	Category	RW

Category Members

See also: "StreamStatistics Category " on page 524

5.2. StreamInformation Category

StreamID

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamInformation	String	Imposed: RO

Short Description

Device unique ID for the data stream.

StreamType

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamInformation	Enumeration	Imposed: RO

Short Description

Identifies the transport layer technology of the interface.

Enumeration Values

- **CXP**: This enumeration value indicates CoaXPress transport layer technology.

5.3. ImageFormatControl Category

PixelFormat

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → ImageFormatControl	Enumeration	Imposed: RO

Short Description

Pixel format of the image.

Enumeration Values

- **BayerBG10pmsb**: BayerBG10pmsb.
- **BayerBG12pmsb**: BayerBG12pmsb.
- **BayerBG14pmsb**: BayerBG14pmsb.
- **BayerGB10pmsb**: BayerGB10pmsb.
- **BayerGB12pmsb**: BayerGB12pmsb.
- **BayerGB14pmsb**: BayerGB14pmsb.
- **BayerGR10pmsb**: BayerGR10pmsb.
- **BayerGR12pmsb**: BayerGR12pmsb.
- **BayerGR14pmsb**: BayerGR14pmsb.
- **BayerRG10pmsb**: BayerRG10pmsb.
- **BayerRG12pmsb**: BayerRG12pmsb.
- **BayerRG14pmsb**: BayerRG14pmsb.
- **Mono10pmsb**: Mono10pmsb.
- **Mono12pmsb**: Mono12pmsb.
- **Mono14pmsb**: Mono14pmsb.
- **RGB10pmsb**: RGB10pmsb.
- **RGB12pmsb**: RGB12pmsb.
- **RGB14pmsb**: RGB14pmsb.
- **RGBa10pmsb**: RGBa10pmsb.
- **RGBa12pmsb**: RGBa12pmsb.
- **RGBa14pmsb**: RGBa14pmsb.

- YCbCr601_10pmsb: YCbCr601_10pmsb.
- YCbCr601_12pmsb: YCbCr601_12pmsb.
- YCbCr601_14pmsb: YCbCr601_14pmsb.
- YCbCr601_16: YCbCr601_16.
- YCbCr601_411_10pmsb: YCbCr601_411_10pmsb.
- YCbCr601_411_12pmsb: YCbCr601_411_12pmsb.
- YCbCr601_411_14pmsb: YCbCr601_411_14pmsb.
- YCbCr601_411_16: YCbCr601_411_16.
- YCbCr601_411_8: YCbCr601_411_8.
- YCbCr601_422_10pmsb: YCbCr601_422_10pmsb.
- YCbCr601_422_12pmsb: YCbCr601_422_12pmsb.
- YCbCr601_422_14pmsb: YCbCr601_422_14pmsb.
- YCbCr601_422_16: YCbCr601_422_16.
- YCbCr601_8: YCbCr601_8.
- YCbCr709_10pmsb: YCbCr709_10pmsb.
- YCbCr709_12pmsb: YCbCr709_12pmsb.
- YCbCr709_14pmsb: YCbCr709_14pmsb.
- YCbCr709_16: YCbCr709_16.
- YCbCr709_411_10pmsb: YCbCr709_411_10pmsb.
- YCbCr709_411_12pmsb: YCbCr709_411_12pmsb.
- YCbCr709_411_14pmsb: YCbCr709_411_14pmsb.
- YCbCr709_411_16: YCbCr709_411_16.
- YCbCr709_411_8: YCbCr709_411_8.
- YCbCr709_422_10pmsb: YCbCr709_422_10pmsb.
- YCbCr709_422_12pmsb: YCbCr709_422_12pmsb.
- YCbCr709_422_14pmsb: YCbCr709_422_14pmsb.
- YCbCr709_422_16: YCbCr709_422_16.
- YCbCr709_8: YCbCr709_8.
- YUV10pmsb: YUV10pmsb.
- YUV12pmsb: YUV12pmsb.
- YUV14pmsb: YUV14pmsb.
- YUV16: YUV16.
- YUV411_10pmsb: YUV411_10pmsb.

- **YUV411_12pmsb**: YUV411_12pmsb.
- **YUV411_14pmsb**: YUV411_14pmsb.
- **YUV411_16**: YUV411_16.
- **YUV411_8**: YUV411_8.
- **YUV422_10pmsb**: YUV422_10pmsb.
- **YUV422_12pmsb**: YUV422_12pmsb.
- **YUV422_14pmsb**: YUV422_14pmsb.
- **YUV422_16**: YUV422_16.
- **YUV8**: YUV8.
- **B10**: Blue 10-bit.
- **B12**: Blue 12-bit.
- **B16**: Blue 16-bit.
- **B8**: Blue 8-bit.
- **BayerBG10**: Bayer Blue-Green 10-bit unpacked.
- **BayerBG10p**: Bayer Blue-Green 10-bit packed.
- **BayerBG10Packed**: Bayer Blue-Green 10-bit packed.
- **BayerBG12**: Bayer Blue-Green 12-bit unpacked.
- **BayerBG12p**: Bayer Blue-Green 12-bit packed.
- **BayerBG12Packed**: Bayer Blue-Green 12-bit packed.
- **BayerBG14**: Bayer Blue-Green 14-bit.
- **BayerBG14p**: Bayer Blue-Green 14-bit packed.
- **BayerBG16**: Bayer Blue-Green 16-bit.
- **BayerBG4p**: Bayer Blue-Green 4-bit packed.
- **BayerBG8**: Bayer Blue-Green 8-bit.
- **BayerGB10**: Bayer Green-Blue 10-bit unpacked.
- **BayerGB10p**: Bayer Green-Blue 10-bit packed.
- **BayerGB10Packed**: Bayer Green-Blue 10-bit packed.
- **BayerGB12**: Bayer Green-Blue 12-bit unpacked.
- **BayerGB12p**: Bayer Green-Blue 12-bit packed.
- **BayerGB12Packed**: Bayer Green-Blue 12-bit packed.
- **BayerGB14**: Bayer Green-Blue 14-bit.
- **BayerGB14p**: Bayer Green-Blue 14-bit packed.
- **BayerGB16**: Bayer Green-Blue 16-bit.

- **BayerGB4p**: Bayer Green-Blue 4-bit packed.
- **BayerGB8**: Bayer Green-Blue 8-bit.
- **BayerGR10**: Bayer Green-Red 10-bit unpacked.
- **BayerGR10p**: Bayer Green-Red 10-bit packed.
- **BayerGR10Packed**: Bayer Green-Red 10-bit packed.
- **BayerGR12**: Bayer Green-Red 12-bit unpacked.
- **BayerGR12p**: Bayer Green-Red 12-bit packed.
- **BayerGR12Packed**: Bayer Green-Red 12-bit packed.
- **BayerGR14**: Bayer Green-Red 14-bit.
- **BayerGR14p**: Bayer Green-Red 14-bit packed.
- **BayerGR16**: Bayer Green-Red 16-bit.
- **BayerGR4p**: Bayer Green-Red 4-bit packed.
- **BayerGR8**: Bayer Green-Red 8-bit.
- **BayerRG10**: Bayer Red-Green 10-bit unpacked.
- **BayerRG10p**: Bayer Red-Green 10-bit packed.
- **BayerRG10Packed**: Bayer Red-Green 10-bit packed.
- **BayerRG12**: Bayer Red-Green 12-bit unpacked.
- **BayerRG12p**: Bayer Red-Green 12-bit packed.
- **BayerRG12Packed**: Bayer Red-Green 12-bit packed.
- **BayerRG14**: Bayer Red-Green 14-bit.
- **BayerRG14p**: Bayer Red-Green 14-bit packed.
- **BayerRG16**: Bayer Red-Green 16-bit.
- **BayerRG4p**: Bayer Red-Green 4-bit packed.
- **BayerRG8**: Bayer Red-Green 8-bit.
- **BGR10**: Blue-Green-Red 10-bit unpacked.
- **BGR10p**: Blue-Green-Red 10-bit packed.
- **BGR12**: Blue-Green-Red 12-bit unpacked.
- **BGR12p**: Blue-Green-Red 12-bit packed.
- **BGR14**: Blue-Green-Red 14-bit unpacked.
- **BGR16**: Blue-Green-Red 16-bit.
- **BGR565p**: Blue-Green-Red 5/6/5-bit packed.
- **BGR8**: Blue-Green-Red 8-bit.
- **BGR8a32**: BGR8a32.

- **BGRa10**: Blue-Green-Red-alpha 10-bit unpacked.
- **BGRa10p**: Blue-Green-Red-alpha 10-bit packed.
- **BGRa12**: Blue-Green-Red-alpha 12-bit unpacked.
- **BGRa12p**: Blue-Green-Red-alpha 12-bit packed.
- **BGRa14**: Blue-Green-Red-alpha 14-bit unpacked.
- **BGRa16**: Blue-Green-Red-alpha 16-bit.
- **BGRa8**: Blue-Green-Red-alpha 8-bit.
- **BiColorBGRG10**: Bi-color Blue/Green - Red/Green 10-bit unpacked.
- **BiColorBGRG10p**: Bi-color Blue/Green - Red/Green 10-bit packed.
- **BiColorBGRG12**: Bi-color Blue/Green - Red/Green 12-bit unpacked.
- **BiColorBGRG12p**: Bi-color Blue/Green - Red/Green 12-bit packed.
- **BiColorBGRG8**: Bi-color Blue/Green - Red/Green 8-bit.
- **BiColorRGBG10**: Bi-color Red/Green - Blue/Green 10-bit unpacked.
- **BiColorRGBG10p**: Bi-color Red/Green - Blue/Green 10-bit packed.
- **BiColorRGBG12**: Bi-color Red/Green - Blue/Green 12-bit unpacked.
- **BiColorRGBG12p**: Bi-color Red/Green - Blue/Green 12-bit packed.
- **BiColorRGBG8**: Bi-color Red/Green - Blue/Green 8-bit.
- **Confidence1**: Confidence 1-bit unpacked.
- **Confidence16**: Confidence 16-bit.
- **Confidence1p**: Confidence 1-bit packed.
- **Confidence32f**: Confidence 32-bit floating point.
- **Confidence8**: Confidence 8-bit.
- **Coord3D_A10p**: 3D coordinate A 10-bit packed.
- **Coord3D_A12p**: 3D coordinate A 12-bit packed.
- **Coord3D_A16**: 3D coordinate A 16-bit.
- **Coord3D_A32f**: 3D coordinate A 32-bit floating point.
- **Coord3D_A8**: 3D coordinate A 8-bit.
- **Coord3D_ABC10p**: 3D coordinate A-B-C 10-bit packed.
- **Coord3D_ABC10p_Planar**: 3D coordinate A-B-C 10-bit packed planar.
- **Coord3D_ABC12p**: 3D coordinate A-B-C 12-bit packed.
- **Coord3D_ABC12p_Planar**: 3D coordinate A-B-C 12-bit packed planar.
- **Coord3D_ABC16**: 3D coordinate A-B-C 16-bit.
- **Coord3D_ABC16_Planar**: 3D coordinate A-B-C 16-bit planar.

- **Coord3D_ABC32f**: 3D coordinate A-B-C 32-bit floating point.
- **Coord3D_ABC32f_Planar**: 3D coordinate A-B-C 32-bit floating point planar.
- **Coord3D_ABC8**: 3D coordinate A-B-C 8-bit.
- **Coord3D_ABC8_Planar**: 3D coordinate A-B-C 8-bit planar.
- **Coord3D_AC10p**: 3D coordinate A-C 10-bit packed.
- **Coord3D_AC10p_Planar**: 3D coordinate A-C 10-bit packed planar.
- **Coord3D_AC12p**: 3D coordinate A-C 12-bit packed.
- **Coord3D_AC12p_Planar**: 3D coordinate A-C 12-bit packed planar.
- **Coord3D_AC16**: 3D coordinate A-C 16-bit.
- **Coord3D_AC16_Planar**: 3D coordinate A-C 16-bit planar.
- **Coord3D_AC32f**: 3D coordinate A-C 32-bit floating point.
- **Coord3D_AC32f_Planar**: 3D coordinate A-C 32-bit floating point planar.
- **Coord3D_AC8**: 3D coordinate A-C 8-bit.
- **Coord3D_AC8_Planar**: 3D coordinate A-C 8-bit planar.
- **Coord3D_B10p**: 3D coordinate B 10-bit packed.
- **Coord3D_B12p**: 3D coordinate B 12-bit packed.
- **Coord3D_B16**: 3D coordinate B 16-bit.
- **Coord3D_B32f**: 3D coordinate B 32-bit floating point.
- **Coord3D_B8**: 3D coordinate B 8-bit.
- **Coord3D_C10p**: 3D coordinate C 10-bit packed.
- **Coord3D_C12p**: 3D coordinate C 12-bit packed.
- **Coord3D_C16**: 3D coordinate C 16-bit.
- **Coord3D_C32f**: 3D coordinate C 32-bit floating point.
- **Coord3D_C8**: 3D coordinate C 8-bit.
- **CustomBayerBG14**: CustomBayerBG14.
- **CustomBayerGB14**: CustomBayerGB14.
- **CustomBayerGR14**: CustomBayerGR14.
- **CustomBayerRG14**: CustomBayerRG14.
- **CustomJFIF**: CustomJFIF.
- **G10**: Green 10-bit.
- **G12**: Green 12-bit.
- **G16**: Green 16-bit.
- **G8**: Green 8-bit.

- **Mono10**: Monochrome 10-bit unpacked.
- **Mono10p**: Monochrome 10-bit packed.
- **Mono10Packed**: Monochrome 10-bit packed.
- **Mono12**: Monochrome 12-bit unpacked.
- **Mono12p**: Monochrome 12-bit packed.
- **Mono12Packed**: Monochrome 12-bit packed.
- **Mono14**: Monochrome 14-bit unpacked.
- **Mono14p**: Monochrome 14-bit packed.
- **Mono16**: Monochrome 16-bit.
- **Mono1p**: Monochrome 1-bit packed.
- **Mono2p**: Monochrome 2-bit packed.
- **Mono32**: Monochrome 32-bit.
- **Mono4p**: Monochrome 4-bit packed.
- **Mono8**: Monochrome 8-bit.
- **Mono8s**: Monochrome 8-bit signed.
- **R10**: Red 10-bit.
- **R12**: Red 12-bit.
- **R16**: Red 16-bit.
- **R8**: Red 8-bit.
- **RGB10**: Red-Green-Blue 10-bit unpacked.
- **RGB10_Planar**: Red-Green-Blue 10-bit unpacked planar.
- **RGB10p**: Red-Green-Blue 10-bit packed.
- **RGB10p32**: Red-Green-Blue 10-bit packed into 32-bit.
- **RGB10V1Packed**: Red-Green-Blue 10-bit packed - variant 1.
- **RGB12**: Red-Green-Blue 12-bit unpacked.
- **RGB12_Planar**: Red-Green-Blue 12-bit unpacked planar.
- **RGB12p**: Red-Green-Blue 12-bit packed.
- **RGB12V1Packed**: Red-Green-Blue 12-bit packed - variant 1.
- **RGB14**: Red-Green-Blue 14-bit unpacked.
- **RGB16**: Red-Green-Blue 16-bit.
- **RGB16_Planar**: Red-Green-Blue 16-bit planar.
- **RGB565p**: Red-Green-Blue 5/6/5-bit packed.
- **RGB8**: Red-Green-Blue 8-bit.

- **RGB8_Planar**: Red-Green-Blue 8-bit planar.
- **RGB8a32**: RGB8a32.
- **RGBa10**: Red-Green-Blue-alpha 10-bit unpacked.
- **RGBa10p**: Red-Green-Blue-alpha 10-bit packed.
- **RGBa12**: Red-Green-Blue-alpha 12-bit unpacked.
- **RGBa12p**: Red-Green-Blue-alpha 12-bit packed.
- **RGBa14**: Red-Green-Blue-alpha 14-bit unpacked.
- **RGBa16**: Red-Green-Blue-alpha 16-bit.
- **RGBa8**: Red-Green-Blue-alpha 8-bit.
- **SCF1WBWG10**: Sparse Color Filter #1 White-Blue-White-Green 10-bit unpacked.
- **SCF1WBWG10p**: Sparse Color Filter #1 White-Blue-White-Green 10-bit packed.
- **SCF1WBWG12**: Sparse Color Filter #1 White-Blue-White-Green 12-bit unpacked.
- **SCF1WBWG12p**: Sparse Color Filter #1 White-Blue-White-Green 12-bit packed.
- **SCF1WBWG14**: Sparse Color Filter #1 White-Blue-White-Green 14-bit unpacked.
- **SCF1WBWG16**: Sparse Color Filter #1 White-Blue-White-Green 16-bit unpacked.
- **SCF1WBWG8**: Sparse Color Filter #1 White-Blue-White-Green 8-bit.
- **SCF1WGWB10**: Sparse Color Filter #1 White-Green-White-Blue 10-bit unpacked.
- **SCF1WGWB10p**: Sparse Color Filter #1 White-Green-White-Blue 10-bit packed.
- **SCF1WGWB12**: Sparse Color Filter #1 White-Green-White-Blue 12-bit unpacked.
- **SCF1WGWB12p**: Sparse Color Filter #1 White-Green-White-Blue 12-bit packed.
- **SCF1WGWB14**: Sparse Color Filter #1 White-Green-White-Blue 14-bit unpacked.
- **SCF1WGWB16**: Sparse Color Filter #1 White-Green-White-Blue 16-bit.
- **SCF1WGWB8**: Sparse Color Filter #1 White-Green-White-Blue 8-bit.
- **SCF1WGWR10**: Sparse Color Filter #1 White-Green-White-Red 10-bit unpacked.
- **SCF1WGWR10p**: Sparse Color Filter #1 White-Green-White-Red 10-bit packed.
- **SCF1WGWR12**: Sparse Color Filter #1 White-Green-White-Red 12-bit unpacked.
- **SCF1WGWR12p**: Sparse Color Filter #1 White-Green-White-Red 12-bit packed.
- **SCF1WGWR14**: Sparse Color Filter #1 White-Green-White-Red 14-bit unpacked.
- **SCF1WGWR16**: Sparse Color Filter #1 White-Green-White-Red 16-bit.
- **SCF1WGWR8**: Sparse Color Filter #1 White-Green-White-Red 8-bit.
- **SCF1WRWG10**: Sparse Color Filter #1 White-Red-White-Green 10-bit unpacked.
- **SCF1WRWG10p**: Sparse Color Filter #1 White-Red-White-Green 10-bit packed.
- **SCF1WRWG12**: Sparse Color Filter #1 White-Red-White-Green 12-bit unpacked.

- SCF1WRWG12p: Sparse Color Filter #1 White-Red-White-Green 12-bit packed.
- SCF1WRWG14: Sparse Color Filter #1 White-Red-White-Green 14-bit unpacked.
- SCF1WRWG16: Sparse Color Filter #1 White-Red-White-Green 16-bit.
- SCF1WRWG8: Sparse Color Filter #1 White-Red-White-Green 8-bit.
- YCbCr10_CbYCr: YCbCr 4:4:4 10-bit unpacked.
- YCbCr10p_CbYCr: YCbCr 4:4:4 10-bit packed.
- YCbCr12_CbYCr: YCbCr 4:4:4 12-bit unpacked.
- YCbCr12p_CbYCr: YCbCr 4:4:4 12-bit packed.
- YCbCr2020_10_CbYCr: YCbCr 4:4:4 10-bit unpacked BT.2020.
- YCbCr2020_10p_CbYCr: YCbCr 4:4:4 10-bit packed BT.2020.
- YCbCr2020_12_CbYCr: YCbCr 4:4:4 12-bit unpacked BT.2020.
- YCbCr2020_12p_CbYCr: YCbCr 4:4:4 12-bit packed BT.2020.
- YCbCr2020_411_8_CbYYCrYY: YCbCr 4:1:1 8-bit BT.2020.
- YCbCr2020_422_10: YCbCr 4:2:2 10-bit unpacked BT.2020.
- YCbCr2020_422_10_CbYCrY: YCbCr 4:2:2 10-bit unpacked BT.2020.
- YCbCr2020_422_10p: YCbCr 4:2:2 10-bit packed BT.2020.
- YCbCr2020_422_10p_CbYCrY: YCbCr 4:2:2 10-bit packed BT.2020.
- YCbCr2020_422_12: YCbCr 4:2:2 12-bit unpacked BT.2020.
- YCbCr2020_422_12_CbYCrY: YCbCr 4:2:2 12-bit unpacked BT.2020.
- YCbCr2020_422_12p: YCbCr 4:2:2 12-bit packed BT.2020.
- YCbCr2020_422_12p_CbYCrY: YCbCr 4:2:2 12-bit packed BT.2020.
- YCbCr2020_422_8: YCbCr 4:2:2 8-bit BT.2020.
- YCbCr2020_422_8_CbYCrY: YCbCr 4:2:2 8-bit BT.2020.
- YCbCr2020_8_CbYCr: YCbCr 4:4:4 8-bit BT.2020.
- YCbCr411_8: YCbCr 4:1:1 8-bit.
- YCbCr411_8_CbYYCrYY: YCbCr 4:1:1 8-bit.
- YCbCr420_8_YY_CbCr_Semiplanar: YCbCr 4:2:0 8-bit YY/CbCr Semiplanar.
- YCbCr420_8_YY_CrCb_Semiplanar: YCbCr 4:2:0 8-bit YY/CrCb Semiplanar.
- YCbCr422_10: YCbCr 4:2:2 10-bit unpacked.
- YCbCr422_10_CbYCrY: YCbCr 4:2:2 10-bit unpacked.
- YCbCr422_10p: YCbCr 4:2:2 10-bit packed.
- YCbCr422_10p_CbYCrY: YCbCr 4:2:2 10-bit packed.
- YCbCr422_12: YCbCr 4:2:2 12-bit unpacked.

- **YCbCr422_12_CbYCrY**: YCbCr 4:2:2 12-bit unpacked.
- **YCbCr422_12p**: YCbCr 4:2:2 12-bit packed.
- **YCbCr422_12p_CbYCrY**: YCbCr 4:2:2 12-bit packed.
- **YCbCr422_8**: YCbCr 4:2:2 8-bit.
- **YCbCr422_8_CbYCrY**: YCbCr 4:2:2 8-bit.
- **YCbCr422_8_YY_CbCr_Semiplanar**: YCbCr 4:2:2 8-bit YY/CbCr Semiplanar.
- **YCbCr422_8_YY_CrCb_Semiplanar**: YCbCr 4:2:2 8-bit YY/CrCb Semiplanar.
- **YCbCr601_10_CbYCr**: YCbCr 4:4:4 10-bit unpacked BT.601.
- **YCbCr601_10p_CbYCr**: YCbCr 4:4:4 10-bit packed BT.601.
- **YCbCr601_12_CbYCr**: YCbCr 4:4:4 12-bit unpacked BT.601.
- **YCbCr601_12p_CbYCr**: YCbCr 4:4:4 12-bit packed BT.601.
- **YCbCr601_411_8_CbYYCrYY**: YCbCr 4:1:1 8-bit BT.601.
- **YCbCr601_422_10**: YCbCr 4:2:2 10-bit unpacked BT.601.
- **YCbCr601_422_10_CbYCrY**: YCbCr 4:2:2 10-bit unpacked BT.601.
- **YCbCr601_422_10p**: YCbCr 4:2:2 10-bit packed BT.601.
- **YCbCr601_422_10p_CbYCrY**: YCbCr 4:2:2 10-bit packed BT.601.
- **YCbCr601_422_12**: YCbCr 4:2:2 12-bit unpacked BT.601.
- **YCbCr601_422_12_CbYCrY**: YCbCr 4:2:2 12-bit unpacked BT.601.
- **YCbCr601_422_12p**: YCbCr 4:2:2 12-bit packed BT.601.
- **YCbCr601_422_12p_CbYCrY**: YCbCr 4:2:2 12-bit packed BT.601.
- **YCbCr601_422_8**: YCbCr 4:2:2 8-bit BT.601.
- **YCbCr601_422_8_CbYCrY**: YCbCr 4:2:2 8-bit BT.601.
- **YCbCr601_8_CbYCr**: YCbCr 4:4:4 8-bit BT.601.
- **YCbCr709_10_CbYCr**: YCbCr 4:4:4 10-bit unpacked BT.709.
- **YCbCr709_10p_CbYCr**: YCbCr 4:4:4 10-bit packed BT.709.
- **YCbCr709_12_CbYCr**: YCbCr 4:4:4 12-bit unpacked BT.709.
- **YCbCr709_12p_CbYCr**: YCbCr 4:4:4 12-bit packed BT.709.
- **YCbCr709_411_8_CbYYCrYY**: YCbCr 4:1:1 8-bit BT.709.
- **YCbCr709_422_10**: YCbCr 4:2:2 10-bit unpacked BT.709.
- **YCbCr709_422_10_CbYCrY**: YCbCr 4:2:2 10-bit unpacked BT.709.
- **YCbCr709_422_10p**: YCbCr 4:2:2 10-bit packed BT.709.
- **YCbCr709_422_10p_CbYCrY**: YCbCr 4:2:2 10-bit packed BT.709.
- **YCbCr709_422_12**: YCbCr 4:2:2 12-bit unpacked BT.709.

- **YCbCr709_422_12_CbYCrY**: YCbCr 4:2:2 12-bit unpacked BT.709.
- **YCbCr709_422_12p**: YCbCr 4:2:2 12-bit packed BT.709.
- **YCbCr709_422_12p_CbYCrY**: YCbCr 4:2:2 12-bit packed BT.709.
- **YCbCr709_422_8**: YCbCr 4:2:2 8-bit BT.709.
- **YCbCr709_422_8_CbYCrY**: YCbCr 4:2:2 8-bit BT.709.
- **YCbCr709_8_CbYCr**: YCbCr 4:4:4 8-bit BT.709.
- **YCbCr8**: YCbCr 4:4:4 8-bit.
- **YCbCr8_CbYCr**: YCbCr 4:4:4 8-bit.
- **YUV411_8_UYVY**: YUV 4:1:1 8-bit.
- **YUV422_8**: YUV 4:2:2 8-bit.
- **YUV422_8_UYVY**: YUV 4:2:2 8-bit.
- **YUV422Packed**: YUV422Packed.
- **YUV8_UYV**: YUV 4:4:4 8-bit.

PixelFormatNamespace

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → ImageFormatControl	Enumeration	Imposed: RO

Short Description

Namespace of the pixel format.

Enumeration Values

- **Unknown**: Unknown.
- **GEV**: GEV.
- **IIDC**: IIDC.
- **PFNC_16BIT**: PFNC 16-bit.
- **PFNC_32BIT**: PFNC 32-bit.

PixelSize

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → ImageFormatControl	IntReg	RO

Register Port: StreamPort

Short Description

Pixel size in bits.

PixelComponentCount

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → ImageFormatControl	IntReg	RO

Register Port: StreamPort

Short Description

Number of components per pixel.

Width

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → ImageFormatControl	Integer	Imposed: RO

Short Description

Width of the image.

Height

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → ImageFormatControl	Integer	Imposed: RO

Short Description

Height of the image.

5.4. TransportLayerControl Category

PayloadSize

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → TransportLayerControl	IntReg	RO

Register Port: StreamPort

Short Description

Provides the number of bytes transferred for each image on the stream channel.

5.5. BufferHandlingControl Category

StreamAnnouncedBufferCount

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → BufferHandlingControl	Integer	Imposed: RO

Short Description

Number of announced buffers on the stream.

StreamBufferHandlingMode

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → BufferHandlingControl	Enumeration	RW

Short Description

Available buffer handling modes of this Stream.

Enumeration Values

- **Default:** Default Buffer Handling Mode.

StreamAnnounceBufferMinimum

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → BufferHandlingControl	Integer	Imposed: RO

Short Description

Minimal number of buffers to announce to enable selected buffer handling mode.

StreamAcquisitionModeSelector

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → BufferHandlingControl	Enumeration	RW

Short Description

Available buffer handling modes of this Stream. Deprecated.

Enumeration Values

- **Default:** Default Buffer Handling Mode.

5.6. PixelProcessing Category

UnpackingMode

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → PixelProcessing	Enumeration	RW

Description

Unpacking Mode of multi-byte pixel components.

When set to Lsb, each pixel component is unpacked to the least significant bit. Padding '0' bits are put as necessary in the most significant bits to reach the next 8-bit boundary. 16-bit data are delivered using the little-endian convention.

When set to Msb, each pixel component is unpacked to the most significant bit. Padding '0' bits are put as necessary in the least significant bits to reach the next 8-bit boundary. 16-bit data are delivered using the little-endian convention.

When set to Off, the pixel components are not unpacked. The pixel data stream is left unchanged.

Default value: Lsb.



NOTE

The default value was Msb for Coaxlink driver versions prior to 4.3.

Enumeration Values

- **Lsb**: Unpacking to lsb.
- **Msb**: Unpacking to msb.
- **Off**: No unpacking.

RedBlueSwap

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → PixelProcessing	Boolean	RW

Description

Red-Blue component swapping.

When true, the first (Red) and the last (Blue) color components of an RGB packed pixel are swapped before being delivered.

When false, the pixel component order remains unchanged.

Default value: False.

ImageScaling

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → PixelProcessing	Enumeration	RW

Short Description

Image scaling.

Enumeration Values

- **Off**: No image scaling.
- **Scaling_1_8**: 1:8 image down-scaling.

JpegQuality

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → PixelProcessing	Integer	RW

Value Info

Minimum value: 1

Maximum value: 100

Short Description

JPEG quality.

5.7. LineScanAcquisitionControl Category

StartOfScanTriggerSource

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LineScanAcquisitionControl	Enumeration	RW

Description

Start-of-scan trigger conditions and trigger source.

Default value: **Immediate**.

Enumeration Values

- **Immediate**: Immediate.
- **StartScan**: StartScan command.
- **LIN1**: When an event occurs on Line Input Tool 1 or on execution of the StartScan command.
- **LIN2**: When an event occurs on Line Input Tool 2 or on execution of the StartScan command.
- **LIN3**: When an event occurs on Line Input Tool 3 or on execution of the StartScan command.
- **LIN4**: When an event occurs on Line Input Tool 4 or on execution of the StartScan command.
- **LIN5**: When an event occurs on Line Input Tool 5 or on execution of the StartScan command.
- **LIN6**: When an event occurs on Line Input Tool 6 or on execution of the StartScan command.
- **LIN7**: When an event occurs on Line Input Tool 7 or on execution of the StartScan command.
- **LIN8**: When an event occurs on Line Input Tool 8 or on execution of the StartScan command.
- **QDC1**: When an event occurs on Quadrature Decoder Tool 1 or on execution of the StartScan command.
- **QDC2**: When an event occurs on Quadrature Decoder Tool 2 or on execution of the StartScan command.
- **QDC3**: When an event occurs on Quadrature Decoder Tool 3 or on execution of the StartScan command.
- **QDC4**: When an event occurs on Quadrature Decoder Tool 4 or on execution of the StartScan command.
- **MDV1**: When an event occurs on Multiplier/Divider Tool 1 or on execution of the StartScan command.
- **MDV2**: When an event occurs on Multiplier/Divider Tool 2 or on execution of the StartScan command.

- **MDV3**: When an event occurs on Multiplier/Divider Tool 3 or on execution of the StartScan command.
- **MDV4**: When an event occurs on Multiplier/Divider Tool 4 or on execution of the StartScan command.
- **DIV1**: When an event occurs on Divider Tool 1 or on execution of the StartScan command.
- **DIV2**: When an event occurs on Divider Tool 2 or on execution of the StartScan command.
- **DIV3**: When an event occurs on Divider Tool 3 or on execution of the StartScan command.
- **DIV4**: When an event occurs on Divider Tool 4 or on execution of the StartScan command.
- **DEL1_1**: When an event occurs on Delay Tool 1 Output 1 or on execution of the StartScan command.
- **DEL1_2**: When an event occurs on Delay Tool 1 Output 2 or on execution of the StartScan command.
- **DEL2_1**: When an event occurs on Delay Tool 2 Output 1 or on execution of the StartScan command.
- **DEL2_2**: When an event occurs on Delay Tool 2 Output 2 or on execution of the StartScan command.
- **DEL3_1**: When an event occurs on Delay Tool 3 Output 1 or on execution of the StartScan command.
- **DEL3_2**: When an event occurs on Delay Tool 3 Output 2 or on execution of the StartScan command.
- **DEL4_1**: When an event occurs on Delay Tool 4 Output 1 or on execution of the StartScan command.
- **DEL4_2**: When an event occurs on Delay Tool 4 Output 2 or on execution of the StartScan command.
- **EIN1**: When an event occurs on Event Input Tool 1 or on execution of the StartScan command.
- **EIN2**: When an event occurs on Event Input Tool 2 or on execution of the StartScan command.
- **UserEvent1**: When an event occurs on User Event 1 or on execution of the StartScan command.
- **UserEvent2**: When an event occurs on User Event 2 or on execution of the StartScan command.
- **UserEvent3**: When an event occurs on User Event 3 or on execution of the StartScan command.
- **UserEvent4**: When an event occurs on User Event 4 or on execution of the StartScan command.
- **C2C1**: When an event occurs on C2C-Link Synchronization Tool 1 or on execution of the StartScan command.

- **C2C2**: When an event occurs on C2C-Link Synchronization Tool 2 or on execution of the StartScan command.
- **C2C3**: When an event occurs on C2C-Link Synchronization Tool 3 or on execution of the StartScan command.

EndOfScanTriggerSource

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LineScanAcquisitionControl	Enumeration	RW

Description

End-of-scan trigger conditions and trigger source.

Default value: **ScanLength**.

Enumeration Values

- **ScanLength**: ScanLength.
- **StopScan**: StopScan command.
- **LIN1**: When an event occurs on Line Input Tool 1 or on execution of the StopScan command.
- **LIN2**: When an event occurs on Line Input Tool 2 or on execution of the StopScan command.
- **LIN3**: When an event occurs on Line Input Tool 3 or on execution of the StopScan command.
- **LIN4**: When an event occurs on Line Input Tool 4 or on execution of the StopScan command.
- **LIN5**: When an event occurs on Line Input Tool 5 or on execution of the StopScan command.
- **LIN6**: When an event occurs on Line Input Tool 6 or on execution of the StopScan command.
- **LIN7**: When an event occurs on Line Input Tool 7 or on execution of the StopScan command.
- **LIN8**: When an event occurs on Line Input Tool 8 or on execution of the StopScan command.
- **QDC1**: When an event occurs on Quadrature Decoder Tool 1 or on execution of the StopScan command.
- **QDC2**: When an event occurs on Quadrature Decoder Tool 2 or on execution of the StopScan command.
- **QDC3**: When an event occurs on Quadrature Decoder Tool 3 or on execution of the StopScan command.
- **QDC4**: When an event occurs on Quadrature Decoder Tool 4 or on execution of the StopScan command.
- **MDV1**: When an event occurs on Multiplier/Divider Tool 1 or on execution of the StopScan command.
- **MDV2**: When an event occurs on Multiplier/Divider Tool 2 or on execution of the StopScan command.

- **MDV3**: When an event occurs on Multiplier/Divider Tool 3 or on execution of the StopScan command.
- **MDV4**: When an event occurs on Multiplier/Divider Tool 4 or on execution of the StopScan command.
- **DIV1**: When an event occurs on Divider Tool 1 or on execution of the StopScan command.
- **DIV2**: When an event occurs on Divider Tool 2 or on execution of the StopScan command.
- **DIV3**: When an event occurs on Divider Tool 3 or on execution of the StopScan command.
- **DIV4**: When an event occurs on Divider Tool 4 or on execution of the StopScan command.
- **DEL1_1**: When an event occurs on Delay Tool 1 Output 1 or on execution of the StopScan command.
- **DEL1_2**: When an event occurs on Delay Tool 1 Output 2 or on execution of the StopScan command.
- **DEL2_1**: When an event occurs on Delay Tool 2 Output 1 or on execution of the StopScan command.
- **DEL2_2**: When an event occurs on Delay Tool 2 Output 2 or on execution of the StopScan command.
- **DEL3_1**: When an event occurs on Delay Tool 3 Output 1 or on execution of the StopScan command.
- **DEL3_2**: When an event occurs on Delay Tool 3 Output 2 or on execution of the StopScan command.
- **DEL4_1**: When an event occurs on Delay Tool 4 Output 1 or on execution of the StopScan command.
- **DEL4_2**: When an event occurs on Delay Tool 4 Output 2 or on execution of the StopScan command.
- **EIN1**: When an event occurs on Event Input Tool 1 or on execution of the StopScan command.
- **EIN2**: When an event occurs on Event Input Tool 2 or on execution of the StopScan command.
- **UserEvent1**: When an event occurs on User Event 1 or on execution of the StopScan command.
- **UserEvent2**: When an event occurs on User Event 2 or on execution of the StopScan command.
- **UserEvent3**: When an event occurs on User Event 3 or on execution of the StopScan command.
- **UserEvent4**: When an event occurs on User Event 4 or on execution of the StopScan command.
- **C2C1**: When an event occurs on C2C-Link Synchronization Tool 1 or on execution of the StopScan command.

- **C2C2**: When an event occurs on C2C-Link Synchronization Tool 2 or on execution of the StopScan command.
- **C2C3**: When an event occurs on C2C-Link Synchronization Tool 3 or on execution of the StopScan command.

ScanLength

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LineScanAcquisitionControl	Integer	RW

Value Info

Minimum value: 1

Maximum value: 16777215

Unit: lines

Default value: 512

Description

Sets/gets the number of captured lines before stopping the scanning.



NOTE

Applies only when `EndOfScanTriggerSource` = `ScanLength`.

BufferHeight

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LineScanAcquisitionControl	Integer	RW

Value Info

Unit: lines

Short Description

Height of the image in line-scan mode. This feature is only used in line-scan acquisition scenarios to compute PayloadSize

StartScan

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LineScanAcquisitionControl	Command	RW

Short Description

Starts a scan.

StopScan

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LineScanAcquisitionControl	Command	RW

Short Description

Stops a scan.

5.8. StreamControl Category

StreamReset

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl	Command	RW

Short Description

Stream Reset.

DmaEngineOptimization

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl	Enumeration	RW

Short Description

Dma Engine Optimization.

Enumeration Values

- **Default:** DMA operations are optimized for low latency and maximum PCIe throughput.
- **LowMemoryUsage:** DMA operations are optimized for low memory usage; this may lead to higher latency and reduced PCIe throughput.

TriggerToCameraReadoutTimeout

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl	Integer	RW

Value Info

Minimum value: 0

Maximum value: 134217728

Short Description

Trigger To Camera Readout Timeout.

CameraReadoutTimeout

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl	Integer	RW

Value Info

Minimum value: 0

Maximum value: 134217728

Short Description

Camera Readout Timeout.

LineWidth

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl	Integer	RW

Value Info

Minimum value: 0

Short Description

Line width in bytes.

LinePitch

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl	Integer	RW

Value Info

Minimum value: 0

Short Description

Line pitch in bytes.

StripeHeight

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl	Integer	RW

Value Info

Minimum value: 0

Short Description

Stripe height in lines.

StripePitch

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl	Integer	RW

Value Info

Minimum value: 0

Short Description

Stripe pitch in lines.

BlockHeight

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl	Integer	RW

Value Info

Minimum value: 0

Short Description

Block height in lines.

StripeOffset

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl	Integer	RW

Value Info

Minimum value: 0

Short Description

Stripe offset in lines.

StripeArrangement

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl	Enumeration	RW

Short Description

The stripe arrangement defines how image data is arranged in user buffers.

Enumeration Values

- **Geometry_1X_1Y**: Regular (top-down) image.
- **Geometry_1X_1YE**: Vertically flipped (bottom-up) image.
- **Geometry_1X_2YE**: 2 taps arranged top-down and bottom-up.
- **Geometry_1X_2YM**: 2 taps arranged middle-up and middle-down.

SyncMarker

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl	Category	RW

Category Members

See also: "SyncMarker Category " on the next page

5.9. SyncMarker Category

SyncMarkerBusAddress

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl → SyncMarker	Integer	RW

Short Description

When a buffer is announced (with one of DSAnnounceBuffer, DSAllocAndAnnounceBuffer, or EuresysDSAnnounceBusBuffer), if SyncMarkerBusAddress is non-zero, the driver will setup DMA operations so that a 4-byte synchronization marker (value SyncMarkerValue) is written to PCIe address SyncMarkerBusAddress as soon as the DMA transfer is complete. Note that the value of SyncMarkerBusAddress is only used when the buffer is announced, while the value of SyncMarkerValue is used (and adjusted by SyncMarkerValueIncrement) each time the buffer is queued.

SyncMarkerValue

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl → SyncMarker	Integer	RW

Value Info

Minimum value: 0

Maximum value: 4294967295

Short Description

32-bit value of sync marker that will be written upon DMA transfer completion.

SyncMarkerValueIncrement

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamControl → SyncMarker	Integer	RW

Value Info

Minimum value: 0

Maximum value: 4294967295

Short Description

32-bit value that will be added to SyncMarkerValue each time a buffer is queued.

5.10. Errors Category

ErrorSelector

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → Errors	Enumeration	RW

Short Description

Error Selector.

Selected Features

- "ErrorCount" on page 477
- "ErrorCountReset" on page 478

Enumeration Values

- **All**: All errors.
- **StreamPacketSizeError**: Stream packet size error.
- **StreamPacketFifoOverflow**: Stream packet FIFO overflow.
- **CameraTriggerOverrun**: New trigger sent to remote device even though readout of previous frame has not started yet.
- **DidNotReceiveTriggerAck**: Trigger ignored because ACK to previous trigger has not been received yet.
- **TriggerPacketRetryError**: Trigger packet resend not successful.
- **InputStreamFifoHalfFull**: Input stream FIFO half full.
- **InputStreamFifoFull**: Input stream FIFO full.
- **ImageHeaderError**: Image header error.
- **MigAxiWriteError**: MIG AXI write error.
- **MigAxiReadError**: MIG AXI read error.
- **PacketWithUnexpectedTag**: Received a CXP packet with unexpected tag.
- **StreamPacketCrcError0**: Stream packet CRC error on connector A.
- **StreamPacketCrcError1**: Stream packet CRC error on connector B.
- **StreamPacketCrcError2**: Stream packet CRC error on connector C.

- **StreamPacketCrcError3**: Stream packet CRC error on connector D.
- **StreamPacketCrcError4**: Stream packet CRC error on connector E.
- **StreamPacketCrcError5**: Stream packet CRC error on connector F.
- **StreamPacketCrcError6**: Stream packet CRC error on connector G.
- **StreamPacketCrcError7**: Stream packet CRC error on connector H.
- **StartOfScanSkipped**: Start of scan skipped (caused by internal exception: frame store almost full).
- **PrematureEndOfScan**: End of scan (caused by internal exception: frame store almost full).
- **ExternalTriggerReqsTooClose**: External trigger requests too close together.
- **Unknown**: Unknown errors.

ErrorCount

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → Errors	IntReg	RO

Register Port: StreamPort

Short Description

Error Count.

ErrorCountReset

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → Errors	Command	Imposed: WO

Short Description

Reset the selected ErrorCount.

5.11. LUTControl Category

LUTConfiguration

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LUTControl	Enumeration	RW

Short Description

Configuration of the LUT processor.

Enumeration Values

- **M_8x8**: Monochrome 8-bit to 8-bit.
- **M_10x8**: Monochrome 10-bit to 8-bit.
- **M_10x10**: Monochrome 10-bit to 10-bit.
- **M_10x16**: Monochrome 10-bit to 16-bit.
- **M_12x8**: Monochrome 12-bit to 8-bit.
- **M_12x12**: Monochrome 12-bit to 12-bit.
- **M_12x16**: Monochrome 12-bit to 16-bit.

LUTLength

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LUTControl	IntReg	RO

Register Port: StreamPort

Short Description

Number of table entries in a LUT device.

LUTMaxValue

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LUTControl	IntReg	RO

Register Port: StreamPort

Short Description

Highest value of a table entry.

LUTSet

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LUTControl	Enumeration	RW

Short Description

LUT set to access.

Selected Features

- ["LUTValue" on page 485](#)

Enumeration Values

- **Set1**: Select LUT set 1 for access.
- **Set2**: Select LUT set 2 for access.
- **Set3**: Select LUT set 3 for access.
- **Set4**: Select LUT set 4 for access.
- **Set5**: Select LUT set 5 for access.
- **Set6**: Select LUT set 6 for access.
- **Set7**: Select LUT set 7 for access.
- **Set8**: Select LUT set 8 for access.
- **Set9**: Select LUT set 9 for access.
- **Set10**: Select LUT set 10 for access.
- **Set11**: Select LUT set 11 for access.
- **Set12**: Select LUT set 12 for access.
- **Set13**: Select LUT set 13 for access.
- **Set14**: Select LUT set 14 for access.
- **Set15**: Select LUT set 15 for access.
- **Set16**: Select LUT set 16 for access.

LUTIndex

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LUTControl	Integer	RW

Value Info

Minimum value: 0

Short Description

Index of the first entry to access.

Selected Features

- ["LUTValue" on the next page](#)

LUTValue

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LUTControl	StringReg	RW

Short Description

String of value(s) to read from- or to write to- the accessed LUT at location LUTIndex.

LUTReadBlockLength

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LUTControl	Integer	RW

Value Info

Minimum value: 1

Short Description

Number of consecutive table entries to read.

LUTEnable

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LUTControl	Enumeration	RW

Short Description

Enables the LUT processor with a specific LUT set..

Enumeration Values

- Off:
- Set1: Enables the LUT processor with LUT set 1.
- Set2: Enables the LUT processor with LUT set 2.
- Set3: Enables the LUT processor with LUT set 3.
- Set4: Enables the LUT processor with LUT set 4.
- Set5: Enables the LUT processor with LUT set 5.
- Set6: Enables the LUT processor with LUT set 6.
- Set7: Enables the LUT processor with LUT set 7.
- Set8: Enables the LUT processor with LUT set 8.
- Set9: Enables the LUT processor with LUT set 9.
- Set10: Enables the LUT processor with LUT set 10.
- Set11: Enables the LUT processor with LUT set 11.
- Set12: Enables the LUT processor with LUT set 12.
- Set13: Enables the LUT processor with LUT set 13.
- Set14: Enables the LUT processor with LUT set 14.
- Set15: Enables the LUT processor with LUT set 15.
- Set16: Enables the LUT processor with LUT set 16.

5.12. LinearFilter Category

LinearFilterControl

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LinearFilter	Enumeration	RW

Short Description

Linear Filter Control.

Enumeration Values

- **Disable**: Disable.
- **Enable**: Enable.

LinearFilterCoefficientA

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LinearFilter	Integer	RW

Value Info

Minimum value: 0

Maximum value: 512

Short Description

Linear filter coefficient A.

LinearFilterCoefficientB

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LinearFilter	Integer	RW

Value Info

Minimum value: 0

Maximum value: 512

Short Description

Linear filter coefficient B.

LinearFilterCoefficientC

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LinearFilter	Integer	RW

Value Info

Minimum value: 0

Maximum value: 512

Short Description

Linear filter coefficient C.

5.13. Threshold Category

ThresholdControl

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → Threshold	Enumeration	RW

Short Description

Threshold Control.

Enumeration Values

- **Disable**: Disable.
- **Enable**: Enable.

ThresholdLevel

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → Threshold	Integer	RW

Value Info

Minimum value: 0

Maximum value: 255

Short Description

Threshold level.

5.14. LaserLineExtractor Category

Scan3dExtractionMethod

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LaserLineExtractor	Enumeration	RW

Short Description

Scan3d Extraction Method.

Enumeration Values

- **Disable**: Disable extraction.
- **MaxDetection_8**: Maximum detection, 8-bit integer coordinates.
- **MaxDetection_16**: Maximum detection, 16-bit integer coordinates.
- **PeakDetection_11_5**: Peak detection, UQ11.5 fixed-point coordinates (fx11.16).
- **PeakDetection_8_8**: Peak detection, UQ8.8 fixed-point coordinates (fx8.16).
- **CenterOfGravity_11_5**: Center of gravity, UQ11.5 fixed-point coordinates (fx11.16).
- **CenterOfGravity_8_8**: Center of gravity, UQ8.8 fixed-point coordinates (fx8.16).

Scan3dOutputMode

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LaserLineExtractor	Enumeration	RW

Short Description

Scan3d Output Mode.

Enumeration Values

- **UncalibratedC:** Uncalibrated 2.5D Depth map.

Scan3dSecondLineROIOffsetY

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → LaserLineExtractor	Integer	RW

Value Info

Minimum value: 0

Maximum value: 65535

Short Description

Scan3d Second Line ROI Offset Y.

5.15. Bayer Category

BayerMethod

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → Bayer	Enumeration	RW

Short Description

Bayer Decoder method.

Enumeration Values

- **Disable**: Disable.
- **Legacy**: Legacy.
- **Advanced**: Advanced.

5.16. FlatFieldCorrection Category

FfcCoefficientPartitionBase

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → FlatFieldCorrection	Integer	Imposed: RO

Short Description

Base address of the flat field correction coefficient partition.

FfcCoefficientPartitionSize

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → FlatFieldCorrection	IntReg	RO

Register Port: StreamPort

Short Description

Flat field correction coefficient partition size in bytes.

FfcControl

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → FlatFieldCorrection	Enumeration	RW

Short Description

Ffc Control.

Enumeration Values

- **Disable**: Disable.
- **Enable**: Enable.

FfcBypass

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → FlatFieldCorrection	Enumeration	RW

Short Description

Ffc Bypass.

Enumeration Values

- **Disable**: Disable.
- **Enable**: Enable.

FfcCoefficientsValid

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → FlatFieldCorrection	Boolean	Imposed: RO

Short Description

Flat field correction coefficients are valid.

5.17. EventControl Category

EventSelector

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → EventControl	Enumeration	RW

Short Description

Select an event.

Selected Features

- ["EventNotification" on the next page](#)
- ["EventNotificationContext1" on page 511](#)
- ["EventNotificationContext2" on page 514](#)
- ["EventNotificationContext3" on page 517](#)
- ["EventCount" on page 520](#)
- ["EventCountReset" on page 521](#)

Enumeration Values

- **StartOfCameraReadout**: Starts acquiring data of a new image frame (area-scan only).
- **EndOfCameraReadout**: Stops acquiring data of an image frame (area-scan only).
- **StartOfScan**: Starts acquiring data of a new image scan (line-scan only).
- **EndOfScan**: Stops acquiring data of an image scan (line-scan only).
- **RejectedFrame**: Dropped image frame data (area-scan only).
- **RejectedScan**: Dropped image scan data (line-scan only).
- **TriggerToCameraReadoutTimeout**: Trigger to camera readout timeout.
- **CameraReadoutTimeout**: Camera readout timeout.
- **BrokenFrame**: Broken frame due to frame store overflow (area-scan only).

EventNotification

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → EventControl	Boolean	RW

Description

Activate or deactivate the notification to the host application of the occurrence of the selected event.

Default value: **True**.

EventNotificationContext1

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → EventControl	Enumeration	RW

Description

Select context information reported in EVENT_DATA_CUSTOM_CONTEXT_1 (context information value is latched when the event occurs).

Default value: **EventSpecific**.

Enumeration Values

- **EventSpecific**: Event-specific context information.
- **LineStatusAll**: Low 32-bit part of LineStatusAll.
- **LineStatusAllHi**: High 32-bit part of LineStatusAll.
- **QDC1Position**: Position of Quadrature Decoder Tool 1.
- **QDC2Position**: Position of Quadrature Decoder Tool 2.
- **QDC3Position**: Position of Quadrature Decoder Tool 3.
- **QDC4Position**: Position of Quadrature Decoder Tool 4.
- **PendingCicTriggerCount**: Number of currently pending CIC triggers.
- **LIN1EventCount**: Number of LIN1 events.
- **LIN2EventCount**: Number of LIN2 events.
- **LIN3EventCount**: Number of LIN3 events.
- **LIN4EventCount**: Number of LIN4 events.
- **LIN5EventCount**: Number of LIN5 events.
- **LIN6EventCount**: Number of LIN6 events.
- **LIN7EventCount**: Number of LIN7 events.
- **LIN8EventCount**: Number of LIN8 events.
- **QDC1EventCount**: Number of QDC1 events.
- **QDC1DirEventCount**: Number of QDC1Dir events.
- **QDC2EventCount**: Number of QDC2 events.
- **QDC2DirEventCount**: Number of QDC2Dir events.

- **QDC3EventCount**: Number of QDC3 events.
- **QDC3DirEventCount**: Number of QDC3Dir events.
- **QDC4EventCount**: Number of QDC4 events.
- **QDC4DirEventCount**: Number of QDC4Dir events.
- **DIV1EventCount**: Number of DIV1 events.
- **DIV2EventCount**: Number of DIV2 events.
- **DIV3EventCount**: Number of DIV3 events.
- **DIV4EventCount**: Number of DIV4 events.
- **MDV1EventCount**: Number of MDV1 events.
- **MDV2EventCount**: Number of MDV2 events.
- **MDV3EventCount**: Number of MDV3 events.
- **MDV4EventCount**: Number of MDV4 events.
- **DEL11EventCount**: Number of DEL11 events.
- **DEL12EventCount**: Number of DEL12 events.
- **DEL21EventCount**: Number of DEL21 events.
- **DEL22EventCount**: Number of DEL22 events.
- **DEL31EventCount**: Number of DEL31 events.
- **DEL32EventCount**: Number of DEL32 events.
- **DEL41EventCount**: Number of DEL41 events.
- **DEL42EventCount**: Number of DEL42 events.
- **UserEvent1EventCount**: Number of UserEvent1 events.
- **UserEvent2EventCount**: Number of UserEvent2 events.
- **UserEvent3EventCount**: Number of UserEvent3 events.
- **UserEvent4EventCount**: Number of UserEvent4 events.
- **C2C1EventCount**: Number of C2C1 events.
- **C2C2EventCount**: Number of C2C2 events.
- **C2C3EventCount**: Number of C2C3 events.
- **EIN1EventCount**: Number of EIN1 events.
- **EIN2EventCount**: Number of EIN2 events.
- **CrcErrorCxpAEventCount**: Number of CrcErrorCxpA events.
- **CrcErrorCxpBEventCount**: Number of CrcErrorCxpB events.
- **CrcErrorCxpCEventCount**: Number of CrcErrorCxpC events.
- **CrcErrorCxpDEventCount**: Number of CrcErrorCxpD events.

- **CrcErrorCxpEEventCount**: Number of CrcErrorCxpE events.
- **CrcErrorCxpFEventCount**: Number of CrcErrorCxpF events.
- **CrcErrorCxpGEventCount**: Number of CrcErrorCxpG events.
- **CrcErrorCxpHEventCount**: Number of CrcErrorCxpH events.
- **CameraTriggerRisingEdgeEventCount**: Number of CameraTriggerRisingEdge events.
- **CameraTriggerFallingEdgeEventCount**: Number of CameraTriggerFallingEdge events.
- **StrobeRisingEdgeEventCount**: Number of StrobeRisingEdge events.
- **StrobeFallingEdgeEventCount**: Number of StrobeFallingEdge events.
- **AllowNextCycleEventCount**: Number of AllowNextCycle events.
- **DiscardedCicTriggerEventCount**: Number of DiscardedCicTrigger events.
- **PendingCicTriggerEventCount**: Number of PendingCicTrigger events.
- **CxpTriggerAckEventCount**: Number of CxpTriggerAck events.
- **CxpTriggerResendEventCount**: Number of CxpTriggerResend events.
- **TriggerEventCount**: Number of Trigger events.
- **LinkTriggerEventCount**: Number of LinkTrigger events.
- **StartOfCameraReadoutEventCount**: Number of StartOfCameraReadout events.
- **EndOfCameraReadoutEventCount**: Number of EndOfCameraReadout events.
- **StartOfScanEventCount**: Number of StartOfScan events.
- **EndOfScanEventCount**: Number of EndOfScan events.
- **RejectedFrameEventCount**: Number of RejectedFrame events.
- **RejectedScanEventCount**: Number of RejectedScan events.
- **TriggerToCameraReadoutTimeoutEventCount**: Number of TriggerToCameraReadoutTimeout events.
- **CameraReadoutTimeoutEventCount**: Number of CameraReadoutTimeout events.
- **BrokenFrameEventCount**: Number of BrokenFrame events.

EventNotificationContext2

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → EventControl	Enumeration	RW

Short Description

Select context information reported in EVENT_DATA_CUSTOM_CONTEXT_2.

Enumeration Values

- **EventSpecific**: Event-specific context information.
- **LineStatusAll**: Low 32-bit part of LineStatusAll.
- **LineStatusAllHi**: High 32-bit part of LineStatusAll.
- **QDC1Position**: Position of Quadrature Decoder Tool 1.
- **QDC2Position**: Position of Quadrature Decoder Tool 2.
- **QDC3Position**: Position of Quadrature Decoder Tool 3.
- **QDC4Position**: Position of Quadrature Decoder Tool 4.
- **PendingCicTriggerCount**: Number of currently pending CIC triggers.
- **LIN1EventCount**: Number of LIN1 events.
- **LIN2EventCount**: Number of LIN2 events.
- **LIN3EventCount**: Number of LIN3 events.
- **LIN4EventCount**: Number of LIN4 events.
- **LIN5EventCount**: Number of LIN5 events.
- **LIN6EventCount**: Number of LIN6 events.
- **LIN7EventCount**: Number of LIN7 events.
- **LIN8EventCount**: Number of LIN8 events.
- **QDC1EventCount**: Number of QDC1 events.
- **QDC1DirEventCount**: Number of QDC1Dir events.
- **QDC2EventCount**: Number of QDC2 events.
- **QDC2DirEventCount**: Number of QDC2Dir events.
- **QDC3EventCount**: Number of QDC3 events.

- **QDC3DirEventCount**: Number of QDC3Dir events.
- **QDC4EventCount**: Number of QDC4 events.
- **QDC4DirEventCount**: Number of QDC4Dir events.
- **DIV1EventCount**: Number of DIV1 events.
- **DIV2EventCount**: Number of DIV2 events.
- **DIV3EventCount**: Number of DIV3 events.
- **DIV4EventCount**: Number of DIV4 events.
- **MDV1EventCount**: Number of MDV1 events.
- **MDV2EventCount**: Number of MDV2 events.
- **MDV3EventCount**: Number of MDV3 events.
- **MDV4EventCount**: Number of MDV4 events.
- **DEL11EventCount**: Number of DEL11 events.
- **DEL12EventCount**: Number of DEL12 events.
- **DEL21EventCount**: Number of DEL21 events.
- **DEL22EventCount**: Number of DEL22 events.
- **DEL31EventCount**: Number of DEL31 events.
- **DEL32EventCount**: Number of DEL32 events.
- **DEL41EventCount**: Number of DEL41 events.
- **DEL42EventCount**: Number of DEL42 events.
- **UserEvent1EventCount**: Number of UserEvent1 events.
- **UserEvent2EventCount**: Number of UserEvent2 events.
- **UserEvent3EventCount**: Number of UserEvent3 events.
- **UserEvent4EventCount**: Number of UserEvent4 events.
- **C2C1EventCount**: Number of C2C1 events.
- **C2C2EventCount**: Number of C2C2 events.
- **C2C3EventCount**: Number of C2C3 events.
- **EIN1EventCount**: Number of EIN1 events.
- **EIN2EventCount**: Number of EIN2 events.
- **CrcErrorCxpAEventCount**: Number of CrcErrorCxpA events.
- **CrcErrorCxpBEventCount**: Number of CrcErrorCxpB events.
- **CrcErrorCxpCEventCount**: Number of CrcErrorCxpC events.
- **CrcErrorCxpDEventCount**: Number of CrcErrorCxpD events.
- **CrcErrorCxpEEventCount**: Number of CrcErrorCxpE events.

- **CrcErrorCxpFEventCount**: Number of CrcErrorCxpF events.
- **CrcErrorCxpGEventCount**: Number of CrcErrorCxpG events.
- **CrcErrorCxpHEventCount**: Number of CrcErrorCxpH events.
- **CameraTriggerRisingEdgeEventCount**: Number of CameraTriggerRisingEdge events.
- **CameraTriggerFallingEdgeEventCount**: Number of CameraTriggerFallingEdge events.
- **StrobeRisingEdgeEventCount**: Number of StrobeRisingEdge events.
- **StrobeFallingEdgeEventCount**: Number of StrobeFallingEdge events.
- **AllowNextCycleEventCount**: Number of AllowNextCycle events.
- **DiscardedCicTriggerEventCount**: Number of DiscardedCicTrigger events.
- **PendingCicTriggerEventCount**: Number of PendingCicTrigger events.
- **CxpTriggerAckEventCount**: Number of CxpTriggerAck events.
- **CxpTriggerResendEventCount**: Number of CxpTriggerResend events.
- **TriggerEventCount**: Number of Trigger events.
- **LinkTriggerEventCount**: Number of LinkTrigger events.
- **StartOfCameraReadoutEventCount**: Number of StartOfCameraReadout events.
- **EndOfCameraReadoutEventCount**: Number of EndOfCameraReadout events.
- **StartOfScanEventCount**: Number of StartOfScan events.
- **EndOfScanEventCount**: Number of EndOfScan events.
- **RejectedFrameEventCount**: Number of RejectedFrame events.
- **RejectedScanEventCount**: Number of RejectedScan events.
- **TriggerToCameraReadoutTimeoutEventCount**: Number of TriggerToCameraReadoutTimeout events.
- **CameraReadoutTimeoutEventCount**: Number of CameraReadoutTimeout events.
- **BrokenFrameEventCount**: Number of BrokenFrame events.

EventNotificationContext3

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → EventControl	Enumeration	RW

Short Description

Select context information reported in EVENT_DATA_CUSTOM_CONTEXT_3.

Enumeration Values

- **EventSpecific**: Event-specific context information.
- **LineStatusAll**: Low 32-bit part of LineStatusAll.
- **LineStatusAllHi**: High 32-bit part of LineStatusAll.
- **QDC1Position**: Position of Quadrature Decoder Tool 1.
- **QDC2Position**: Position of Quadrature Decoder Tool 2.
- **QDC3Position**: Position of Quadrature Decoder Tool 3.
- **QDC4Position**: Position of Quadrature Decoder Tool 4.
- **PendingCicTriggerCount**: Number of currently pending CIC triggers.
- **LIN1EventCount**: Number of LIN1 events.
- **LIN2EventCount**: Number of LIN2 events.
- **LIN3EventCount**: Number of LIN3 events.
- **LIN4EventCount**: Number of LIN4 events.
- **LIN5EventCount**: Number of LIN5 events.
- **LIN6EventCount**: Number of LIN6 events.
- **LIN7EventCount**: Number of LIN7 events.
- **LIN8EventCount**: Number of LIN8 events.
- **QDC1EventCount**: Number of QDC1 events.
- **QDC1DirEventCount**: Number of QDC1Dir events.
- **QDC2EventCount**: Number of QDC2 events.
- **QDC2DirEventCount**: Number of QDC2Dir events.
- **QDC3EventCount**: Number of QDC3 events.

- **QDC3DirEventCount**: Number of QDC3Dir events.
- **QDC4EventCount**: Number of QDC4 events.
- **QDC4DirEventCount**: Number of QDC4Dir events.
- **DIV1EventCount**: Number of DIV1 events.
- **DIV2EventCount**: Number of DIV2 events.
- **DIV3EventCount**: Number of DIV3 events.
- **DIV4EventCount**: Number of DIV4 events.
- **MDV1EventCount**: Number of MDV1 events.
- **MDV2EventCount**: Number of MDV2 events.
- **MDV3EventCount**: Number of MDV3 events.
- **MDV4EventCount**: Number of MDV4 events.
- **DEL11EventCount**: Number of DEL11 events.
- **DEL12EventCount**: Number of DEL12 events.
- **DEL21EventCount**: Number of DEL21 events.
- **DEL22EventCount**: Number of DEL22 events.
- **DEL31EventCount**: Number of DEL31 events.
- **DEL32EventCount**: Number of DEL32 events.
- **DEL41EventCount**: Number of DEL41 events.
- **DEL42EventCount**: Number of DEL42 events.
- **UserEvent1EventCount**: Number of UserEvent1 events.
- **UserEvent2EventCount**: Number of UserEvent2 events.
- **UserEvent3EventCount**: Number of UserEvent3 events.
- **UserEvent4EventCount**: Number of UserEvent4 events.
- **C2C1EventCount**: Number of C2C1 events.
- **C2C2EventCount**: Number of C2C2 events.
- **C2C3EventCount**: Number of C2C3 events.
- **EIN1EventCount**: Number of EIN1 events.
- **EIN2EventCount**: Number of EIN2 events.
- **CrcErrorCxpAEventCount**: Number of CrcErrorCxpA events.
- **CrcErrorCxpBEventCount**: Number of CrcErrorCxpB events.
- **CrcErrorCxpCEventCount**: Number of CrcErrorCxpC events.
- **CrcErrorCxpDEventCount**: Number of CrcErrorCxpD events.
- **CrcErrorCxpEEventCount**: Number of CrcErrorCxpE events.

- **CrcErrorCxpFEventCount**: Number of CrcErrorCxpF events.
- **CrcErrorCxpGEventCount**: Number of CrcErrorCxpG events.
- **CrcErrorCxpHEventCount**: Number of CrcErrorCxpH events.
- **CameraTriggerRisingEdgeEventCount**: Number of CameraTriggerRisingEdge events.
- **CameraTriggerFallingEdgeEventCount**: Number of CameraTriggerFallingEdge events.
- **StrobeRisingEdgeEventCount**: Number of StrobeRisingEdge events.
- **StrobeFallingEdgeEventCount**: Number of StrobeFallingEdge events.
- **AllowNextCycleEventCount**: Number of AllowNextCycle events.
- **DiscardedCicTriggerEventCount**: Number of DiscardedCicTrigger events.
- **PendingCicTriggerEventCount**: Number of PendingCicTrigger events.
- **CxpTriggerAckEventCount**: Number of CxpTriggerAck events.
- **CxpTriggerResendEventCount**: Number of CxpTriggerResend events.
- **TriggerEventCount**: Number of Trigger events.
- **LinkTriggerEventCount**: Number of LinkTrigger events.
- **StartOfCameraReadoutEventCount**: Number of StartOfCameraReadout events.
- **EndOfCameraReadoutEventCount**: Number of EndOfCameraReadout events.
- **StartOfScanEventCount**: Number of StartOfScan events.
- **EndOfScanEventCount**: Number of EndOfScan events.
- **RejectedFrameEventCount**: Number of RejectedFrame events.
- **RejectedScanEventCount**: Number of RejectedScan events.
- **TriggerToCameraReadoutTimeoutEventCount**: Number of TriggerToCameraReadoutTimeout events.
- **CameraReadoutTimeoutEventCount**: Number of CameraReadoutTimeout events.
- **BrokenFrameEventCount**: Number of BrokenFrame events.

EventCount

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → EventControl	IntReg	RO

Register Port: StreamPort

Short Description

Number of occurrences of the selected event (32-bit counter).

EventCountReset

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → EventControl	Command	Imposed: WO

Short Description

Reset the selected EventCount.

EventNotificationAll

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → EventControl	Boolean	Imposed: WO

Short Description

Activate or deactivate the notification of all events.

EventCountResetAll

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → EventControl	Command	Imposed: WO

Short Description

Reset all EventCount.

5.18. StreamStatistics Category

StatisticsSamplingSelector

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamStatistics	Enumeration	RW

Description

Selects the stream statistics sampling method.

Default value: `LastSecond`.

Selected Features

- ["StatisticsFrameRate" on the next page](#)
- ["StatisticsLineRate" on page 527](#)
- ["StatisticsDataRate" on page 528](#)

Enumeration Values

- `LastSecond`: During the last second.
- `LastTenSeconds`: During the last 10 seconds.
- `Last2Buffers`: For the last 2 buffers.
- `Last10Buffers`: For the last 10 buffers.
- `Last100Buffers`: For the last 100 buffers.
- `Last1000Buffers`: For the last 1000 buffers.
- `LastAcquisition`: During the last acquisition activity period. Namely since the last `DSSStartAcquisition()` function call until now, if the acquisition is still active otherwise until the last `DSSStopAcquisition()` function call.
- `Custom`: Custom sampling using `StatisticsStartSampling` and `StatisticsStopSampling` commands.

StatisticsFrameRate

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamStatistics	FloatReg	RO

Register Port: StreamPort

Value Info

Unit: Fps (Frames per second)

Description

Average frame delivery rate using the selected sampling method.



NOTE
This feature is only available for area-scan firmware variants.



NOTE
The statistics measures the frame rate at the level of the PCI Express interface, NOT at the level of the CoaXPress interface!

StatisticsLineRate

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamStatistics	FloatReg	RO

Register Port: StreamPort

Value Info

Unit: Lps (Lines per second)

Description

Average line delivery rate using the selected sampling method.

**NOTE**

This feature is only available for line-scan firmware variants.

**NOTE**

The statistics measures the line rate at the level of the PCI Express interface, NOT at the level of the CoaXPress interface!

StatisticsDataRate

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamStatistics	FloatReg	RO

Register Port: StreamPort

Value Info

Unit: MBps (Megabytes per second)

Short Description

Get the average PCI data delivery rate using the selected sampling method.

StatisticsStartSampling

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamStatistics	Command	RW

Short Description

Start sampling the stream data. Applies only when StatisticsSamplingSelector = Custom.

StatisticsStopSampling

Feature Info

Module	Category Path	Type	Access
Data Stream	Root → StreamStatistics	Command	RW

Short Description

Stop sampling the stream data. Applies only when StatisticsSamplingSelector = Custom.